 



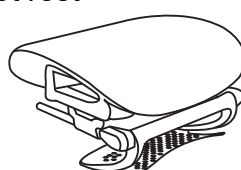 
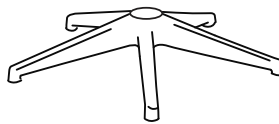 
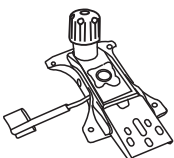 


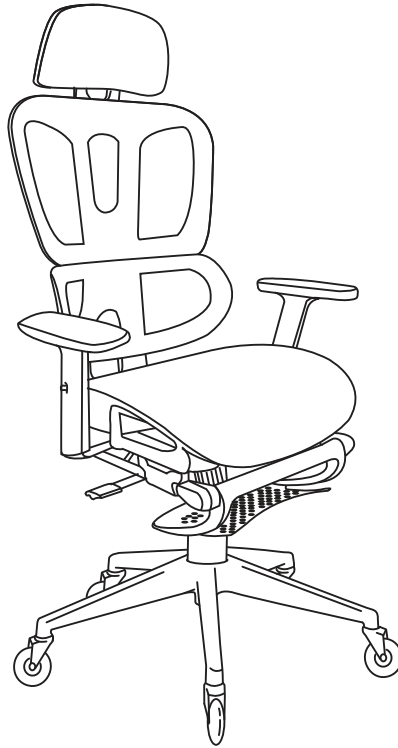



 


ASSEMBLY INSTRUCTIONS





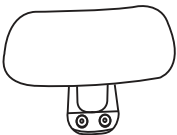


WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

 
MAIN PARTS LIST

A x1	Backrest 	B x1	Seat with retractable foot rest 	C x1	5-Leg star nylon base 	D x1	Multi-function Mechanism 		
E x1	Lift cylinder 	F x5	Rollerbade Caster 	G-L x1	Left armrest  (Front) <div>Sitting on the chair, not looking at it</div>	G-R x1	Right armrest  (Front) <div>Sitting on the chair, not looking at it</div>		
H x1	Lift cover, SET of 3 cones 	I x1	Support for backrest 	J x1	Headrest 	K x1	Backrest cover 	L x1	Headrest cover 

HARDWARE LIST

Part #	QTY	SIZE/Description	Item
M	9	M6x20	 0 10 20 30 40 50
N	6	M6x30	 0 10 20 30 40 50
O	3	M8x20	 0 10 20 30 40 50
P	6	Ø8.5, Ø17, 1mm Metal washer	 0 10 20 30 40 50
Q	2	Ø10, Ø23, 6mm Plastic washer	 0 10 20 30 40 50

INCLUDED TOOLS

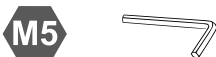M5 Allen Wrench	
-----------------	---

IMPORTANT NOTES

 
• Do not discard this manual or any of the packaging material until the unit is completely assembled.



• Read the assembly instructions thoroughly and follow them step by step.



• Do not overtighten or force the screws as they might break, strip, damage the threads of the holes, or get stuck inside the parts.

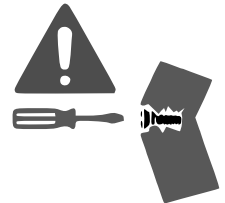

ASSEMBLY STEPS

STEP 1

Hardware



 
 
PLASTIC WASHERS
FOR INNERMOST
HOLES ONLY



Flip over the seat **B** and pull out the footrest to allow access to the side holes. Put the plastic washers **Q** over the **INNERMOST** holes, and assemble the armrests **G-L**, **G-R** in their respective sides with screws **N** and metal washers **P**.

PLEASE NOTE:

- The armrests lean forward towards the **FRONT** of the chair.
- The side (left or right) is defined with you sitting on the chair, not looking at it.

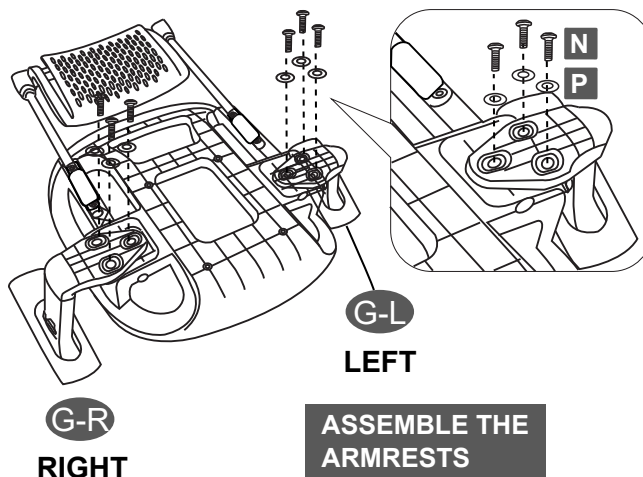 
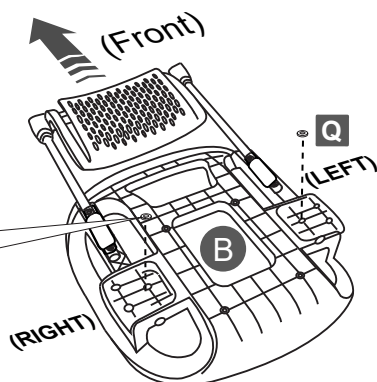 
**PULL OUT FOOTREST AND
PLACE PLASTIC WASHERS**

STEP 2

Hardware



Place the mechanism **D** with its tilt knob facing towards the **FRONT**, and assemble it with screws **M**.

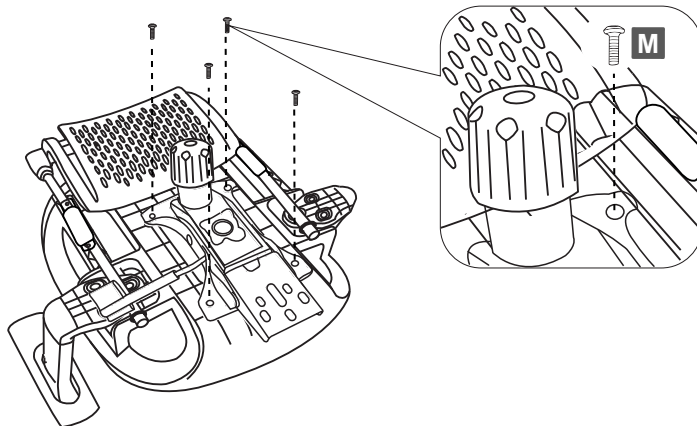 
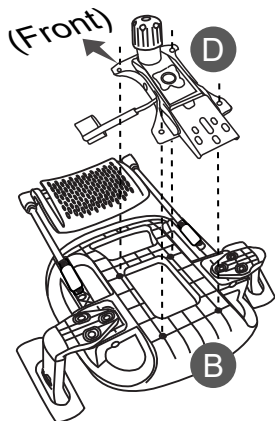 


STEP 3

Hardware

 


Assemble the support **I** under the plate of the mechanism **D** with screws **O**. The screws go through the plate and into the holes of **I**.

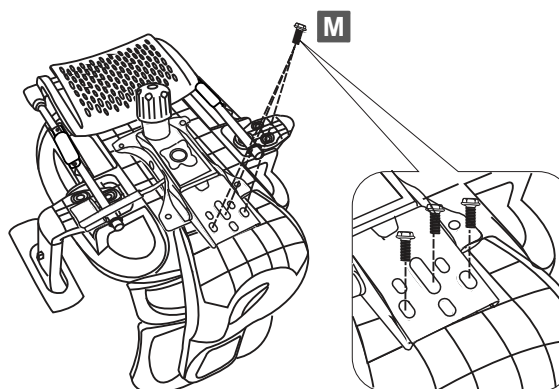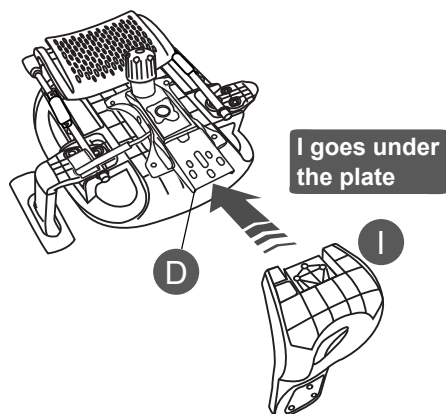

 
STEP 4

Insert the casters **F** into each leg of the base **C** using pressure, then place the lift cylinder **E** in the middle of the base and cover it with **H**.

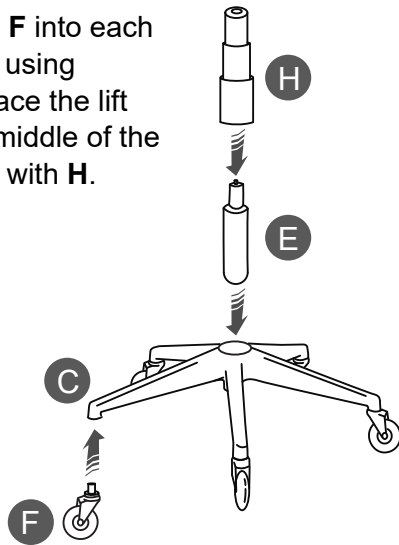

STEP 5

Join the base parts to the seat making sure the tip of the lift **E** enters correctly into the hole of the mechanism **D**.

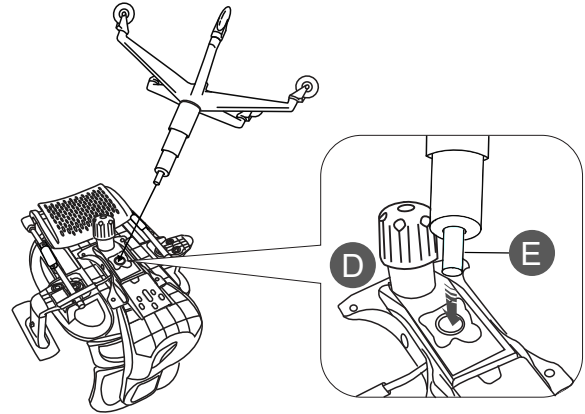

 
 
STEP 6

Hardware

M  3 Pcs
M6x20

M5 

Flip the unit upright and assemble the backrest **A** to the support **I** with screws **M**.

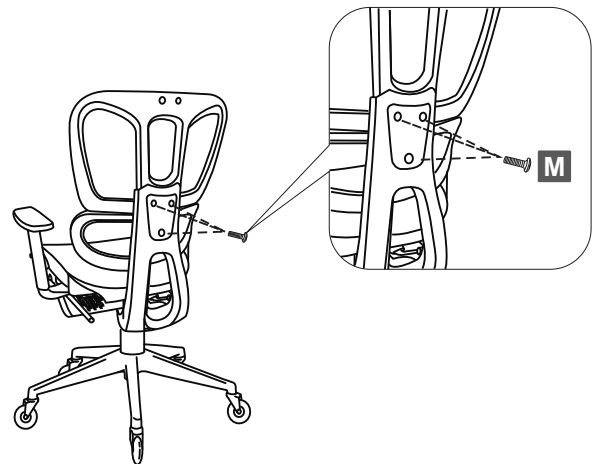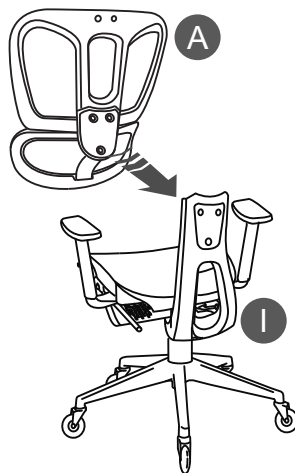

 
STEP 7

Hardware

M  2 Pcs
M6x20

M5 

Assemble the headrest **J** to the backrest **A** with screws **M**.

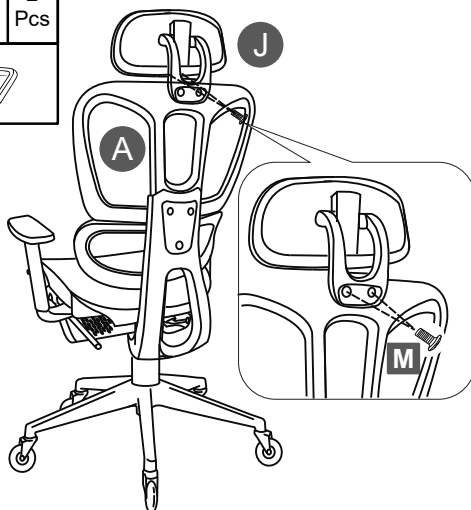

STEP 8

 
Attach the backrest cover **K** to the support **I** and the headrest cover **L** to the headrest **J**.



 
CHAIR'S FUNCTIONS

CHAIR HEIGHT:

 
Flip DOWN the handle on the lever that is under the seat on the right side. The chair goes down while sitting on it, or up if you lift your body.

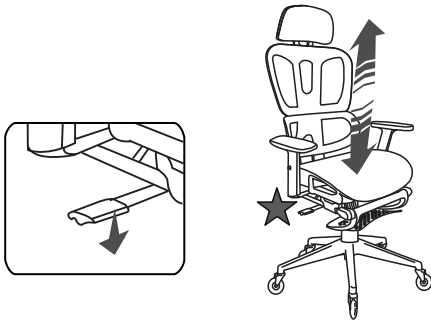**BACKREST RECLINING:**

Pull OUT the same lever to UNLOCK and make the backrest recline freely. Push IN to lock at any angle.

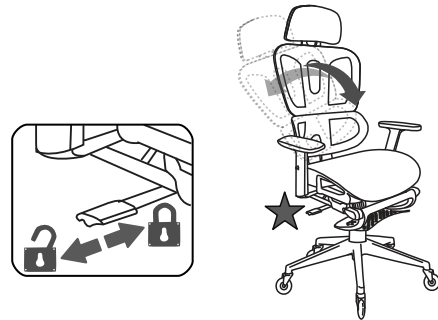**RECLINING TENSION:**

 
Turn the tension knob located at the front of the mechanism under the seat; turning CLOCKWISE will apply less tension, making the reclining feel easier, while turning COUNTERCLOCKWISE will apply more tension.

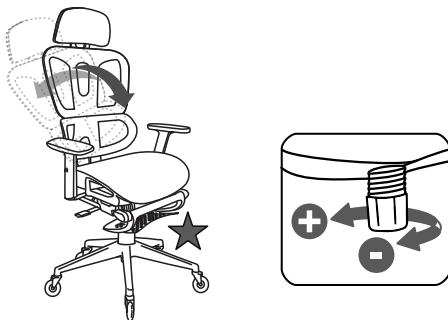**FOOTREST:**

 
Pull it out from under the seat and flip it UP.

WARNING: NEVER try to get up from the chair while the footrest is OUT.

 
To close it, flip it back DOWN and push it IN under the seat.

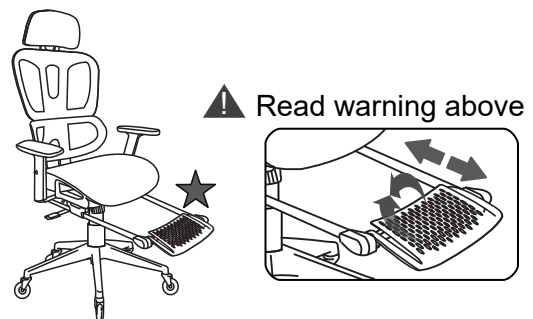**ARMRESTS HEIGHT:**

 
Press the button located on the outside of the armrest and release at the desired height.

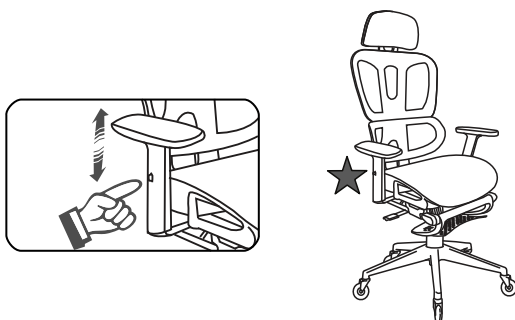**HEADREST ADJUSTMENTS:**

For your comfort, the headrest can be manually adjusted UP and DOWN or tilted forward/backwards.

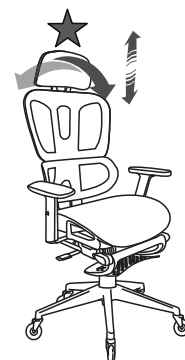

WARNINGS

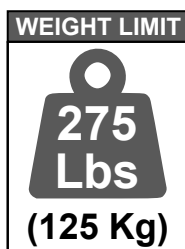

Do not exceed Max. weight limit as indicated above.



Refrain from sitting on the edge of the seat to prevent the chair from tipping over.



Only one person at a time.



Do not stand or use the chair as ladder.



Do not leave babies or toddlers unattended while seated on the chair, always ensure adult supervision. Keep children from playing with the chair for their safety.

 


Do not use the chair if parts are bent, damaged, or if screws are loose or missing.

Not paying attention to the above warnings could result in injuries.

CARE AND MAINTENANCE

 
Clean with a soft cloth lightly damped in a solution of smooth soap and water.

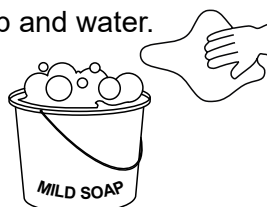

Do not use solvents or abrasive materials.



Do not expose to direct sunlight or to extreme environmental conditions.

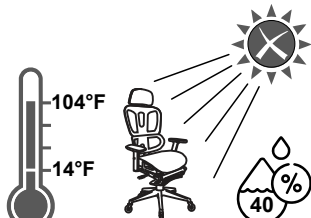

Inspect the chair thoroughly every 4 months and re-tighten the screws.

