
ASSEMBLY INSTRUCTIONS

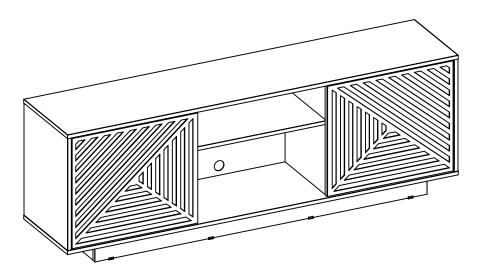


WARNING: To avoid serious personal injury:

- · Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tipover.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.


P.1 P.1

MAIN PARTS LIST

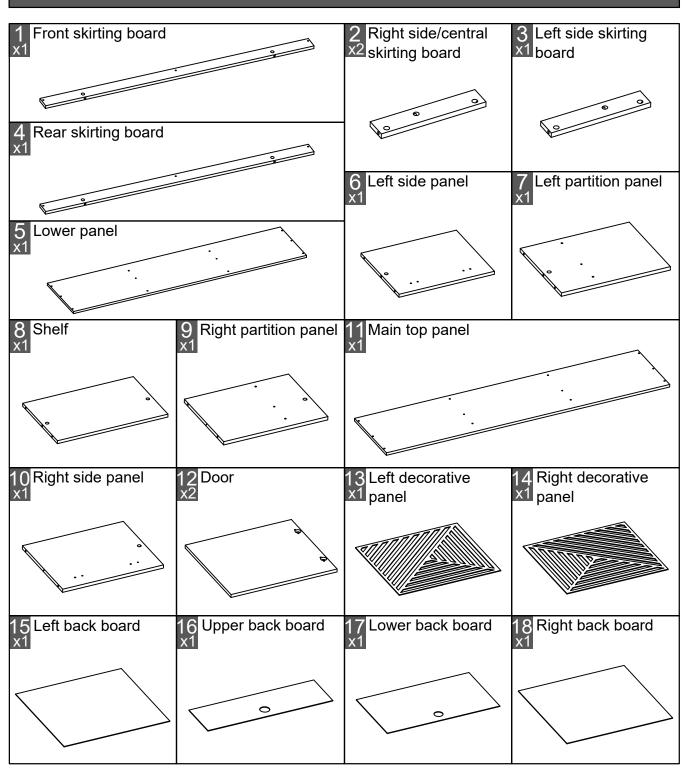

P.2 P.2

MAIN PARTS LAYOUT (For reference)

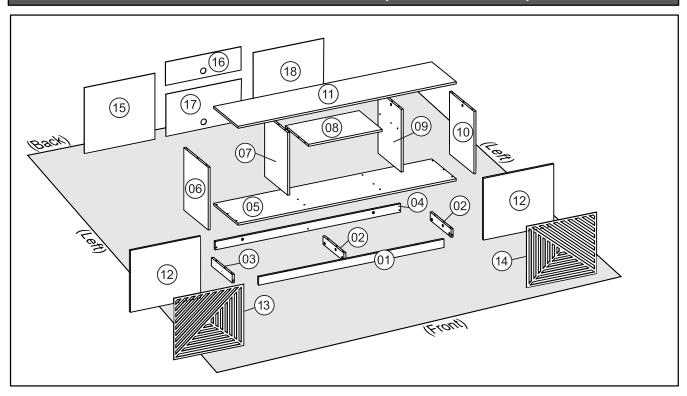

HARDWARE LIST AND INCLUDED TOOLS


PART	QTY	SIZE / DESCRIPTION	ITEM
Α	4	M4x50	▼ⅢⅢⅢⅢⅢⅢⅢ ⊕ 0 10 20 30 40 50 60
В	19	M6x32 Bolt	0 10 20 30 40 50 60
С	19	Cam lock	0 10 20 30 40 50 60
D	26	Ø6x30 Wooden Dowel	0 10 20 30 40 50 60
Е	8	Plastic glide foot	
F	4	Articulated hinge	
G	4	Fixed hinge	
Н	10	Square junction	°
I	16	M3.5x12	(10 20 30 40 50 60
J	60	10mm nail	0 10 20 30 40 50 60

PART	QTY	SIZE / DESCRIPTION	ITEM
K	40	100x10mm	~~~
		Double side tape	
L	2	Self-adhesive round sticker COLOR #1	Color #1
М	4	Self-adhesive round sticker COLOR #2	Color #2

TOOLS REQUIRED BUT NOT INCLUDED			
Phillips Screwdriver			
Hammer			

If you decide to use a power driver:

 - Make sure to have the appropriate Phillips bits.
- Start using at a low torque or speed to avoid stripping the screws.





P.3 P.3

BEFORE YOU START THE ASSEMBLY, PLEASE READ THE FOLLOWING TIPS AND WARNINGS.

- Do not discard this manual or any of the packaging material until the unit is completely assembled.
- Please read the assembly instructions throughly and follow step by step.








• The assembly might require of 2 persons for certain steps. Before you start the installation, make sure there is someone else nearby to help you.




 Make sure you understand which hardware will be used on each step. Using the wrong size of screw, bolt or pin might strip the threads or cause damage to the part in which it is being used.



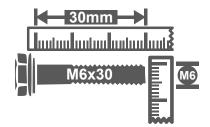


- To avoid misalignments, always leave the screws loosely and do not tighten them until all the pieces are positioned correctly.
- Do not overtighten or force the screws as they might break, strip, damage the threads of the holes, or get stuck inside the parts.

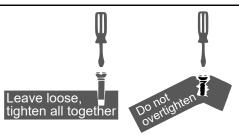

• If the hole seems to small for the screw, make sure you are using the correct size of screw and/or that you are installing it in the correct hole.



  Sometimes on the wood panels the laminate or material might be covering the hole partially or entirely, if there is no visible hole or if it looks too small, pass and press the tip of your finger over the area to feel its indentation, and carefully pierce the laminate to uncover the hole underneath.



 After the item is assembled, you can use rubbing alcohol to erase or remove the visible part numbers printed or labeled on the pieces.



 Please be kind to our planet, when done with the assembly, recycle any of the packaging materials that is accepted by your city or recycling service.





P.4

P.4

THE ASSEMBLY STEPS START ON NEXT PAGE


THE INSTRUCTIONS BELOW ARE NOT ACTUAL ASSEMBLY STEPS






This unit uses cam bolts and locks (also known as mini fixes). If you are not familiar with this kind of hardware, the below is a tutorial that explains how to use them on the steps where they are required.


1. Screw the bolt into the indicated hole on the panel indicated in the assembly step.

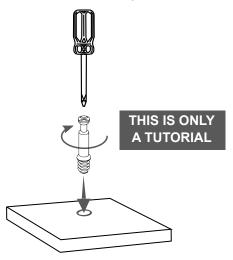


3. Insert the cam lock on the panel with the big hole making sure it goes aligned to receive the bolt's head.

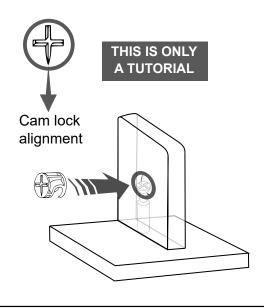

2. Join the other panel (with the big hole) to the panel with the bolt. If it comes with the cam locks already pre-installed, make sure to align them to receive the bolt's head (refer to point 3). There might be a very small gap between the panels which is normal.

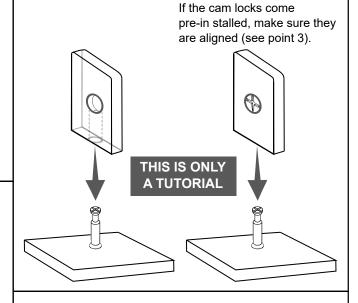


4. Use a Phillips screwdriver to turn the cam lock clockwise. This will lock the panels togheter and also will close any gaps.

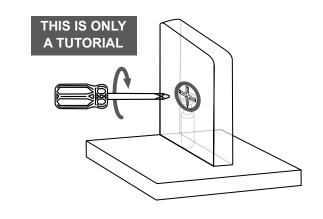


P.5 P.5

ASSEMBLY STEPS


WE RECOMMEND TO PLACE THE PIECES OVER BLANKETS TO PROTECT THEIR FINISH DURING ASSEMBLY.

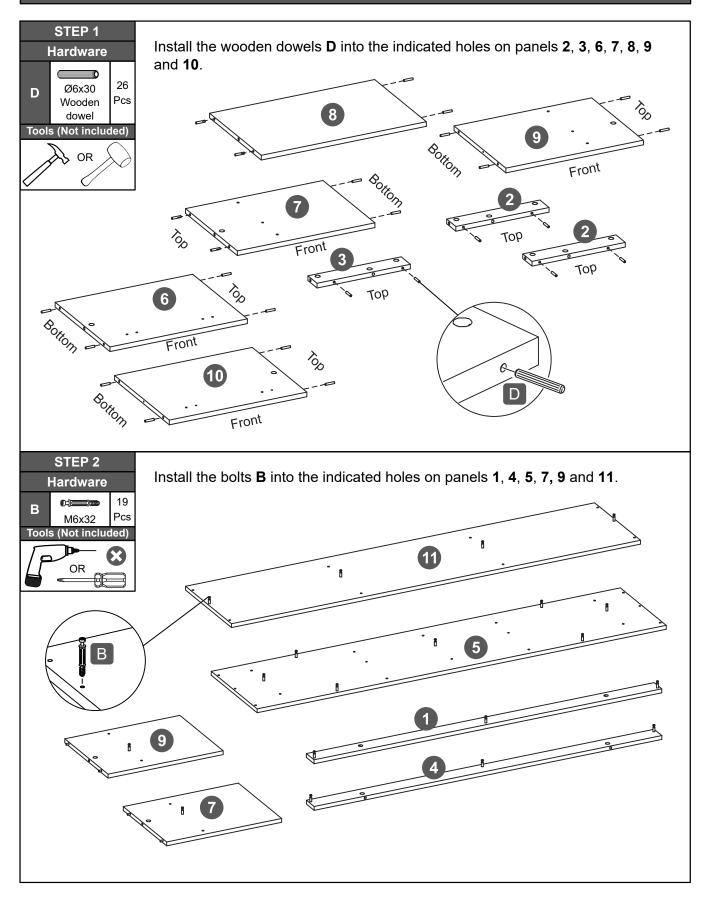

P.6 P.6

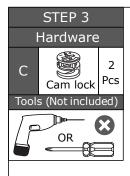


With the pieces placed oriented as shown, ensamble the partition panels 7 and 9 to the shelf 8 with cam locks C as explained in the **TUTORIAL PAGE**.

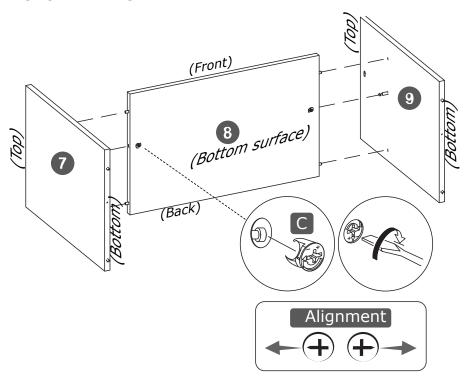





- FIRST place the main top panel **11** upside-down and over a large tablecloth or blanket to protect its finish, and identify its <u>front</u> edge.
- THEN assemble panels **7** and **9** from step **3** to panel **11** on the middle with cam locks **C**, with all the front edges oriented as shown.

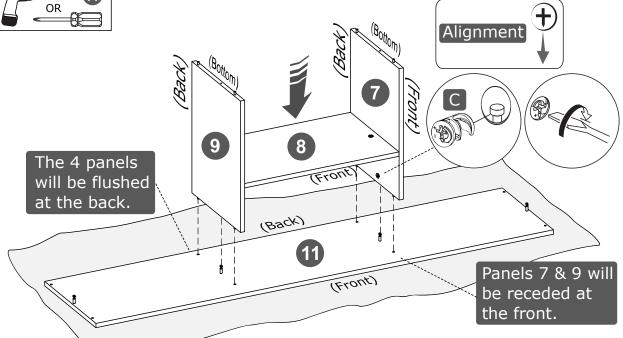

P.7 P.7

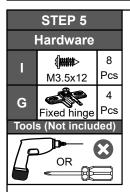


Pay attention to the orientation of the fixed hinges **G**, and attach them to the side panels **6** and **10** with screws **I**.

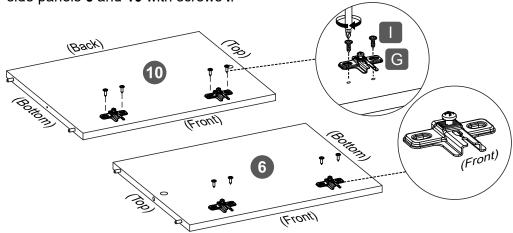


 STEP 6 Hardware






Assemble the side panels 6 and 10 to the top main panel 11 with cam locks C.

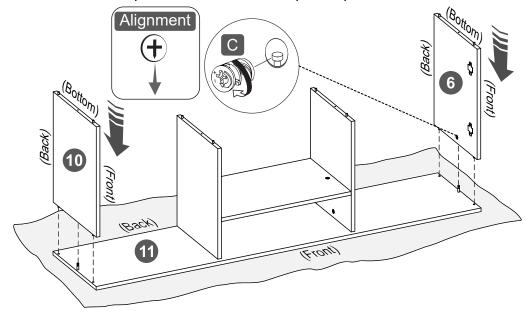


STEP 7


This step requires of 2 persons

  Hardware






With the help of another person, assemble the lower panel 5 to the panels 6, 7, 9 and 10 with screws A. Pay attention to the orientation of the panel, and when finished, all the panels will be flushed at the back, but panels 7 and 9 will be

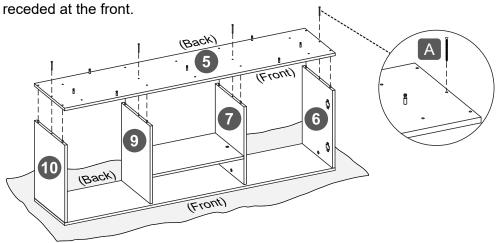

P.8 P.8

STEP 8 Hardware E Glide Pcs J R Pcs Tools (Not included) OR


On the indicated profile of the skirting boards **1** and **4** install 2 pieces of the glide feet **E** using nails **J** at approximately 2" from each end, then another 2 pieces **E** in the middle at equidistant length.

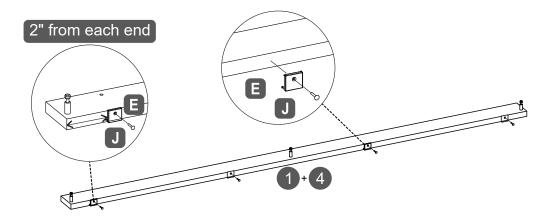

STEP 9 Hardware C Cam lock Pcs Tools (Not included)

OR

Assemble the skirting boards 2 and 3 in between the skirting boards 1 and 4 with cam locks C as shown.

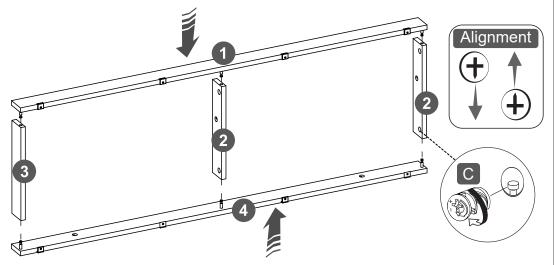








Hardware



 


With the help of another person, assemble the base structure built on step $\bf 9$ to the lower panel $\bf 5$ with cam locks $\bf C$.

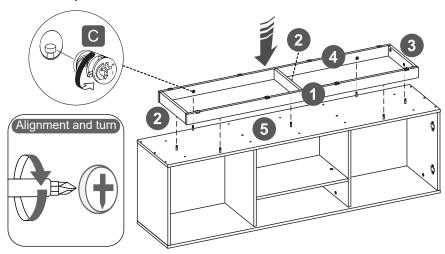

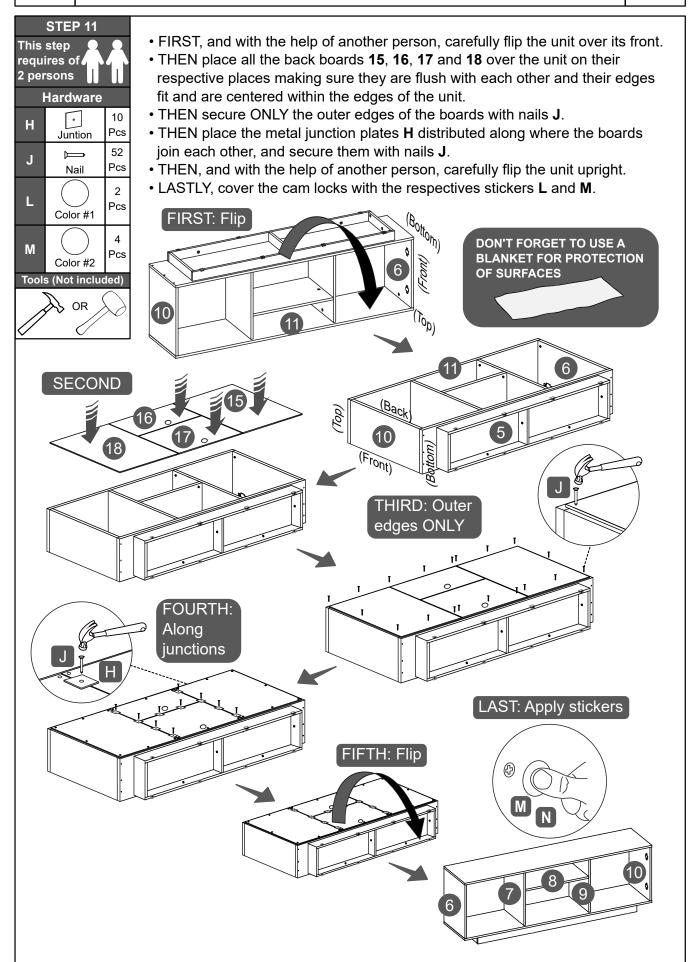


P.10 P.10

 


tape

 FIRST place the decorative panels 13 and 14 upside-down and carefully peeloff and attach to each of them 20 pieces of the double-sided tape K, but DO NOT PEEL OFF on the top side until ready to join with doors 12.

- THEN place the doors 12 with the big holes facing down, and side by side.
- THEN carefully peel-off the tapes from 13 and 14.
- LASTLY, and very carefully, slowly and steadily, place the ornament panels over the exterior surface of the doors **12**.

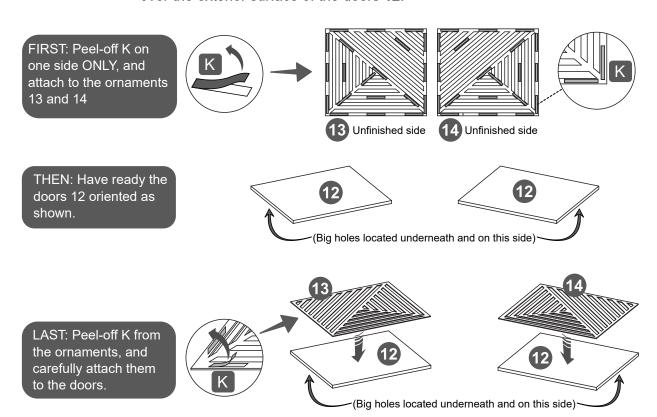

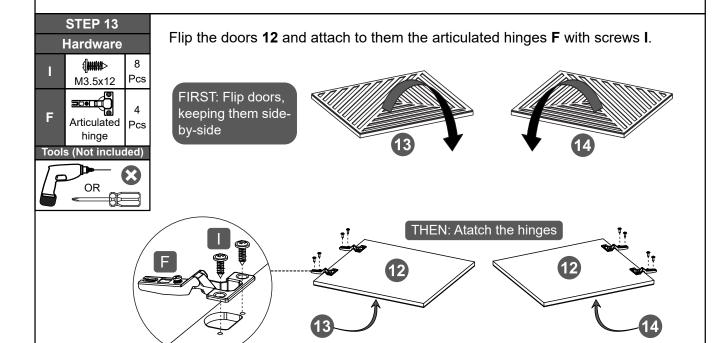

P.11 P.11


STEP 14 Tools (Not included)


OR

FIRST, inside the unit loosen up the middle screws on the fixed hinges G, and
on the doors 12 tighten the screw on the hinges F just a little bit to allow both
pieces of hinges to connect well one to another.


- THEN, install the doors **12** to the side panels **6** and **10** on the unit by connecting the articulated hinges **F** to the fixed hinges **G**, and tightening the screws on **G**.
- LASTLY, and to ensure that the doors will close smootly, adjust their alignment by loosening the indicated screws, aligning the door, then re-tighten the screws. You might have to play a little bit with the different adjustments.

FIRST: Adjust these screws

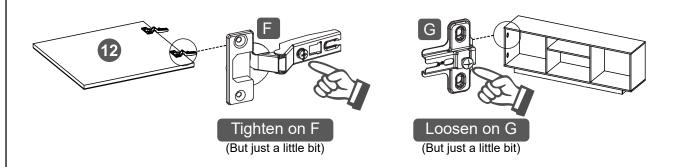


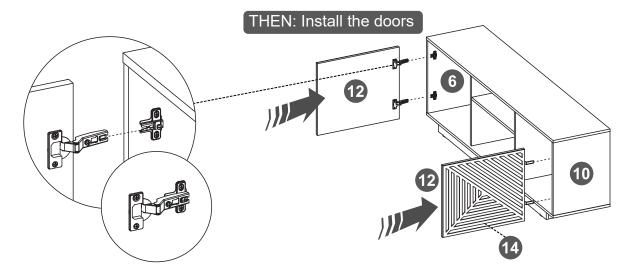


LAST: Adjust the doors

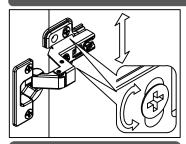

To adjust the height, loosen up these screws, align, then re-tighten

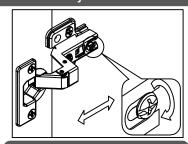


To adjust the depth, loosen up this screw, align, then retighten

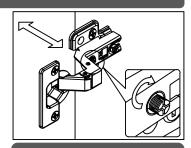


To adjust side-to-side, loosen up or tighten this screw.

P.12 P.12

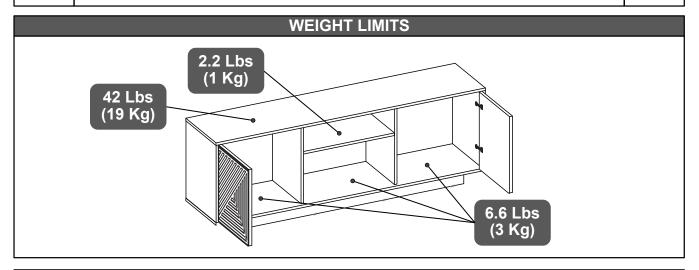

WARNINGS

• Always pay close attention to small children playing near the unit or when they are watching TV very close to it to prevent tip-over accidents.

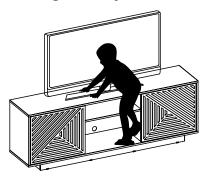



- · Do not exceed the indicated weight limits.
- Do not expose the surfaces to direct sunlight or to extreme environmental conditions.
- Do not use solvents or abrasive materials to clean the unit.
- Do not sit on the unit or lean against it.
- Do not allow small children to play over or inside the unit.
- Do not pull, push or drag the unit to move it for more than 1 feet. The unit must be lifted by at least 2 persons when moving in the same or adjacent rooms.
- Before moving the unit, secure or remove your TV and objects that are heavy or might fall off.
- When lifting the unit, use both hands and bend your knees, not your backs.
- Do not use the product if screws are loose or missing, or if you notice damaged parts.
- The warranty does not extend to regular wear and tear, nor the manufacturer assumes liability for damages or consequences due to accidents, incorrect assembly, negligence, improper use, modifications, or not heeding the above warnings.

CARE AND MAINTENANCE

- Clean the surfaces preferable with a clean cloth damped in a solution of mild soap and water, then dry with a clean towel.
- If you decide to use a cleaning agent, test first on an area hidden from view such as underneath the tabletop.
- Every 4 months, inspect the unit completely and make sure that all screws are tighten.
- When transporting the unit to places far away, protect and secure the unit to avoid damage in transit.