

 
ASSEMBLY INSTRUCTION

A Lock Washer




11 pcs

B Flat Washer




11pcs

 C Bolt 5/16"x2-1/2"



7 pcs

 D Bolt 5/16"x3-1/2"




4pcs

E Allen Wrench




1pc

F Chair Back

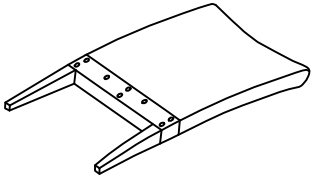

1 pc

 G Seat




1pc

H Front Leg



2pcs

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

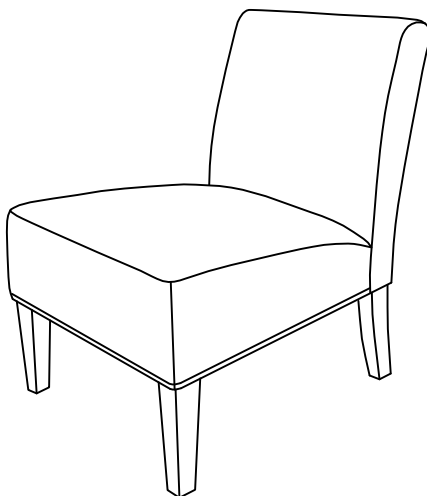


WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

LOUNGER CHAIR IN FABRIC (COW HIDE)


1

Put chair back (F) on a smooth flat surface, attached the seat (G) the chair back (F) use the bolt (D), lock washer (A), flat washer (B) in both of hole of seat (G) and chair back (F), turn the allen wrench (E) in bolt (D). But not too tight.

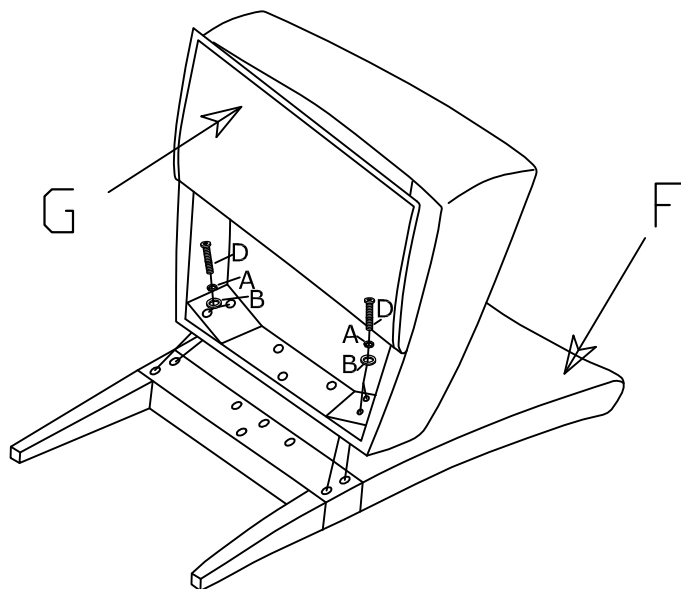

2


Use the bolt (C), lock washer (A), flat washer (B) in both of hole of seat (G) and chair back (F), turn the allen wrench (E) to tighten the bolt (C).

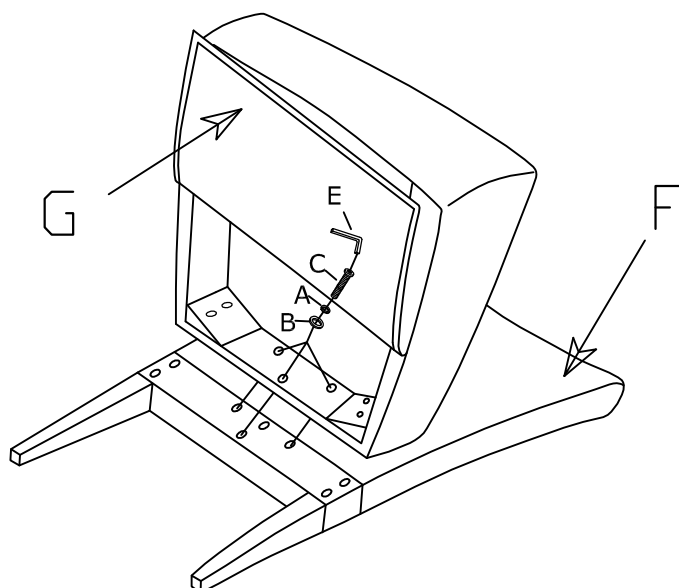

LOUNGER CHAIR IN FABRIC (COW HIDE)

3

Put the seat (G) on a smooth flat surface, attached one front leg (H) to the seat (G) use bolt (C), lock washer (A) and flat washer (B) on both of hole of seat, Turn the allen wrench (E) in bolt (C). But not too tight.

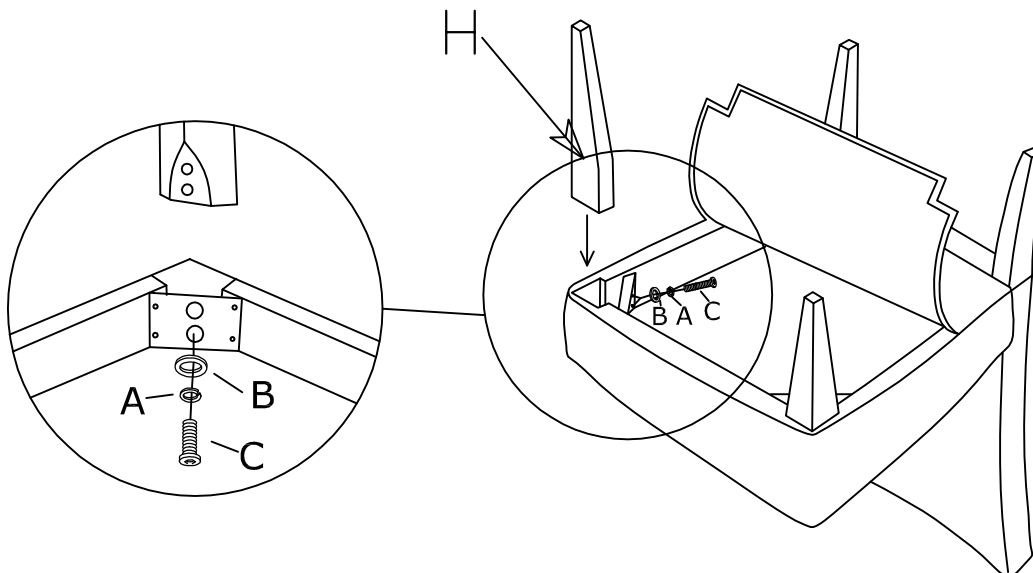

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.