


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small
 parts and hardware that may present a choking hazard to small children.
 Bob's furniture should be assembled only by responsible adults and children
 should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

ASSEMBLY INSTRUCTION

530SW3-24 24" SWIVEL COUNTER HEIGHT CHAIR WITH SQUARE SEAT 530SW3-29 DOUBLE X BACK 29"H SWIVEL CHAIR C Stretcher A Backrest B Cushion Seat D Ε Stretcher Apron with (Front & Back) (Left & Right) Swivel Plate h 1 small small big big 1 PC 1 PC 1 PC 2 PCS 2 PCS F Chair Leg G Chair Leg (Hole) Н J **CBS Screw** JCBC Screw JCBC Screw M6 x 40mm (No Hole) M4 x 38mm M6 x 25mm _____(o) Hole No Hole 2 PCS 8 PCS 4 PCS 2 PCS 10 PCS K JCBC Screw L Μ Ν Flat Washer Spring Washer Allen Key M6 x 70mm M6 x 13mm M6.5 x 16.5mm M4 0 14 PCS 1 PC 4 PCS 18 PCS



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Attach the 2 Pcs Chair Leg (Hole) (G) oppositely to the Apron with Swivel Plate (E), using JCBC Screw (J), Spring Washer (M), Flat Washer (L) with Allen Key (N).
Do not fully tighten the screws at this step. Fully tighten the screws after step 3 and 4. While assemble, must facing toward arrow.

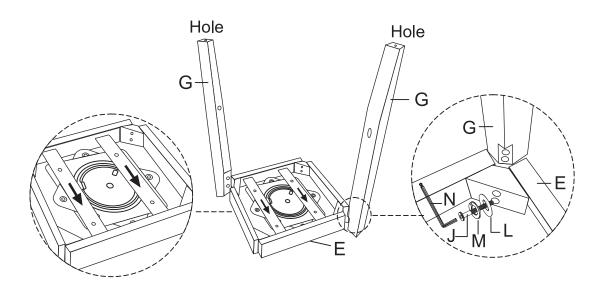


FACING FRONT TOWARD ARROW

Take the Allen Key, and turn the screw until the legs are secured. **DO NOT TIGHTEN COMPLETELY.**

Stop when you feel you are adding force to tighten the screw.


2 Attach the 2 Pcs Chair Leg (No Hole) (F) to the Apron with Swivel Plate (E), using JCBC Screw (J), Spring Washer (M), Flat Washer (L) with Allen Key (N).

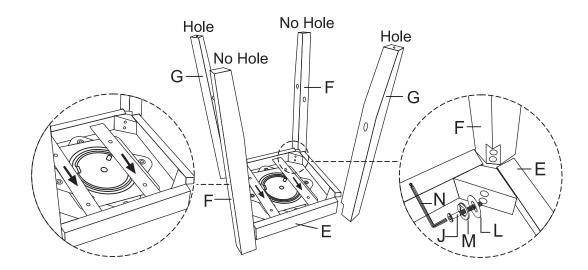

FACING FRONT TOWARD ARROW


Then attach the Stretcher (Front & Back) (C) to the big hole on the Chair Leg (F) & (G) with CBS Screw (H).

At Step 3 and 4, align mounting position of the stretcher (C) & (D) to the Chair Leg (F) & (G). At this moment, DO NOT use the CBS Screw (H) to tighten first. You only can **FULLY TIGHTEN AFTER YOU HAVE FULLY TIGHTEN THE SCREWS AT STEP 1 AND 2.**

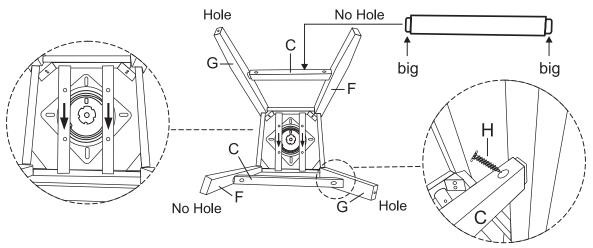

FACING FRONT TOWARD ARROW


Then attach the Stretcher (Left & Right) (D) to the small hole on the Chair Leg (F) & (G) with CBS Screw (H).

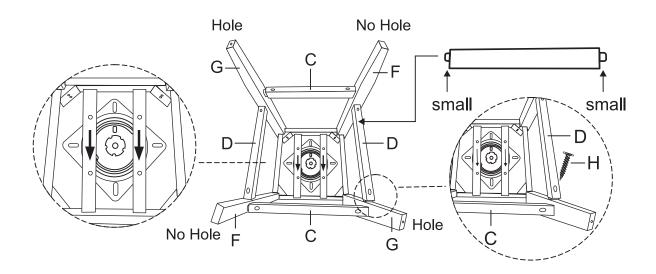


FACING FRONT TOWARD ARROW

5 Invert Cushion Seat (B) and place on a stable raised surface (i.e. Table). Attach the Backrest (A) to the Cushion Seat (B), using JCBC Screw (K), Spring Washer (M), Flat Washer (L) with Allen Key (N).

Then, affix the center JCBC Screw (J), Spring Washer (M), Flat Washer (L) with Allen Key (N).

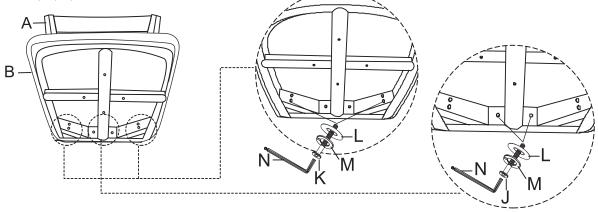

6 Keep the Backrest (A) and Cushion Seat (B) inverting on a stable raised surface. Attach the Swivel Plate located on the Apron with Swivel Plate (E) to the Cushion Seat (B) using JCBC Screw (I), Flat Washer (L) with Allen Key (N). Turn the Chair right side up. Stand chair up on an even

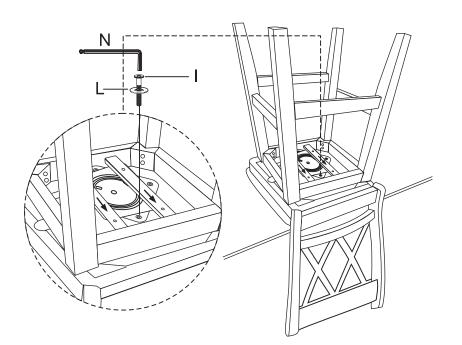

surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Helpful Tip:

Instead of applying downward pressure while reaching under to tighten bolts, have someone sit on the chair while you tighten the bolts.

FACING FRONT TOWARD ARROW

ENSURE THAT ALL SCREWS ARE FULLY DRIVE IN AND TIGHTEN BEFORE READY TO USE.

CLEANING & CARE

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.