

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children.
 Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

ASSEMBLY INSTRUCTION





This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Attach Wood Dowel (I) to Shelf (A) and Bottom (B), then attach Shelf (A) and Bottom (B) to the Side Panel (C) using Bolt (E), Lock Washer (F), and Flat Washer (G) with Allen Key (H).



2 Attach Wood Dowel (I) to Shelf (A), Bottom (B), and Side Panel (C), then attach Back Panel (D) to Shelf (A), Bottom (B), and Side Panel (C) using Bolt (E), Lock Washer (F), and Flat Washer (G) with Allen Key (H). Attach Leveler (J) to the Bottom (B). Turn left or turn right to adjust Leveler (J) until the bookcase is stabilized.



3 Attach Anti-Tipping Kit (K) to the wall: Attach the bracket (horizontally) to the wall using the screw provided. Attach the bracket (horizontally) to the back of the bookcase with the screw provided. Place the bracket as close to the left & right of the back of the bookcase as possible in relation to the wall stud and the desired position in the room. Move the bookcase to its final position. Thread the strap through each bracket and pull it tight.



Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.