

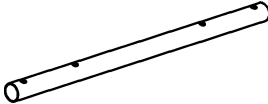


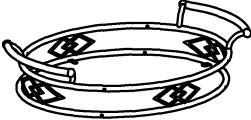








ASSEMBLY INSTRUCTION

KITCHEN CART

A Top frame	B Bottom ring	C Leg	D Glass
			
1 pc	1 pc	4 pcs	2 pcs
E Suction cup	F Allen wrench	G Open end wrench	H Bolt
			
8 pcs	1 pc	1 pc	16 pcs
I Washer	J Wheel	K Finial	
			
4 pcs	4pcs	4 pcs	

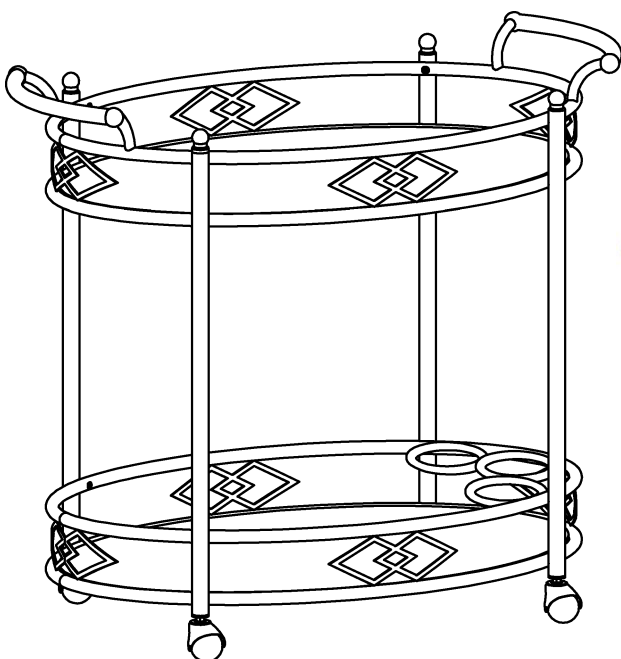


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.




WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

- 1 Assemble top frame (A) and bottom ring (B) to leg (C) with bolt (H) as shown in drawing and tighten with the Allen wrench (F).

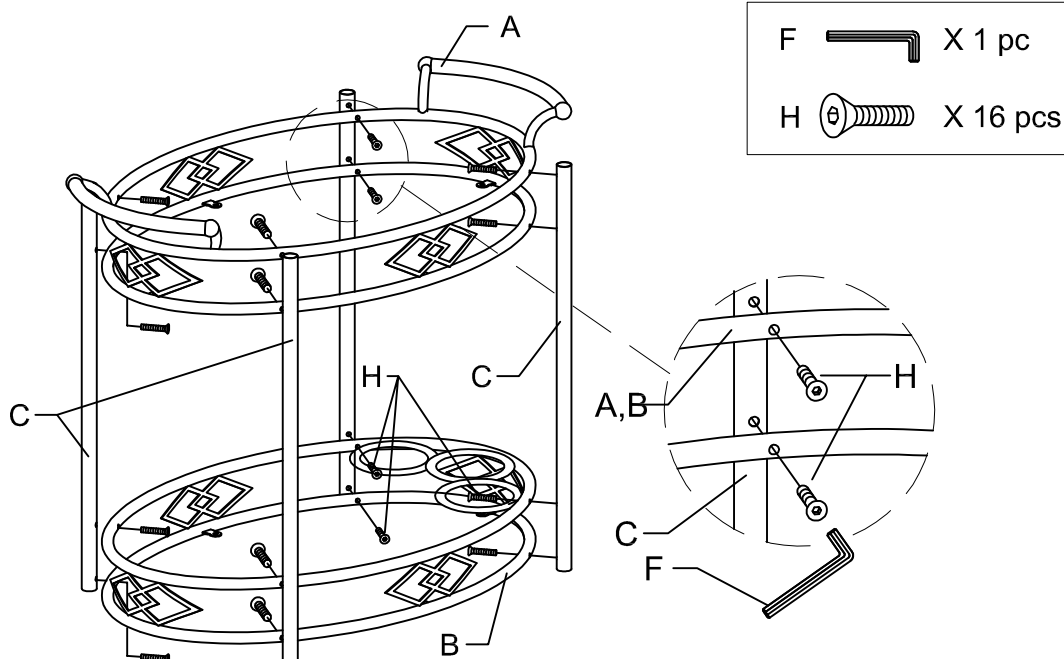


- 2 Install finial (K) on the tube end of leg (C) as shown in drawing and put suction cups (E) into the ear tabs of top frame (A) and bottom ring (B). Then Install wheel (J) into the tube end of leg (C) with washer (I) and tighten it up by use of open end wrench (G).

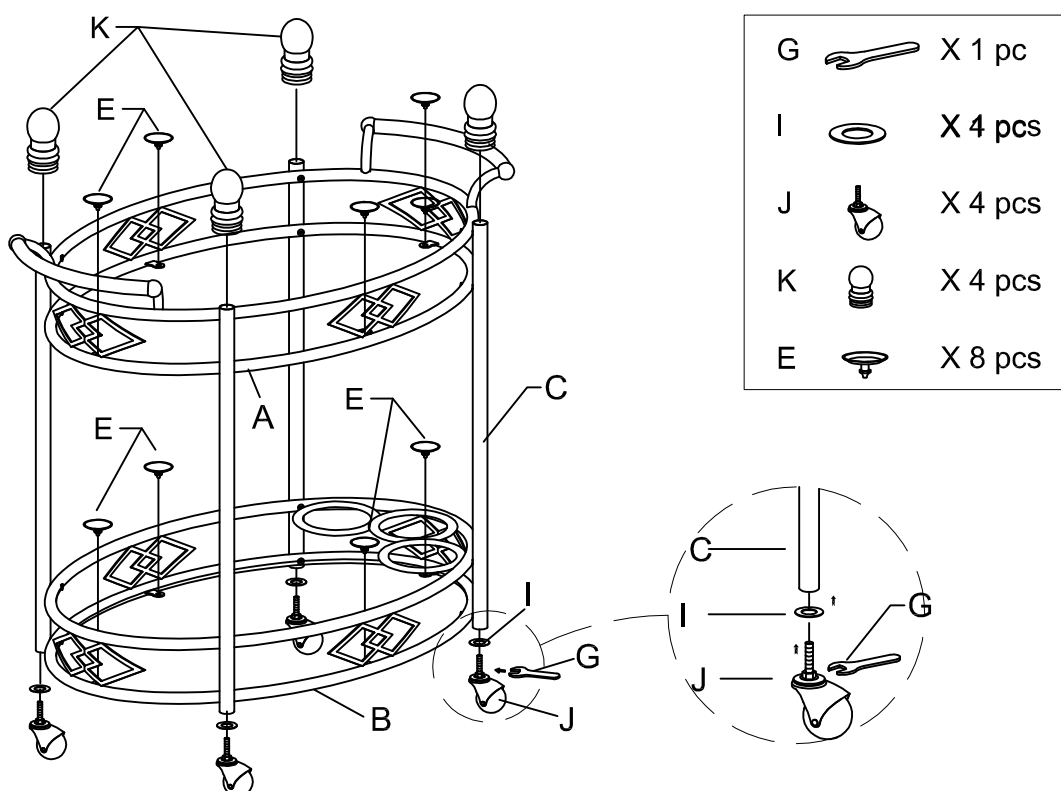

3

Place glass (D) on top frame (A) and bottom ring (B) respectively.

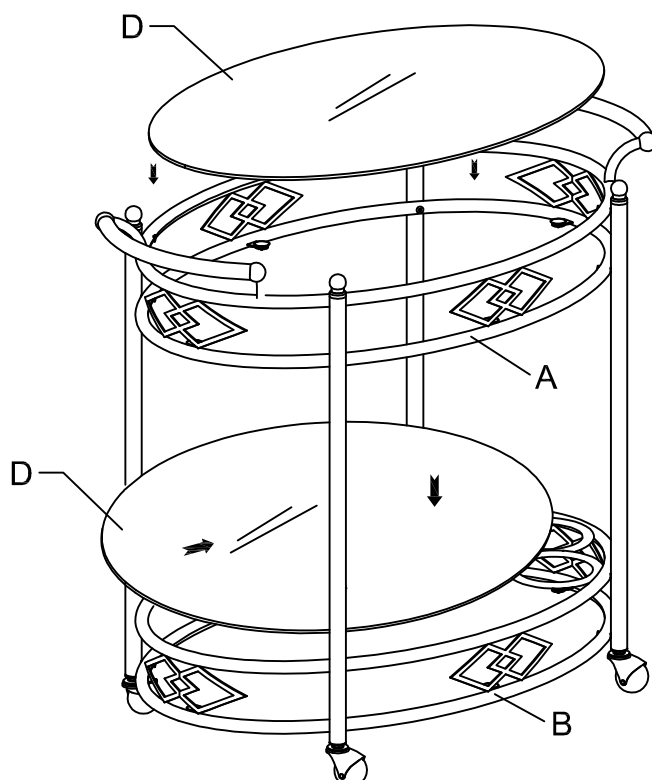

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.