

## ASSEMBLY INSTRUCTIONS FOR


## **NIGHTSTAND WITH USB**

Cautions: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in parking.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton druring shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST						
No.	Part Description	Description Code.				
A	NIGHTSTAND WITH USB		1			
В	CASEGOOD'S FRONT LEG	CFLEG	2			
С	CASEGOOD'S BACK LEFT LEG	CBLGL	1			
D	CASEGOOD'S BACK RIGHT LEG	CBLGR	1			

HARDWARE LIST								
No.		Code.	Q'ty					
1	0	Flat washer (Ø1/4" x 5/8")	LGHW	8				
2	ð	Spring washer (Ø1/4" x 3/8")		8				
3	() <b>))))))))</b>	Bolt (Ø1/4" x 2 1/2")		8				
4		Allen key (4 x 59mm)		1				
5		Power Strip-USB	PUSB	1				

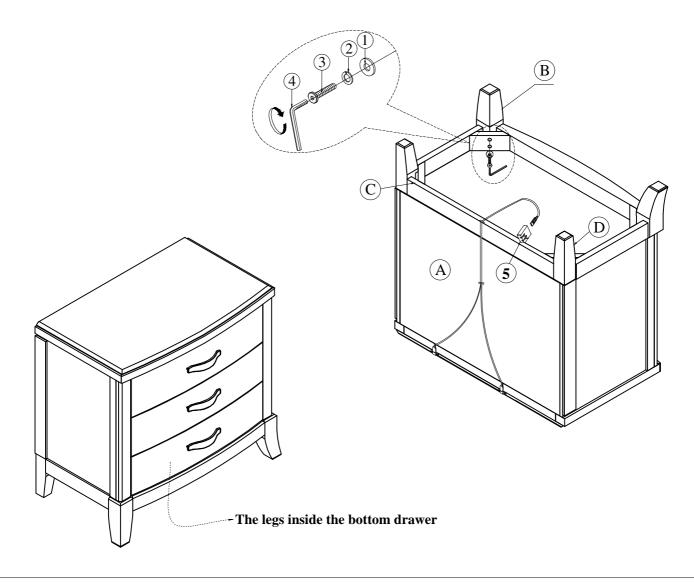



## MARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.