 
BOB'S FURNITURE


ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION ELEVATIONS 60" CONSOLE DARK CHARCOAL FINISH

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


Parts key							
No	Code	Qty	Description	No	Code	Qty	Description
1	1852-60BDFP07	2 pcs	Sliding Door	4	1852-60BDFP08	3 pcs	Shelf
2	1852P04BDF	2 sets	Pull w/Screws	5	1852P01FBDF	4 pcs	Floor Glide
3	1852P07SBDF	4 sets	Sliding Wheel & Lock w/Screws - 2 pcs	6	1852P01LBDF	1 pc	Floor Leveler




 
TO REACTIVATE DOOR PIN, PRESS THE BUTTON WHEN IN THE BOTTOM POSITION




TO RELEASE DOOR PIN, MOVE THE BUTTON TO THE BOTTOM POSITION

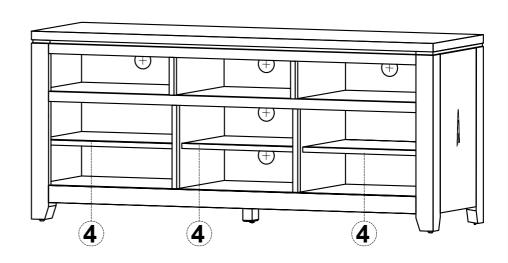

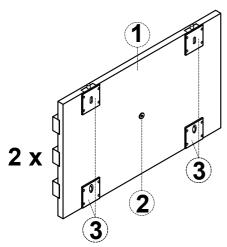

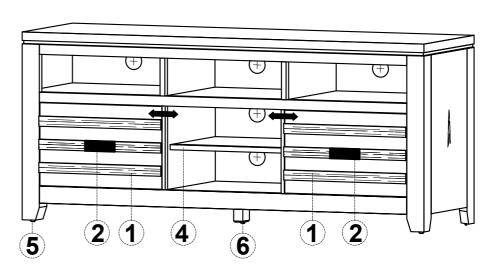



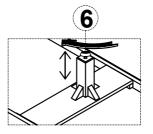

WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small
 parts and hardware that may present a choking hazard to small children.
 Bob's furniture should be assembled only by responsible adults and children
 should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as
 prescribed in these instructions to anchor furniture to wall. Proper use of the
 wall mounting hardware can significantly reduce the potential for furniture
 tip-over and crushing injuries.