 
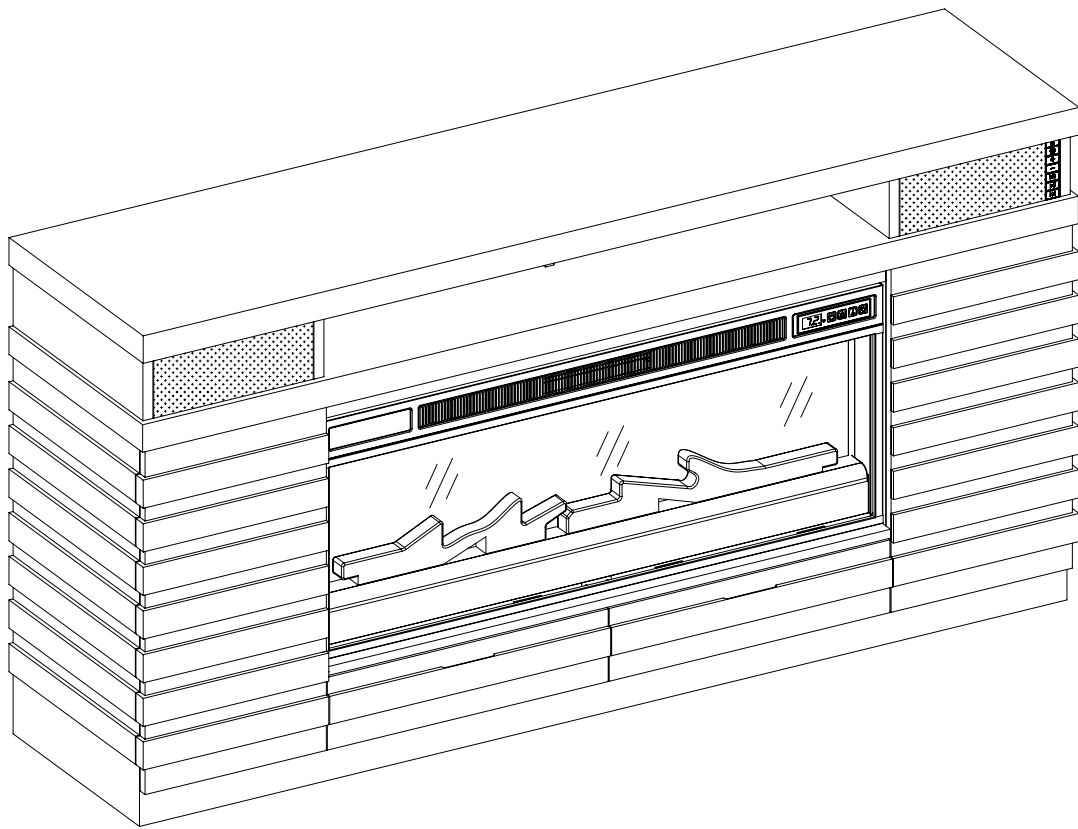 


BOB'S DISCOUNT FURNITURE

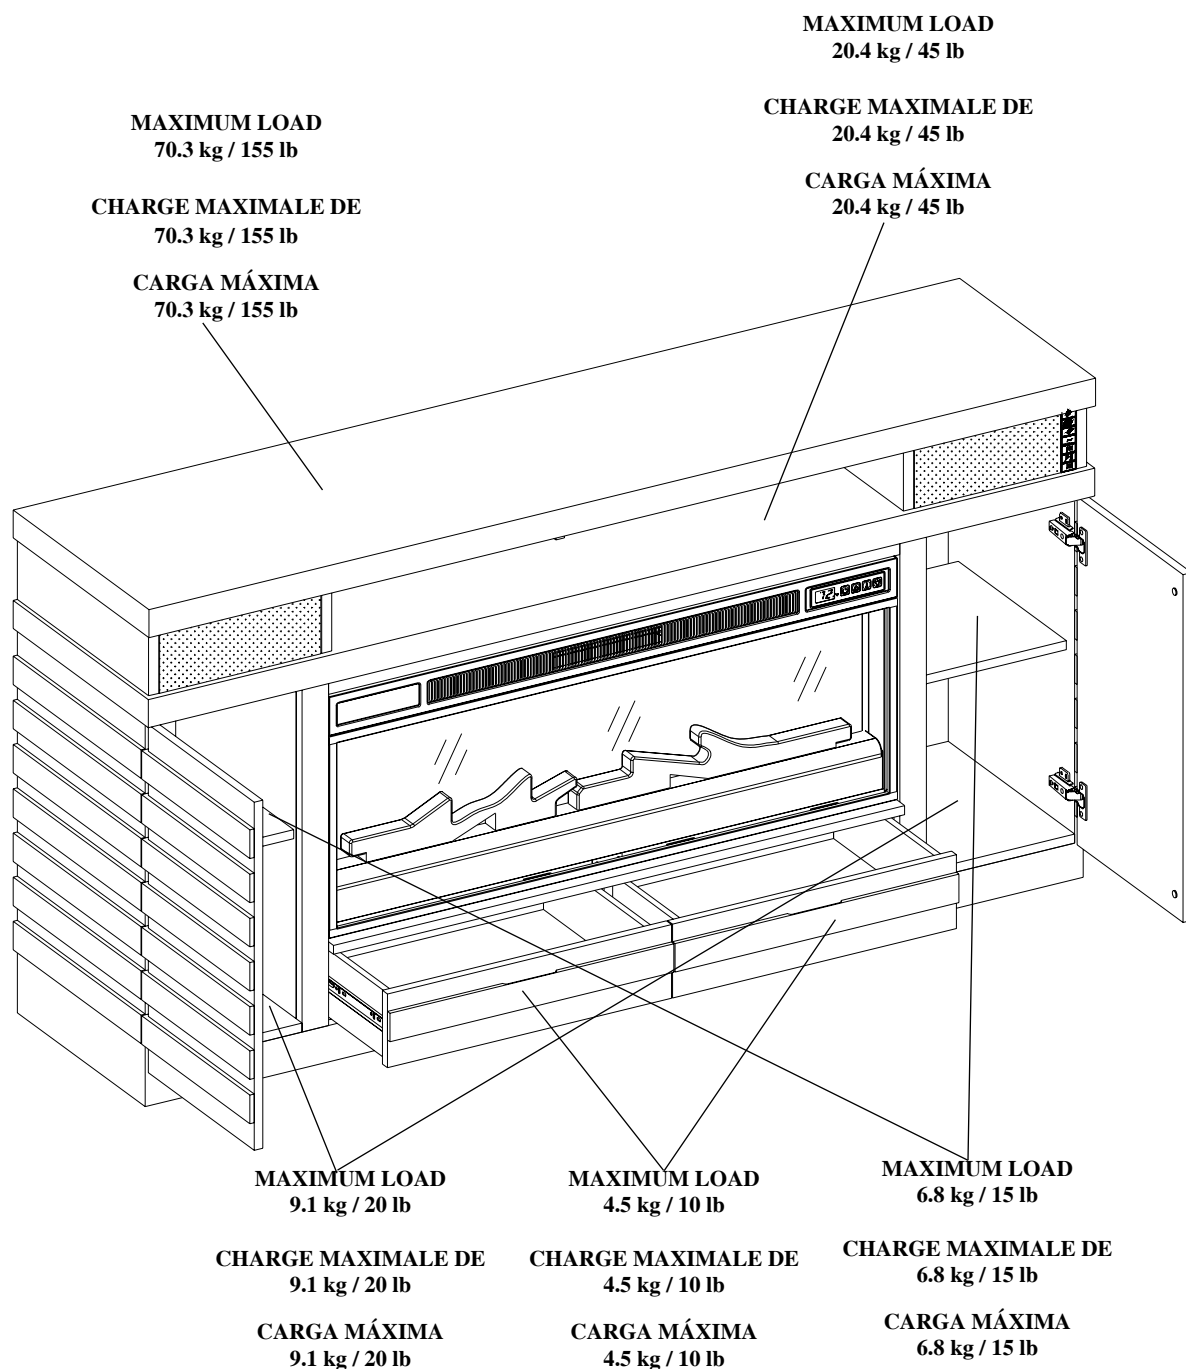

Requires Electric Fireplace Insert
Nécessite Unfoyer Electrique Encastrable
Requiere Chimenea Eléctrica Empotrada

**WARNING:**

 
For use with most flat-panel televisions weighing 70.3 kg / 155 lb or less. Use with televisions or loads heavier than the maximum weights specified may result in instability causing tip over resulting in death or serious injury.

ATTENTION:

Utilizado para la mayoría de los televisores de panel plano y con un peso de 70.3 kg / 155 lb o menos. Cuando las cargas de los televisores serán más pesadas que los pesos máximos especificados, lo cual puede resultar en la inestabilidad causando muertes o lesiones graves.

PRECAUCIÓN:

Pour l'utilisation avec la plupart des téléviseurs à écran plat pesant 70.3 kg / 155 lb ou encore moins. L'utilisation des téléviseurs ou des charges plus lourdes que les poids maximaux spécifiés peut provoquer une instabilité qui entraînera un renversement en causant la mort ou des blessures graves.

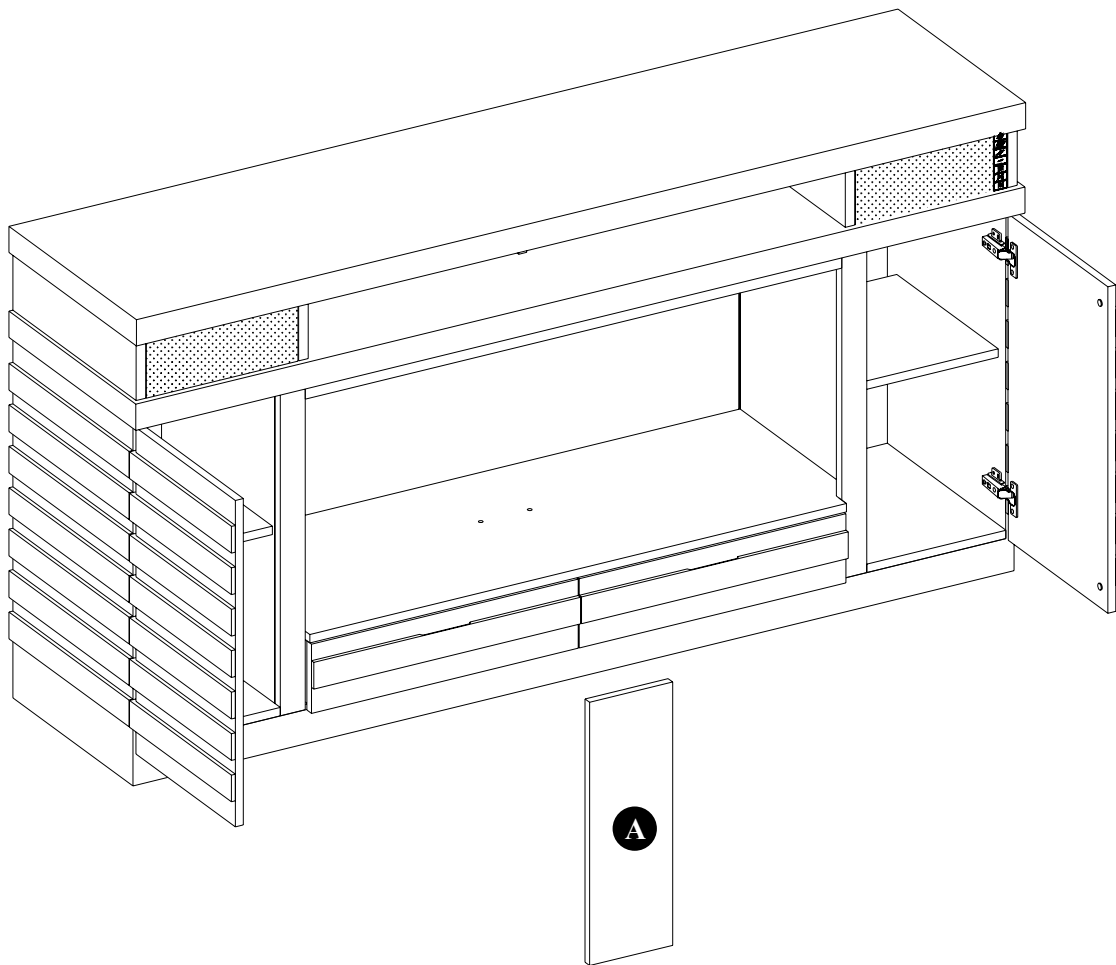

**SAFETY
INFORMATION**

Please read and understand this entire manual before attempting to assemble, operate or install the product.

**WARNING**

- Some steps are more easily handled with two adults.

CAUTION

- Before assembly and/or installation, carefully unwrap all parts.
- Locate and set aside the hardware kit before discarding packaging.
- Use care when assembling your new product. Take your time and follow the assembly instructions closely.

**INFORMATION
DE SÉCURITÉ**

Assurez-vous de lire et de comprendre l'intégralité du présent manuel avant de tenter d'assembler, d'utiliser ou d'installer le produit.

**AVERTISSEMENT**

- Certaines étapes sont plus faciles à effectuer avec l'aide

MISE EN GARDE

- Avant l'assemblage et/ou l'installation, vous devez déballer minutieusement toutes les pièces.
- Localisez et mettez de côté le jeu de quincaillerie avant de jeter l'emballage.
- Soyez vigilant lorsque vous assemblez le nouveau produit. Prenez votre temps et suivez attentivement ces instructions.

**INFORMACIÓN DE
SEGURIDAD**

 
Lea y comprenda completamente este manual antes de intentar ensamblar, usar o instalar el producto.

**ADVERTENCIA**

- Algunos de los pasos se pueden realizar con mayor facilidad entre dos adultos.

PRECAUCIÓN


- Antes del ensamblaje y/o instalación, desenvuelva cuidadosamente todas las piezas.
- Localice y separe el equipo de accesorios antes de desechar el embalaje.
- Tenga cuidado al ensamblar el nuevo producto. Tómese su tiempo y siga detenidamente las instrucciones de ensamblaje.

**TOOLS REQUIRED
OUTILS NÉCESSAIRES
HERRAMIENTAS NECESARIAS**

(NOT INCLUDED)
(PAS INCLUS)
(NO INCLUIDAS)

HARDWARE / QUINCAILLERIE / HARDWARE

 
[x8]



AA

Ø6.3x12mm
PH-BLTBLK002

 
[x2]

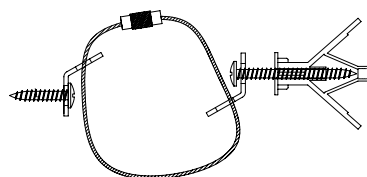

BB

PH-BKTSLV016

 [x4]



CC

 
PH-BKTBLK009

[x1]



ZZ

Touch-Up pen
(NOT TO SCALE)

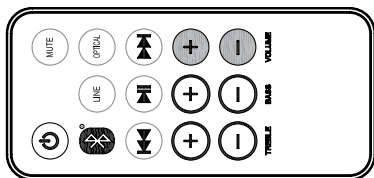


ER

Y16-RC-0843A



EX

 Y17-OP-001

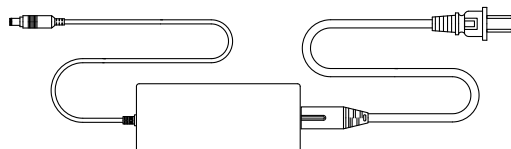

ZZ1

Y16-PC-0843V1

READ BEFORE INSERT INSTALLATION

LIRE AVANT D'INSTALLER LE FOYER

LEA ANTES DE LA INSTALACIÓN DEL HOGAR



PLEASE READ ALL "ELECTRIC FIREPLACE INSERT" INSTRUCTIONS PRIOR TO INSTALLING ELECTRIC INSERT IN YOUR COMPLETED FIREPLACE MANTEL. INSTALL THE INSERT IN YOUR FIREPLACE CLOSE TO ITS FINAL POSITION.

Lift insert carefully into the back of the unit and center in the insert opening. Do not drag insert as it may scratch your unit.

MOVE YOUR COMPLETED UNIT ONLY SHORT DISTANCES. MOVE COMPLETED UNIT WITH GREAT CARE. IT TAKES TWO PEOPLE TO MOVE COMPLETED UNIT INTO ITS FINAL POSITION.



VEUILLEZ LIRE TOUTES LES INSTRUCTIONS D'INSTALLATION DU FOYER ÉLECTRIQUE ENCASTRABLE AVANT D'INSTALLER LE FOYER DANS LE MANTEAU, UNE FOIS CELUI-CI ASSEMBLÉ. INSTALLEZ LE FOYER DANS L'ESPACE PRÉVU, PRÈS DE SA POSITION FINALE.

Soulevez doucement le foyer encastrable pour le déposer par l'arrière du manteau, dans le centre de l'ouverture de celui-ci. Ne pas tirer le foyer encastrable sur la base/âtre car cela pourrait égratigner la base du manteau.

NE DÉPLACEZ LE FOYER ENTIÈREMENT MONTÉ QUE SUR DE COURTES DISTANCES. DÉPLACEZ L'UNITÉ MONTÉE AVEC SOIN. IL FAUT DEUX PERSONNES POUR DÉPLACER L'UNITÉ MONTÉE ET LA METTRE EN PLACE.

 
 


LEA ATENTAMENTE TODAS LAS INSTRUCCIONES DEL "HOGAR ELÉCTRICO" ANTES DE SU INSTALACIÓN EN LA CHIMENEA DECORATIVA. UBIQUE EL HOGAR ELÉCTRICO EN LA POSICIÓN DEFINITIVA DENTRO DE LA CHIMENEA.


Levante el hogar cuidadosamente, colóquelo en la parte posterior de la unidad y céntralo en la abertura de la chimenea. No empuje el hogar desde su Base dado que la unidad se puede dañar.

MUEVA LA UNIDAD COMPLETA SÓLO EN DISTANCIAS CORTAS MUEVA LA UNIDAD COMPLETA CON MUCHO CUIDADO. SE NECESITAN DOS PERSONAS PARA DESPLAZAR LA UNIDAD COMPLETA AL LUGAR DEFINITIVO QUE VA A OCUPAR.


1

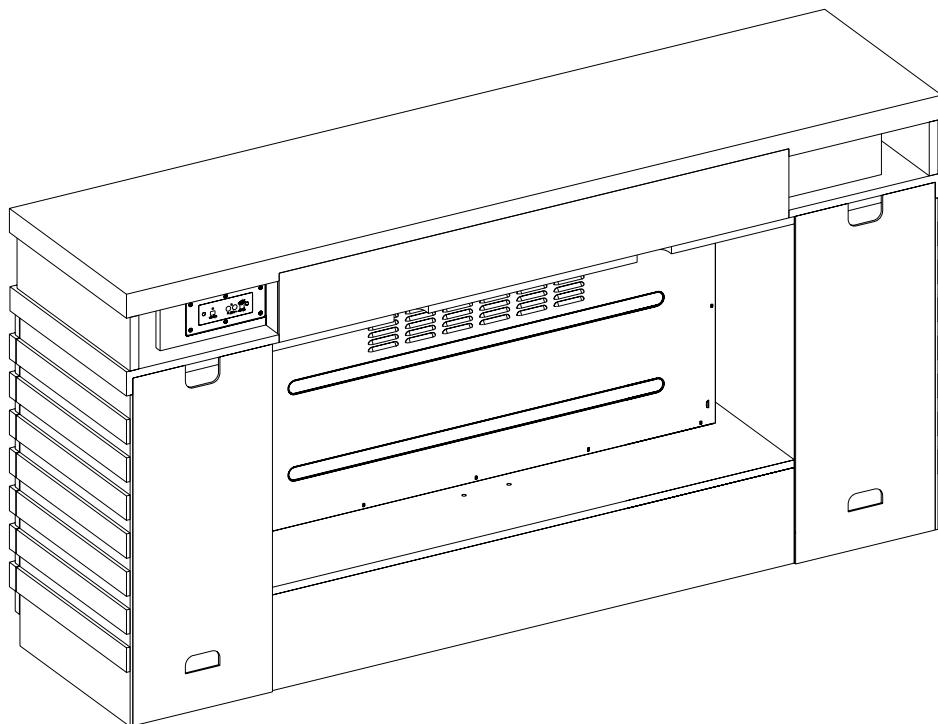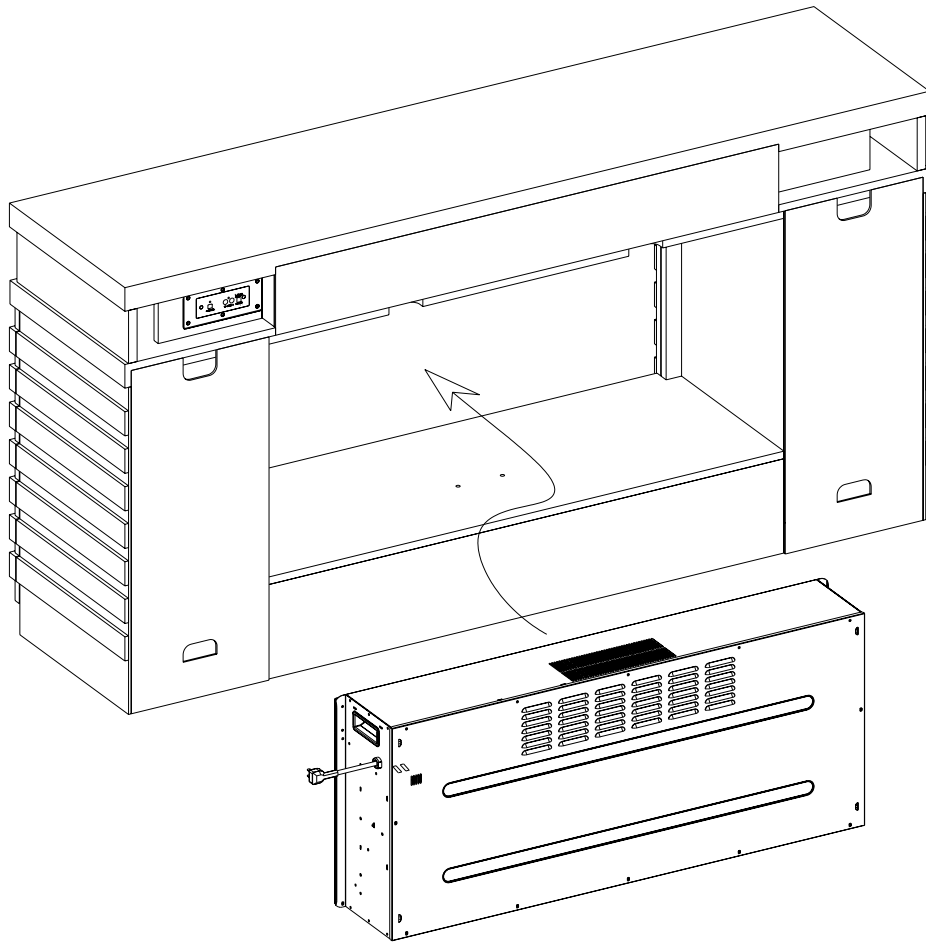

2

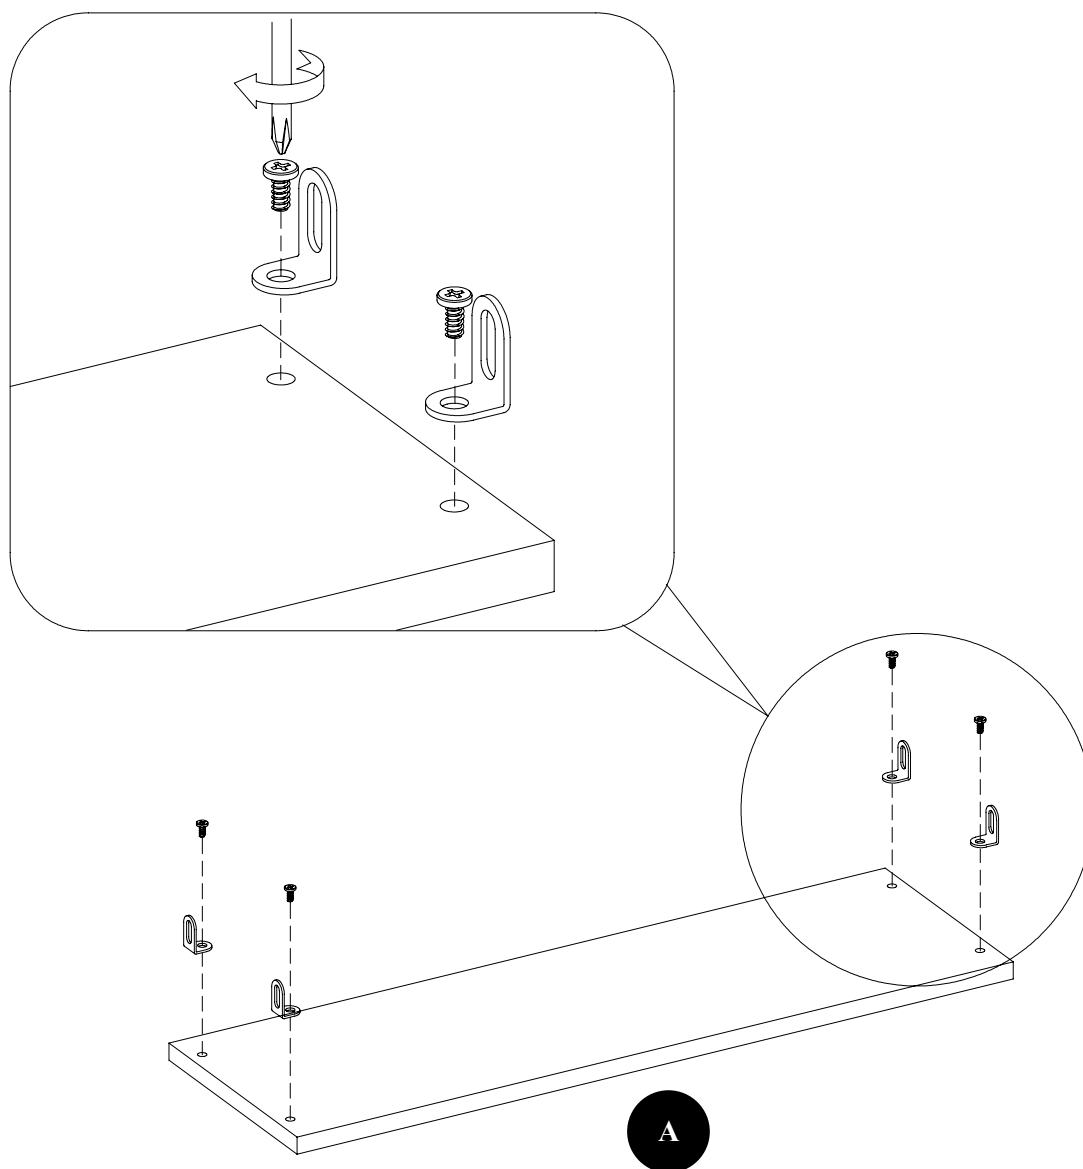 


AA

 


[x4]

 CC




[x4]

 
3

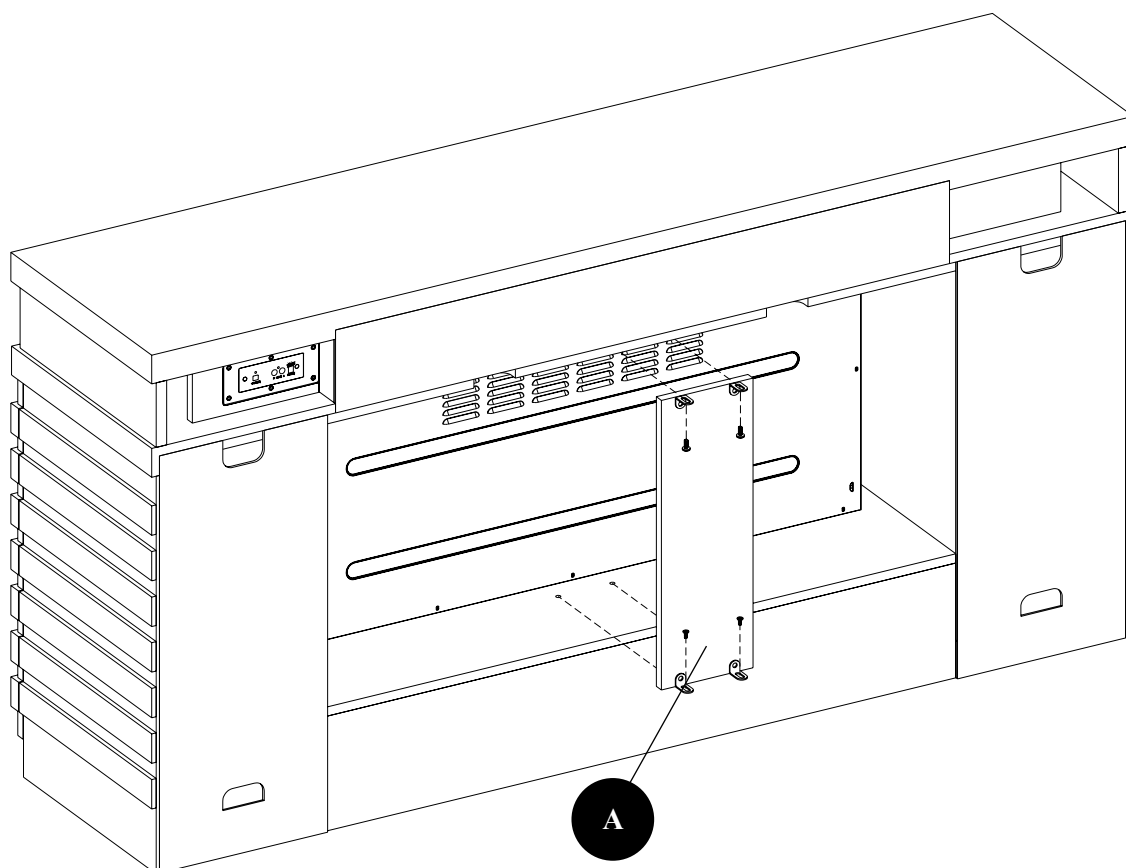

AA

 


[x4]

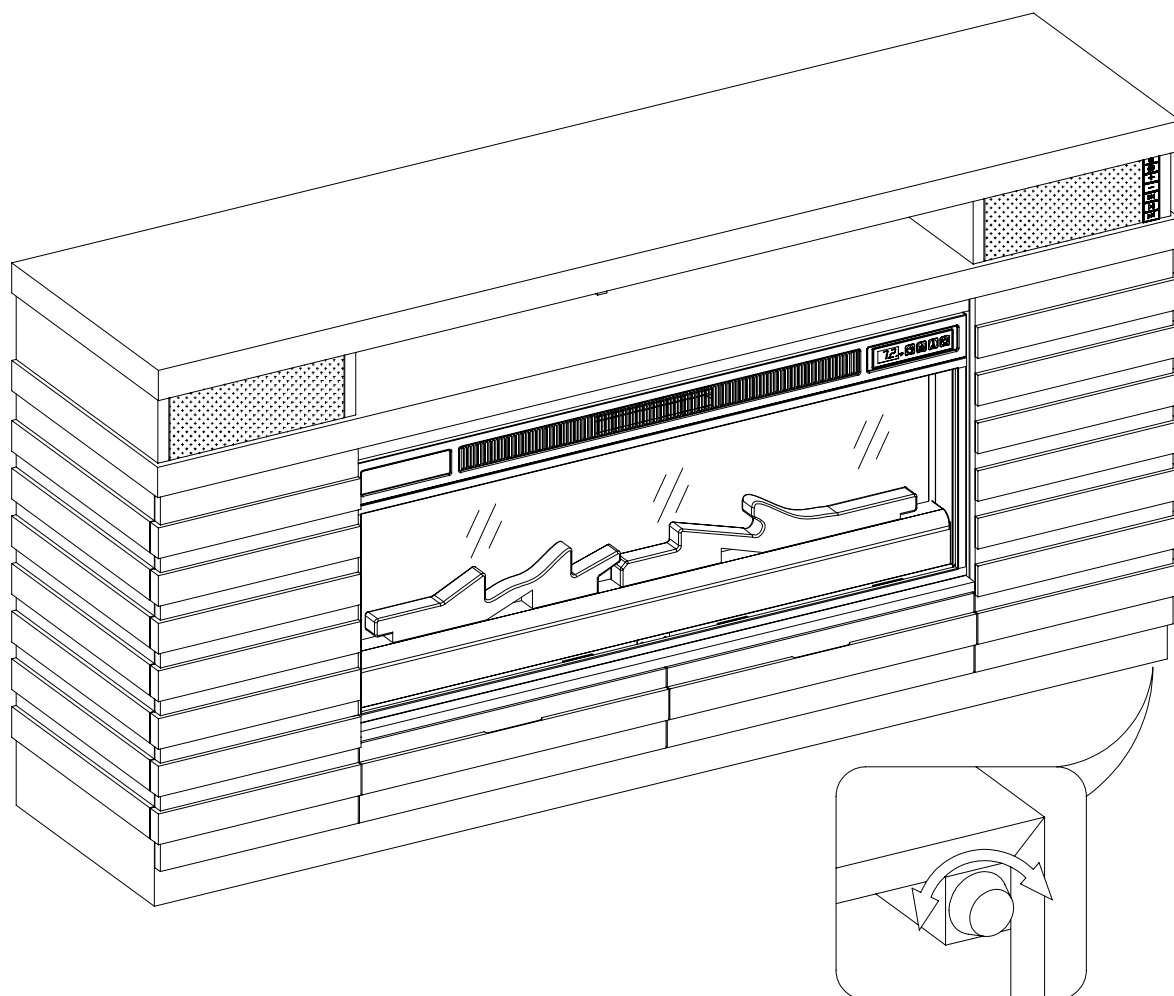 

Note: It is very important that your unit is level in order for your doors and drawers to function properly. After moving your unit to its final location you may need to adjust the floor levelers.

Remarque : Pour que les portes et tiroirs fonctionnent correctement, il est très important que l'appareil soit bien horizontal. Une fois que l'appareil sera arrivé sur son emplacement définitif, vous aurez peut-être besoin d'ajuster les réglages des pieds.

 Nota: Para que las puertas y cajones funcionen correctamente, es muy importante que la unidad esté nivelada. Una vez que la unidad llegue a su ubicación final, es posible que necesite ajustar la configuración de los pies.

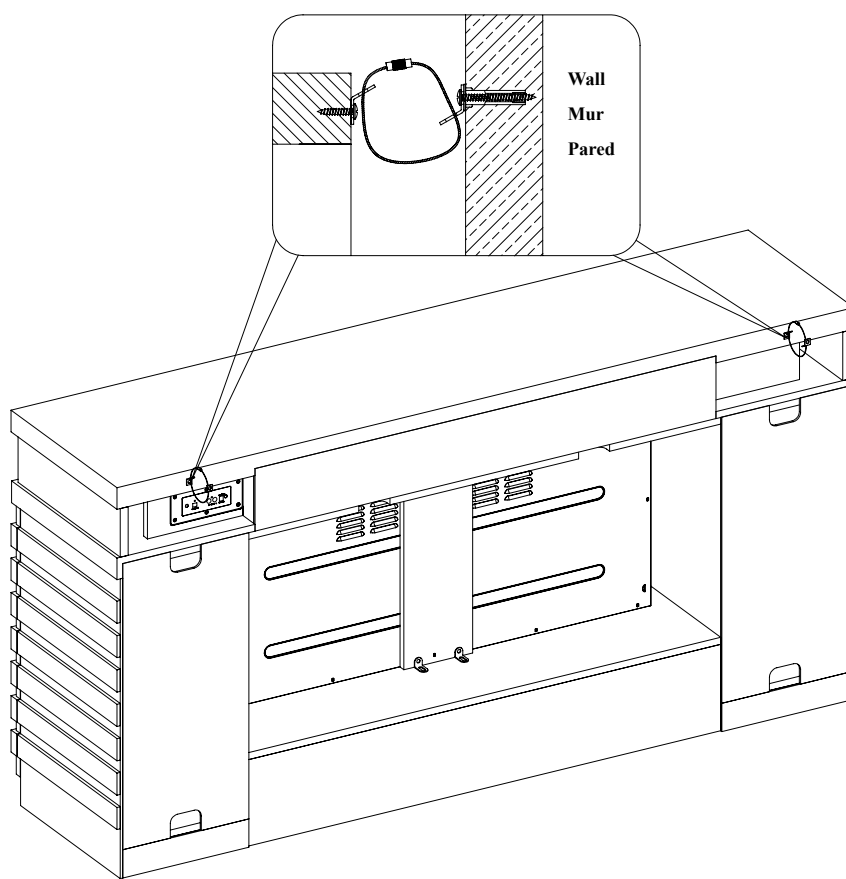6

WARNING: You must install the tipping restraint hardware to help prevent any accidents or damage to the unit.

 
We strongly recommend mounting this hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.

AVERTISSEMENT: Il est nécessaire d'installer les pièces d'arrimage anti basculement pour prévenir les accidents ou les dommages à l'unité.

Il est fortement recommandé de fixer ces pièces sur un poteau mural et sur le meuble. En ce qui concerne tous les autres types de murs, veuillez visiter votre quincaillerie pour obtenir les articles appropriés.

ADVERTENCIA: Debe instalar el Herraje contra Caídas para evitar accidentes o que se dañe la unidad.

Recomendamos montar estos herrajes a un taco de pared y a la Unidad. Respecto de todos los demás tipos de pared, vaya a su ferretería local para obtener las herramientas adecuadas.

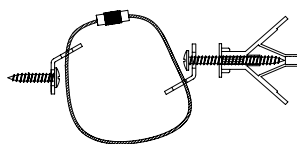
BB**[x2]**

CARE / MAINTENANCE	SOIN / ENTRETIEN	CUIDADO / MANTENIMIENTO
Care and Maintenance • Use a soft, clean cloth that will not scratch the surface when dusting • Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area. • Using solvents of any kind on your furniture may damage the finish. • Never use water to clean your furniture as it may cause damage to the finish. • Always use coasters under beverage glasses and flowerpots. • Liquid spills should be removed immediately, as it may damage the furniture. Use a soft, clean cloth and blot the spill gently. Avoid rubbing. • Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture. Further advice about wood furniture care It is best to keep your furniture in a climate-controlled environment. Temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish. Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages. A touch- up pen has been provided to repair any small nicks or scratches that may occur during assembly or shipping. We hope you enjoy your purchase for many years. Thank you for your purchase!	Soin / Entretien • Lors de l'époussetage, utilisez un chiffon doux et propre qui n'égatigne pas la surface. • Il n'est pas nécessaire d'utiliser du poli à meuble. Si vous décidez d'utiliser du poli à meuble, veuillez d'abord en faire l'essai dans un endroit moins en évidence. • L'utilisation de solvant de quelque sorte sur votre ameublement peut endommager le fini. • Ne jamais utiliser d'eau pour nettoyer votre ameublement car cela peut endommager le fini. • Utilisez toujours des dessous de verre sous les verres/tasses des breuvages et sous les pots à fleur. • Tout déversement de liquide doit être enlevé immédiatement car cela peut endommager l'ameublement. Utilisez un chiffon doux et propre et éponger délicatement le déversement. Évitez de frotter. • Utilisez toujours des tampons protecteurs sous les plats et les assiettes chaudes. La chaleur peut causer des changements chimiques qui peuvent créer des taches sur l'ameublement. Autres conseils sur l'entretien du bois Il est préférable de conserver votre ameublement dans un environnement dont le climat est contrôlé. Les changements de température et d'humidité peuvent causer une décoloration, un gauchissement, un rétrécissement et un fendillement du bois. Il est conseillé de garder l'ameublement éloigné des rayons directs du soleil puisque le soleil peut endommager son fini. Un nettoyage et un entretien approprié à domicile permettra d'allonger la durée de vie de votre achat. De suivre ces conseils importants et pratiques aidera votre ameublement à vieillir en beauté. Un crayon à retouches est fourni pour réparer toute égratignure qui pourrait se produire lors de l'assemblage ou du transport. Nous vous souhaitons des années de plaisir avec l'utilisation de votre achat. Nous vous remercions pour votre achat!	Cuidado / Mantenimiento • Use un paño suave y limpio que no raye la superficie cuando elimine el polvo. • El uso de cera para muebles no es necesario. Si elige utilizar la cera, realice primero una prueba en un área discreta. • Usar solventes de cualquier clase en sus muebles puede dañar el acabado. • Nunca utilice agua para limpiar sus muebles, ya que puede causar daños en el acabado. • Siempre utilice posavasos para colocar los vasos de bebidas y las macetas. • Los derrames de líquidos se deben de secar inmediatamente, ya que pueden dañar el mueble. Use un paño suave y limpio y seque el derrame con cuidado. Evite frotar. • Siempre utilice almohadillas protectoras debajo de los platos y vajillas calientes. El calor puede causar cambios químicos los cuales pueden crear manchas en los muebles. Más consejos sobre el cuidado de los muebles de madera Es mejor mantener sus muebles en un entorno climatizado. Los cambios en la temperatura y la humedad pueden desteñir, alabea, encoger y fragmentar la madera. Se recomienda mantener los muebles lejos de la luz directa del sol, pues el sol puede dañar el acabado. La limpieza y el cuidado adecuados en el hogar extenderán la vida útil de su compra. Al seguir estos consejos importantes y útiles mejorará sus muebles a medida que pasa el tiempo. Se ha proporcionado un marcador corrector para reparar cualquier raya o rasguño pequeño que se pueda producir durante el montaje o el envío. Esperamos que disfrute su compra durante muchos años. ¡Gracias por su compra!

REPLACEMENT PARTS 42MMS6410


PIÈCES DE REMPLACEMENT 42MMS6410

 PARTES DE REPUESTO 42MMS6410

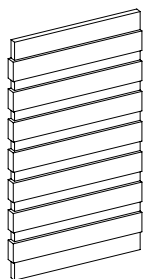


B

 Left Door

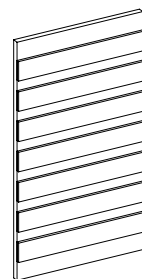


C

 Right Door

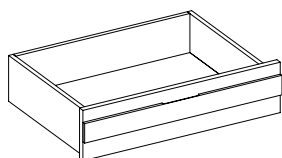


D

 Left Drawer

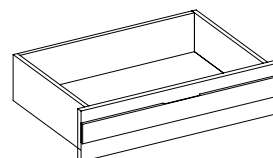

E

 Right Drawer

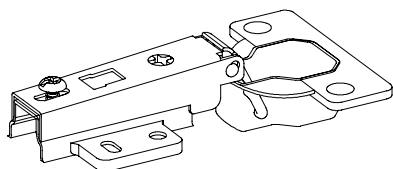


DD

PH-HNGPC40AS95




EE

 PH-BMPCLR001

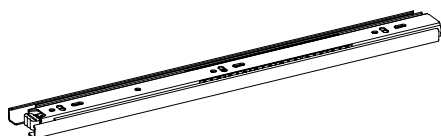

FF

 PH-DSL3514SELF

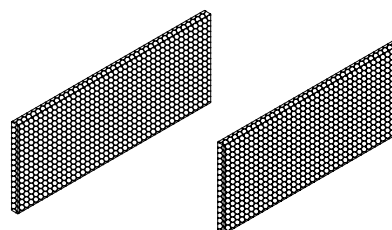


EA

Y16-SG-08430303

REPLACEMENT PARTS 42MMS6410


PIÈCES DE REMPLACEMENT 42MMS6410

 PARTES DE REPUESTO 42MMS6410

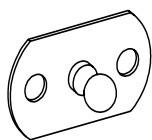


EB

 Y14-PID01-PG

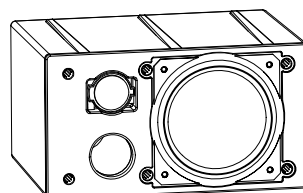


EC

 Y16-SBR-0843

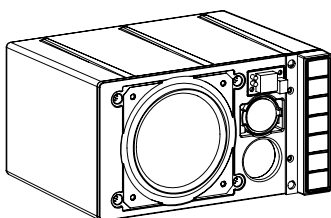

ED

 Y16-SBL-0843

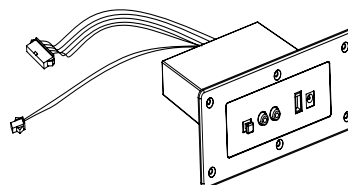

EF

Y16-MP-0843U

Sound System: TS-0843

PRODUCT SPECIFICATIONS

Adapter Input	AC100-240V, 50/60Hz
Adapter Output	DC15V 2.5A
Power Consumption	30 Watts
Standby Power Consumption	< 1 W

WIRING

- 1. OPTICAL IN - Input for digital fiber-optic cable.
- 2. AUX IN R/L - Input for RCA cable (not included).
- 3. DC IN - Input for the power supply.



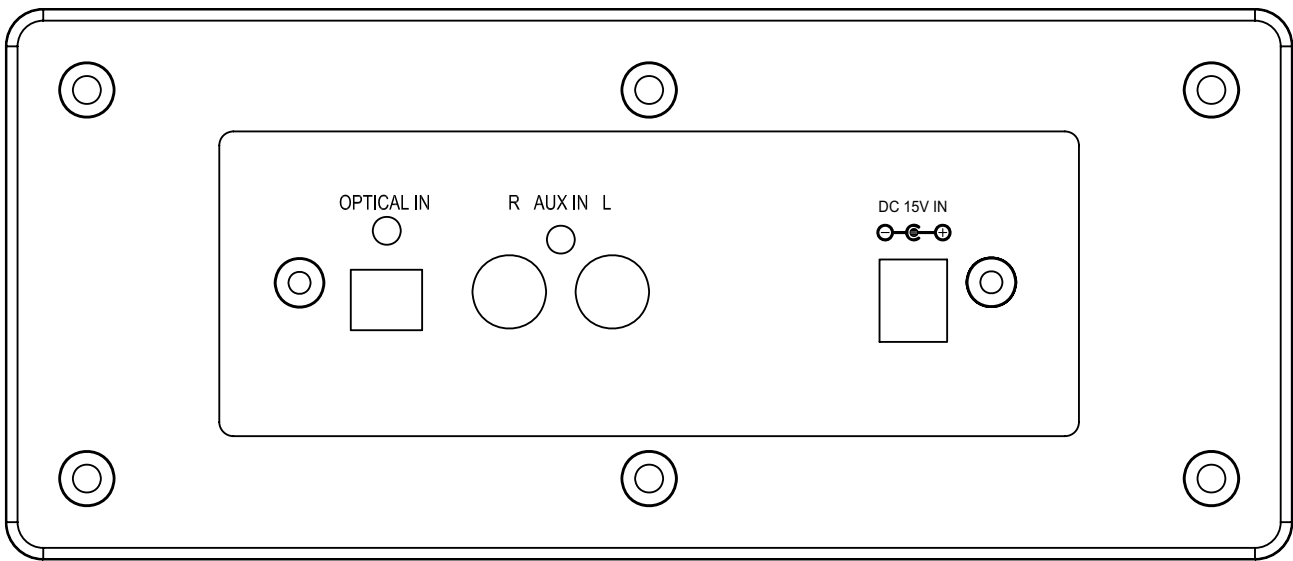 


Fig.1 Back Panel

 
OPERATION INSTRUCTIONS

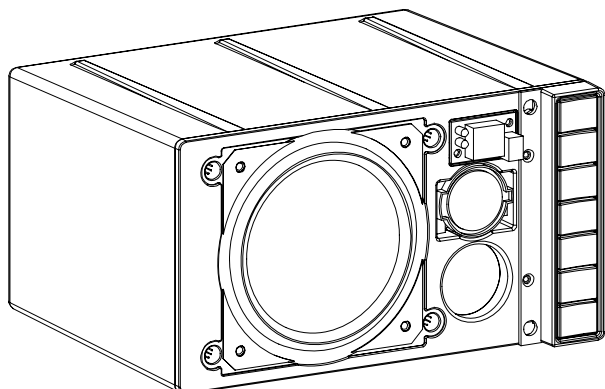

Control Panel

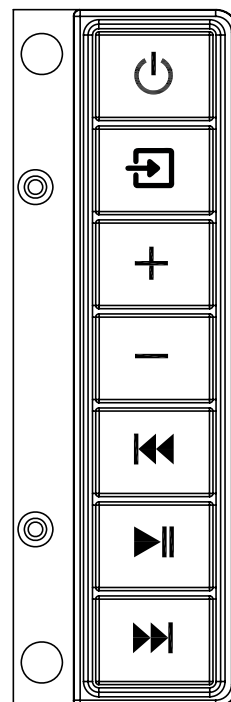 

 The speaker can be operated by either the remote control or the control panel.

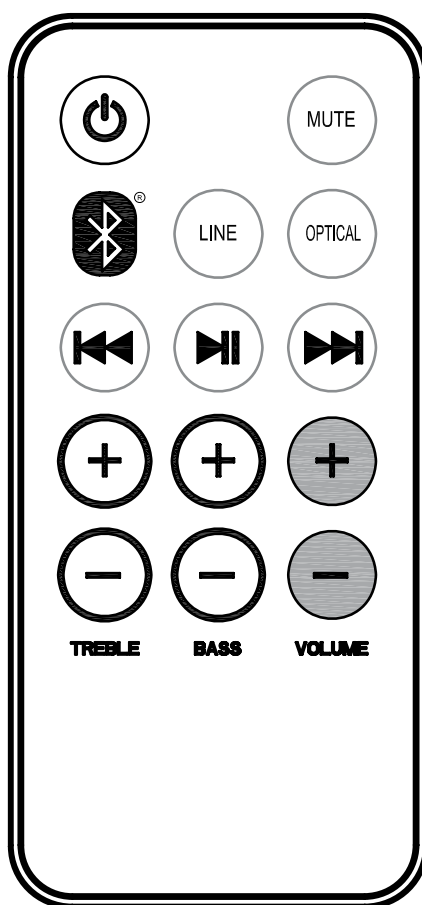

OPERATION INSTRUCTIONS

FUNCTION	ICON	DESCRIPTION
POWER		The POWER button supplies power to all the functions of the unit.
SOURCE		To scroll through the different input options: BT - Bluetooth Search for other smartphones and devices. The blue flashing light indicates the unit is searching for devices with a WPAN (Bluetooth) function activated. Selecting TS-0843 from your device will link it to the console and allow to stream sound from up to 10 meters away. The light will stay continuously lit once a connection has been made to the device. OP - Optical Input Stream sound from your television or other device connected to the console at the back panel by Optical cable. AU - AUX Input Stream sound from your television or other device connected to the console at the back panel by RCA cables.
ADJUSTMENT		Adjust the volume if Speaker is ON
PREV/NEXT		In Bluetooth mode, press PREV/NEXT buttons to change previous or next songs.
PLAY/PAUSE		In Bluetooth mode, press PLAY/PAUSE button to play or pause the selected track. Pressing and holding this button for 3 seconds on Bluetooth mode will make Bluetooth pairing.
MUTE	MUTE	Press MUTE button on the remote to mute and un-mute the volume.

OPERATION INSTRUCTIONS

FUNCTION	ICON	DESCRIPTION
BLUE		Press  button on the remote to switch to Bluetooth input.
LINE IN	LINE	Press LINE button on the remote to switch to Aux In input.
OPTICAL	OPTICAL	Press OPTICAL button on the remote to switch to Optical input.
TREBLE		Press TREBLE button on remote to adjust the TREBLE up or down.
BASS		Press BASS button on remote to adjust the BASS up or down.
VOLUME		Press VOLUME button on remote to adjust the volume.

OPERATION INSTRUCTIONS

Learning Function

The learning function allows your Sound System to be controlled by your TV remote control (Note: Remote must send infrared signals). Any unused button on your TV remote control can be used to control the Sound System. For example, when you connect your TV to the Sound System using the RCA Stereo cables or Digital Fiber Optic Cable the TV volume and mute will no longer be controlled by the remote that came with it. Some TV remotes also come with extra buttons. These buttons can also be used for any of the learning options below.

Some of the programmable functions need to be selected from the remote control as noted below. Note: It is able to learn most IR protocols, not all remote can be programmed.

To start the learning function:

- At power on mode, press  5 seconds to learn mode. SEL starts flashing.
- Select the function to learn on the control panel or remote.
 - o The function (below) will flash. Point your TV remote at the flashing LED on the sound System and hold down the button you want it learn from.
 - o When learning is complete the function goes solid for 3 seconds (stops flashing) and SEL will now start flashing.
 - o You can now select the next function to learn or end the process by pressing the  for 5 seconds.

V	Volume up [control panel or remote control]
V-	Volume down [control panel or remote control]
SI	Mute [remote control]
ON	Power [control panel or remote control]
SO	Source [control panel]
AU	Aux [remote control]
OP	Optical [remote control]
BL	Bluetooth [remote control]
BA	Track Back [control panel or remote control]
FO	Track Forward [control panel or remote control]
PL	Play [control panel or remote control]
T	Treble up [remote control]
T-	Treble down [remote control]
B	Bass up [remote control]
B-	Bass down [remote control]

TROUBLESHOOTING

PROBLEM	SOLUTION
1. Sound is distorted.	1a. Decrease the volume. 1b. If the iPhone/iPod original sound source is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD. 1c. If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself. 1d. Try changing the bass and treble settings using the remote control.
2. Unit gets warm after extended play at high volume.	2a. Turn the unit off for a period of time or lower the volume.

CARE AND MAINTENANCE

Warning:

1. If the supply cord is damaged it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.
2. Only a qualified service person should repair this product.
3. Do not use outdoors.
4. Do not insert or allow foreign objects to enter the system as this may cause an electric shock, fire, or damage to the appliance.
5. Use this appliance only as described in the manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

Replacing the Remote Control Battery

When the remote control stops operating or its range seems reduced, it is time to replace the battery with a new one.

1. The battery compartment is located on the back end of the remote.
2. Press and slide the battery door open and remove the old battery.
3. Insert 1pc CR2025 battery, checking that the + and - sides of the battery match inside the battery compartment.
4. Replace the battery compartment door.

CAUTION:

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove used batteries promptly.

Note: Caution do not ingest batteries. If batteries are swallowed immediately call poison control.

Disposal of Used Batteries

Battery may contain hazardous substances which could be endangering to environment and human health.



This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead it shall be left at the appropriate collection point for recycling.

By ensuring the used batteries are disposed of correctly, you will help preventing potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources.

For more information about collection and recycling of used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this point.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. Interference can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by trying one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.



WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.