

ASSEMBLY INSTRUCTIONS

BOB'S DISCOUNT
FURNITURE

L718652BF

SKU# 20078608

HUNTER BRONZE/GOLD SWING ARM FLOOR LAMP

1. FASTEN TUBE A ONTO LAMP BASE.
2. FASTEN TUBE B ONTO TUBE A.
3. FASTEN TUBE C ONTO TUBE B, AND THEN USE WRENCH TO FIXED NUT.
4. FASTEN TUBE D ONTO TUBE C.
5. PUT SHADE ONTO SOCKET AND TIGHTEN WITH SOCKET RING.
6. MAX LED 9W E26 BULB INCLUDED.
MAY ALSO USE A MAX OF 100W E26 TYPE "A" BULB.

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER).

THIS IS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRICAL SHOCK.

THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN.

NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

- | | | | | |
|--------------------|-----------------|-----------------|----------------|-----------------------|
| 1. LAMP BASE x 1pc | 2. TUBE A x 1pc | 3. TUBE B x 1pc | 4. TUBE C x1pc | 5.WRENCH x 1pc |
| 6. NUTx1pc | 7. TUBE Dx1pc | 8. SOCKET x1pc | 9. SHADE x1pc | 10. SOCKET RING x 1pc |
| | | | | 11. LED 9W BULB x1pc |



WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

