## **ASSEMBLY INSTRUCTIONS**




WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tipover.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

P.1


P.1

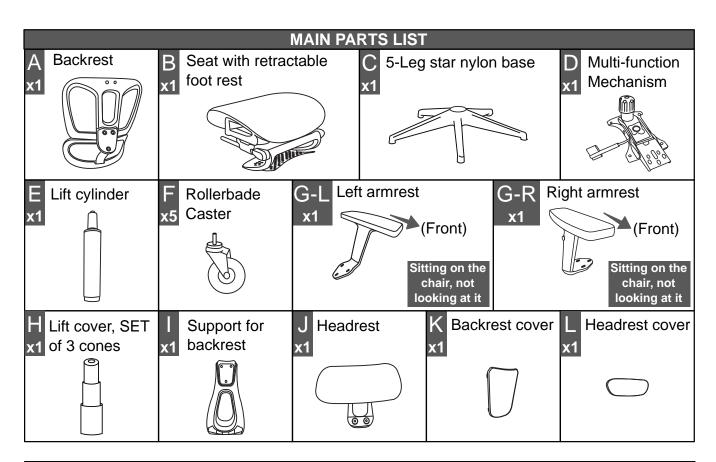



HARDWARE LIST						
PART #	QTY	SIZE / DESCRIPTION	USE IN	(Scaled 0 10 20 30 40 50 60 reference)		
М	9	M6x20	Mechanism to seat, backrest to support, headrest to backrest			
Ν	6	M6x30	Armrests to seat			
0	3	M8x20	Support to mechanism			
Р	6	Ø8.5, Ø17, 1mm Metal washer	Armrests to seat	$\bigcirc$		
Q	2	Plastic washer	Armrests to seat	$\bigcirc$		

INCLUDED TOOLS						
1	M5 Allen wrench	Use in steps 1, 2, 3, 6 & 7	M5			

P.2

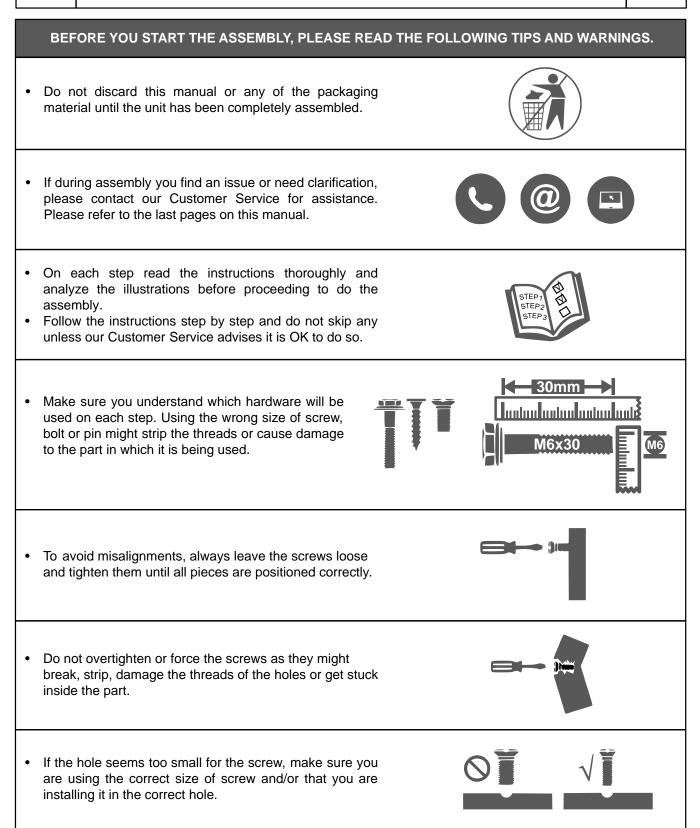

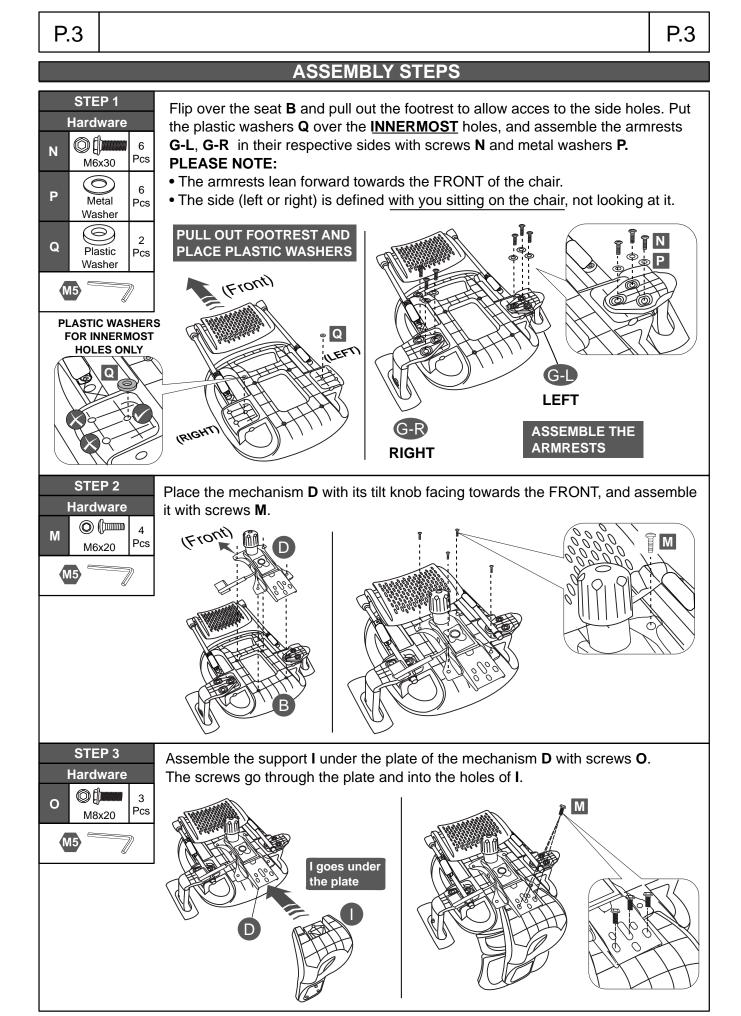


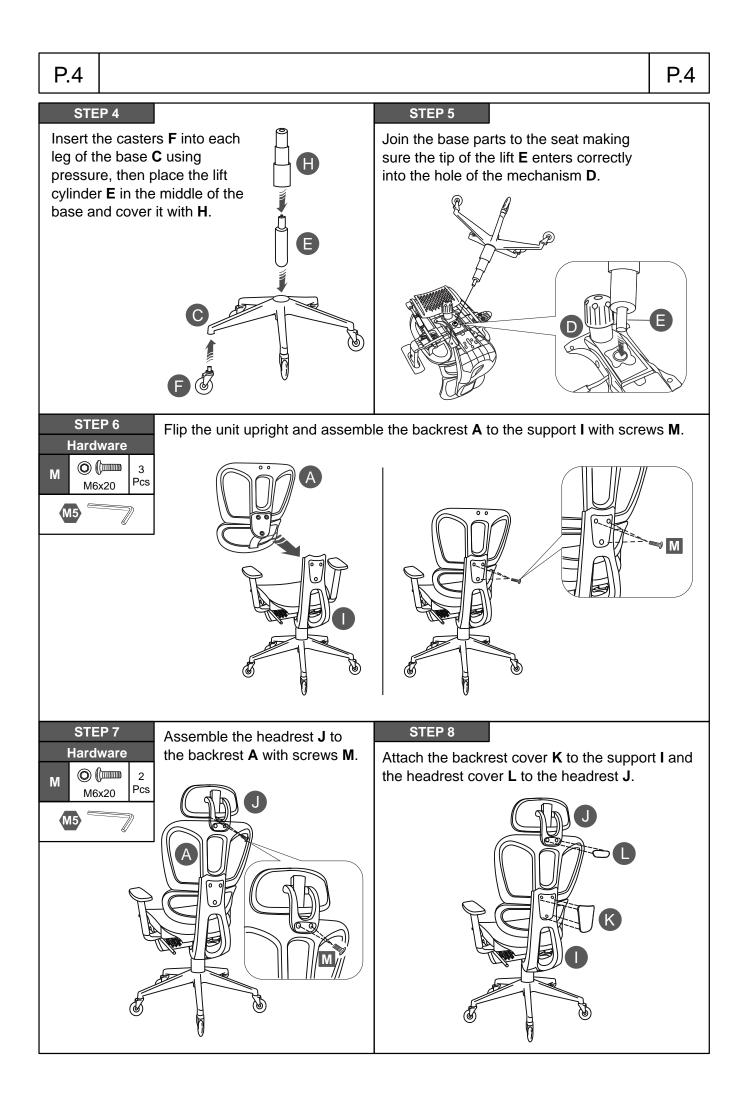

P.5

## **CHAIR'S FUNCTIONS**

- To raise or lower the chair's height, flip DOWN the handle on the lever that is under the seat on the right side. The chair goes down while sitting on it, or up if you lift your body.
- To recline the backrest to a specific angle, pull OUT the same lever, recline and then push IN the lever to lock at the desired angle. To return to the normal upright position, UNLOCK the lever, push back a little bit on the backrest, then pull yourself forward and lock the lever.
- 3 You can turn the tension knob at the front of the mechanism under the seat to make the reclining feel either easier or with more resistance according to your preference.
- To use the footrest, pull it out from under the seat, and flip it UP. To close it while you are still sitting on the chair, flip it back DOWN and push it IN under the seat.
- **WARNING**: <u>NEVER</u> try to get up from the chair while the footrest is OUT.
- **5** To adjust the armrest height, press the button that is on the outside of the armrest and release it once the desired height is reached.
- 6 For comfort, the headrest can be adjusted UP and DOWN or tilted forward/backwards.

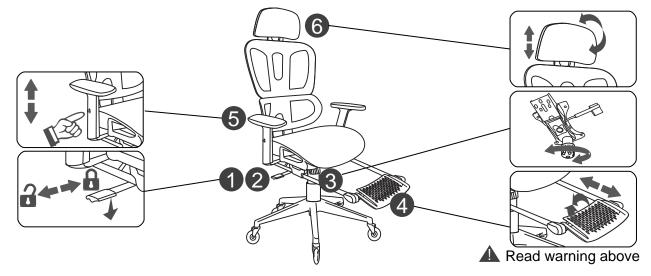

## WARNINGS

- Do not exceed the indicated weight limit.
- Do not stand up on the chair or use it as ladder.
- Only one person at a time can sit on the chair.
- Do not use the chair if parts are bent, damaged, or if screws are loose or missing.
- <u>NEVER</u> try to get up from the chair while the footrest is OUT.
- If small children are sitting on the chair, keep close observation on them.
- Do not allow small children to play with the chair.
- Not paying attention to these warnings could result in injuries.

## CARE AND MAINTENANCE

- To clean the chair it is recommended to use a soft cloth lightly damped in a solution of smooth soap and water, then dry with a clean towel.
- Do not use solvents or abrasive materials to clean any part of the chair.
- Before using a cleaning agent, test on a small hidden area of the chair, like underneath the seat.
- Do not expose the product to direct sunlight or to extreme environmental conditions.
- Inspect the chair completely every 4 months and make sure that all screws are tighten. Do not use if parts are bent, damaged, or if screws are loose or missing.

WEIGHT LIMIT

(125 Kg)