


⚠ WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
 - Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
 - Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.
-

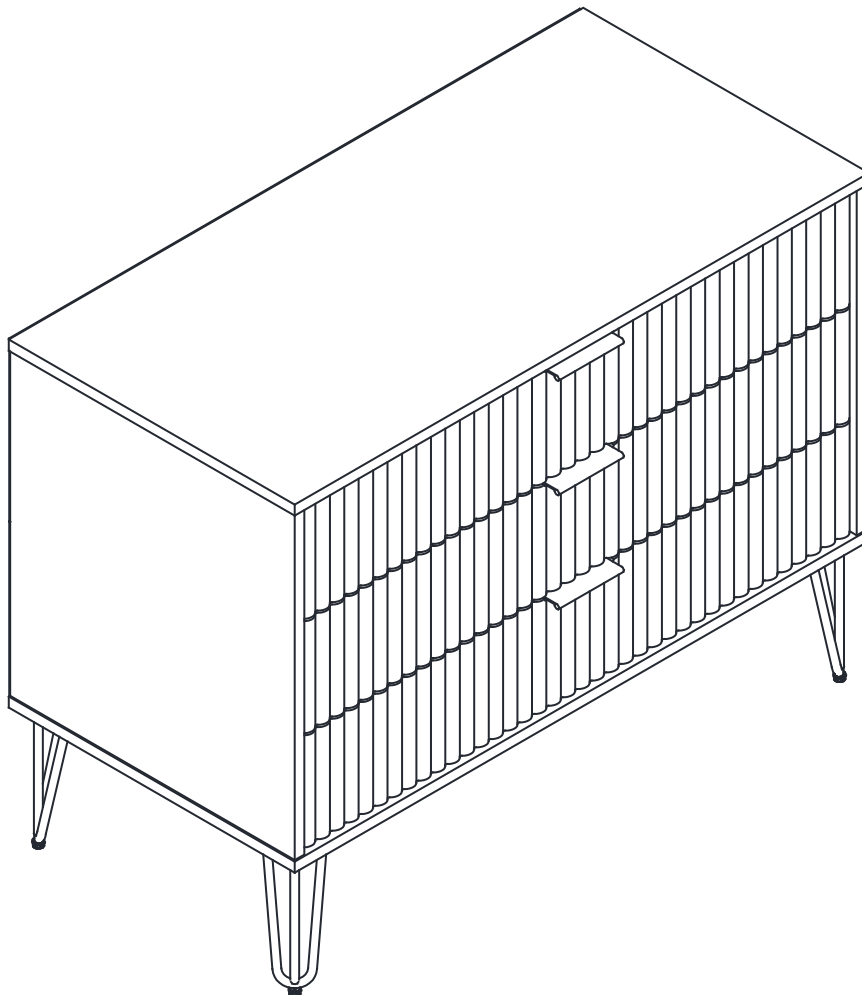




STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.


FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

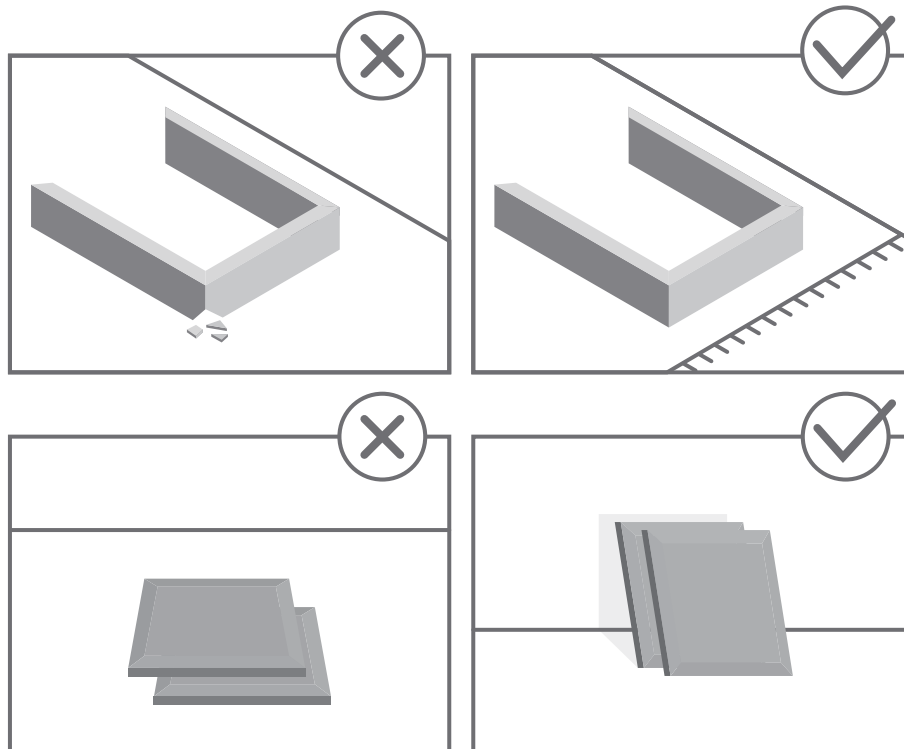


Included in this package:

- A: TOP (1)
- B: BOTTOM (1)
- C: LEFT END (1)
- D: RIGHT END (1)
- E: BACK (2)
- X: DRAWER FRONT (3)
- R: DRAWER SIDE LEFT (3)
- S: DRAWER SIDE RIGHT (3)
- U: DRAWER BACK (3)
- M: DRAWER BOTTOM (3)
- O: DRAWER BOTTOM SUPPORT (3)
- P: LEG (4)
- Q: CONNECTING TUBE (2)

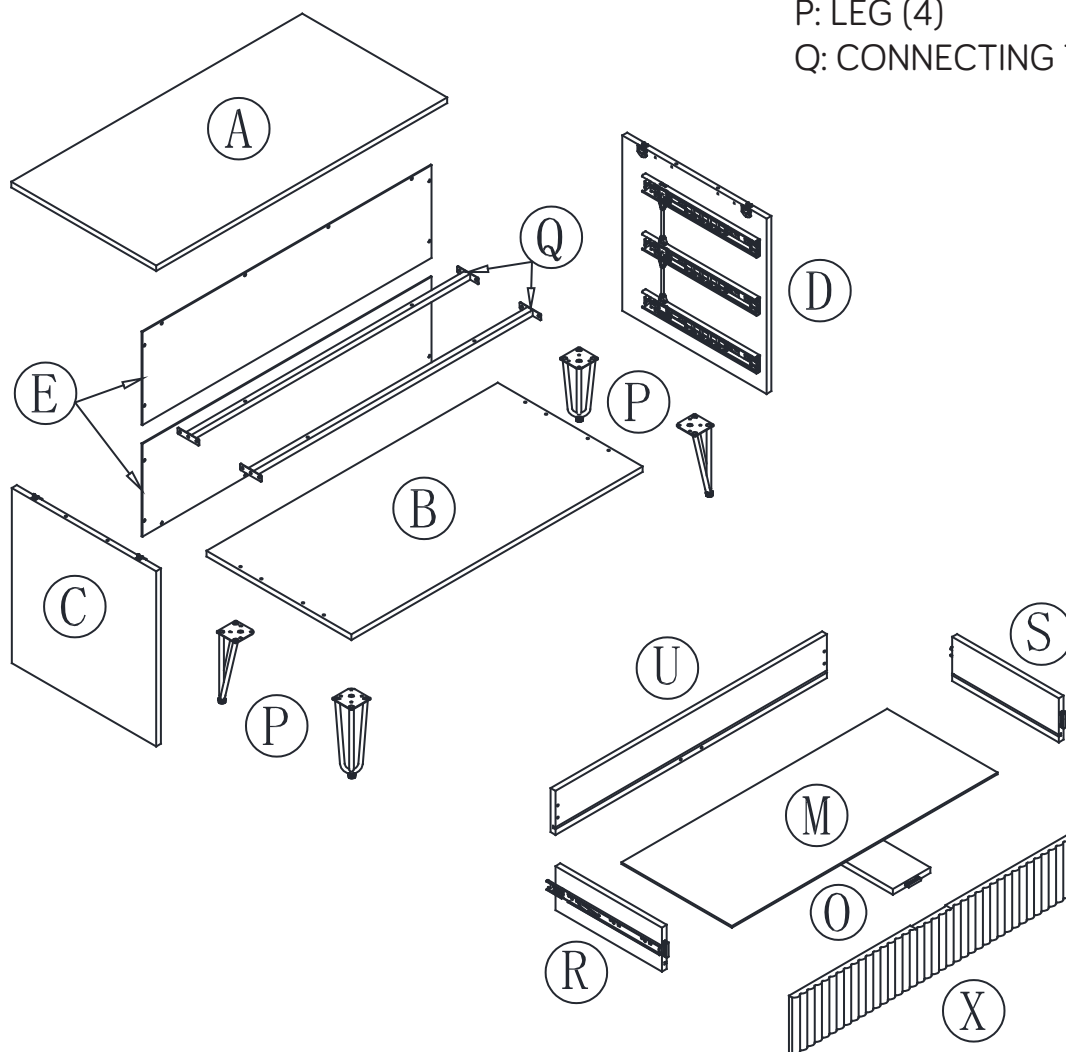

Hardware Identification


- ① BOLT - 22pcs
M4*30mm




- ② BOLT - 46pcs
M4*12mm




- ③ BOLT - 4pcs
M4*25mm




- ④ PULL - 3pcs

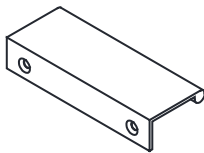



- ⑤ WOOD DOWEL - 8pcs
Ø6*30mm



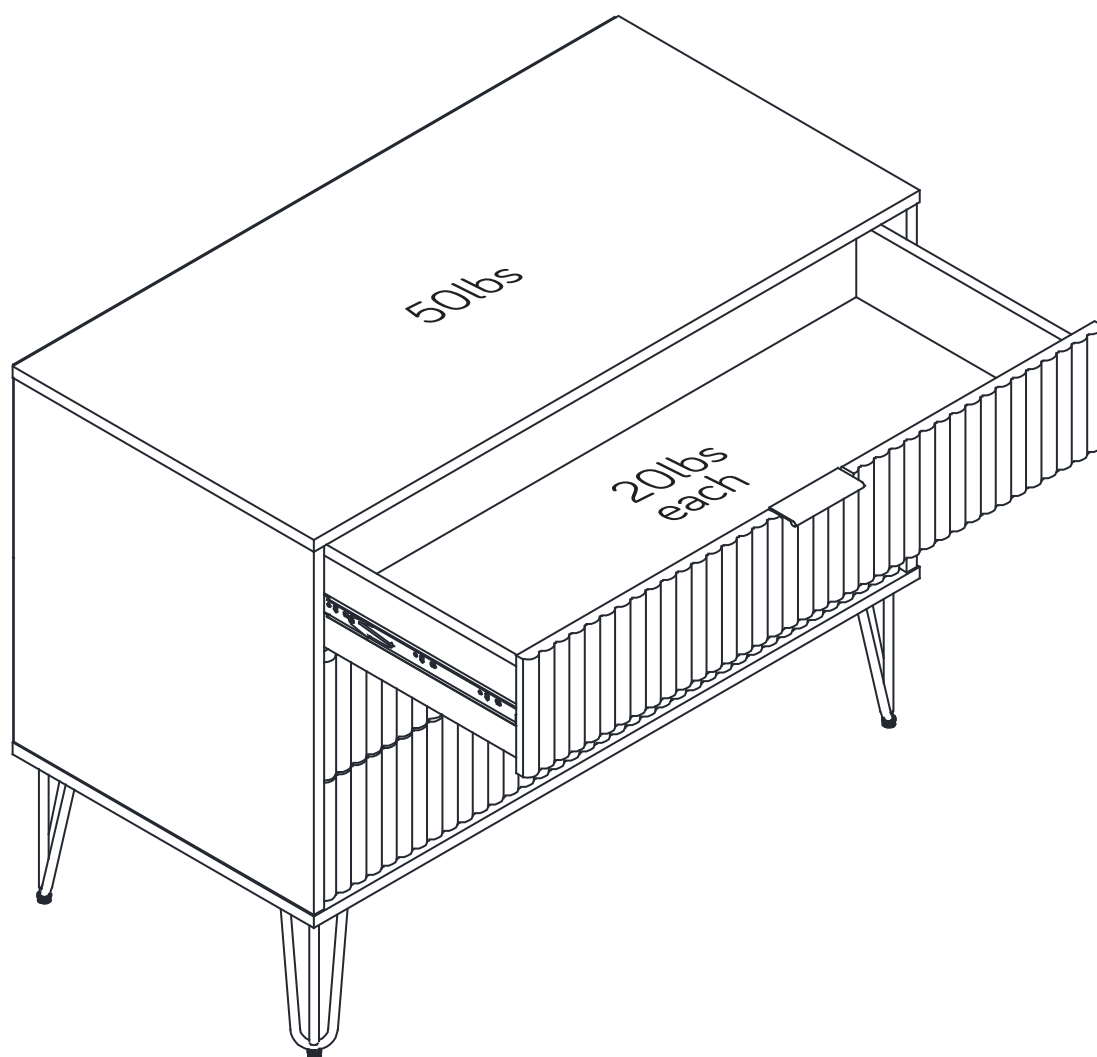


Step 1

- ◆ Insert four WOOD DOWELS (5) to the BOTTOM (B).
- ◆ Attach the BOTTOM (B) to the ENDS (C and D), fasten the BOTTOM (B) by using four BOLTS (1).

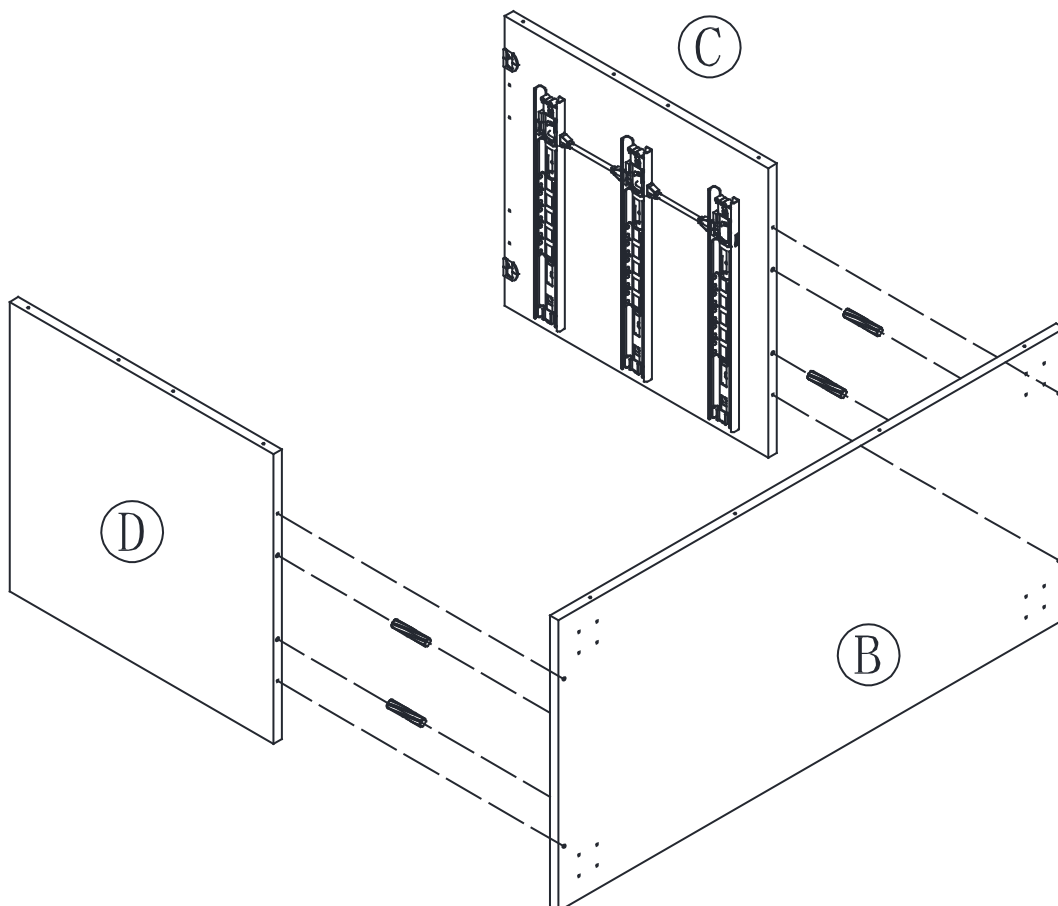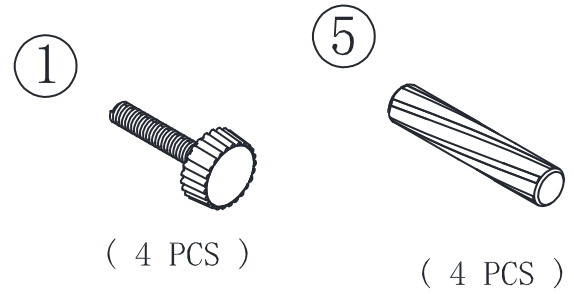


Step 2

- ◆ Attach the two CONNECTING TUBE (Q) to ENDS (C and D) by using eight BOLTS (2).

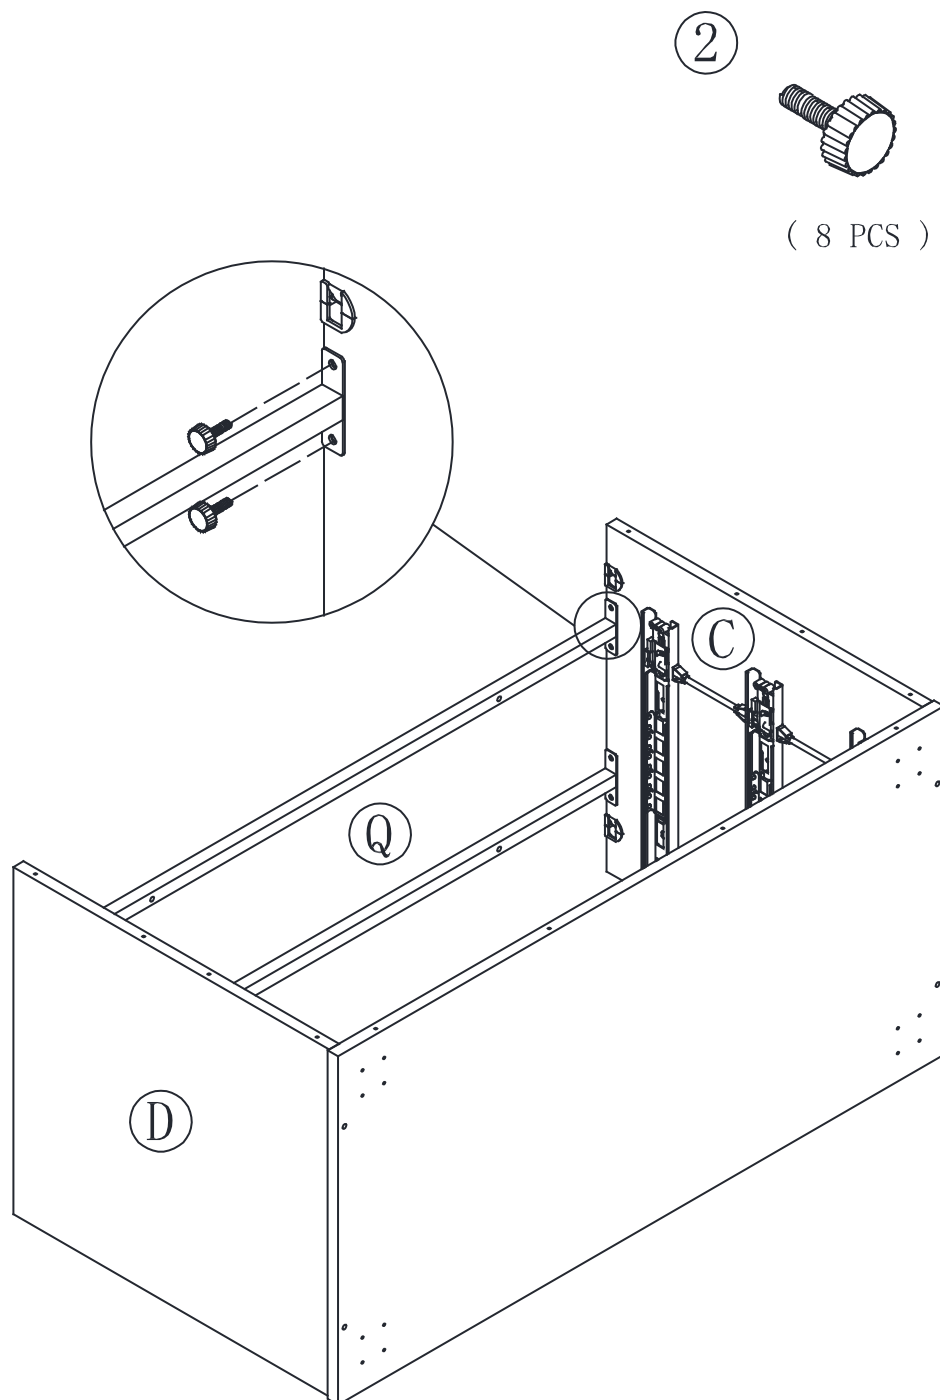



Step 3

- ◆ Insert four WOOD DOWELS (5) to the TOP (A).
- ◆ Attach the TOP (A) to the ENDS (C and D), tighten four PLASTIC CAM LOCKS.

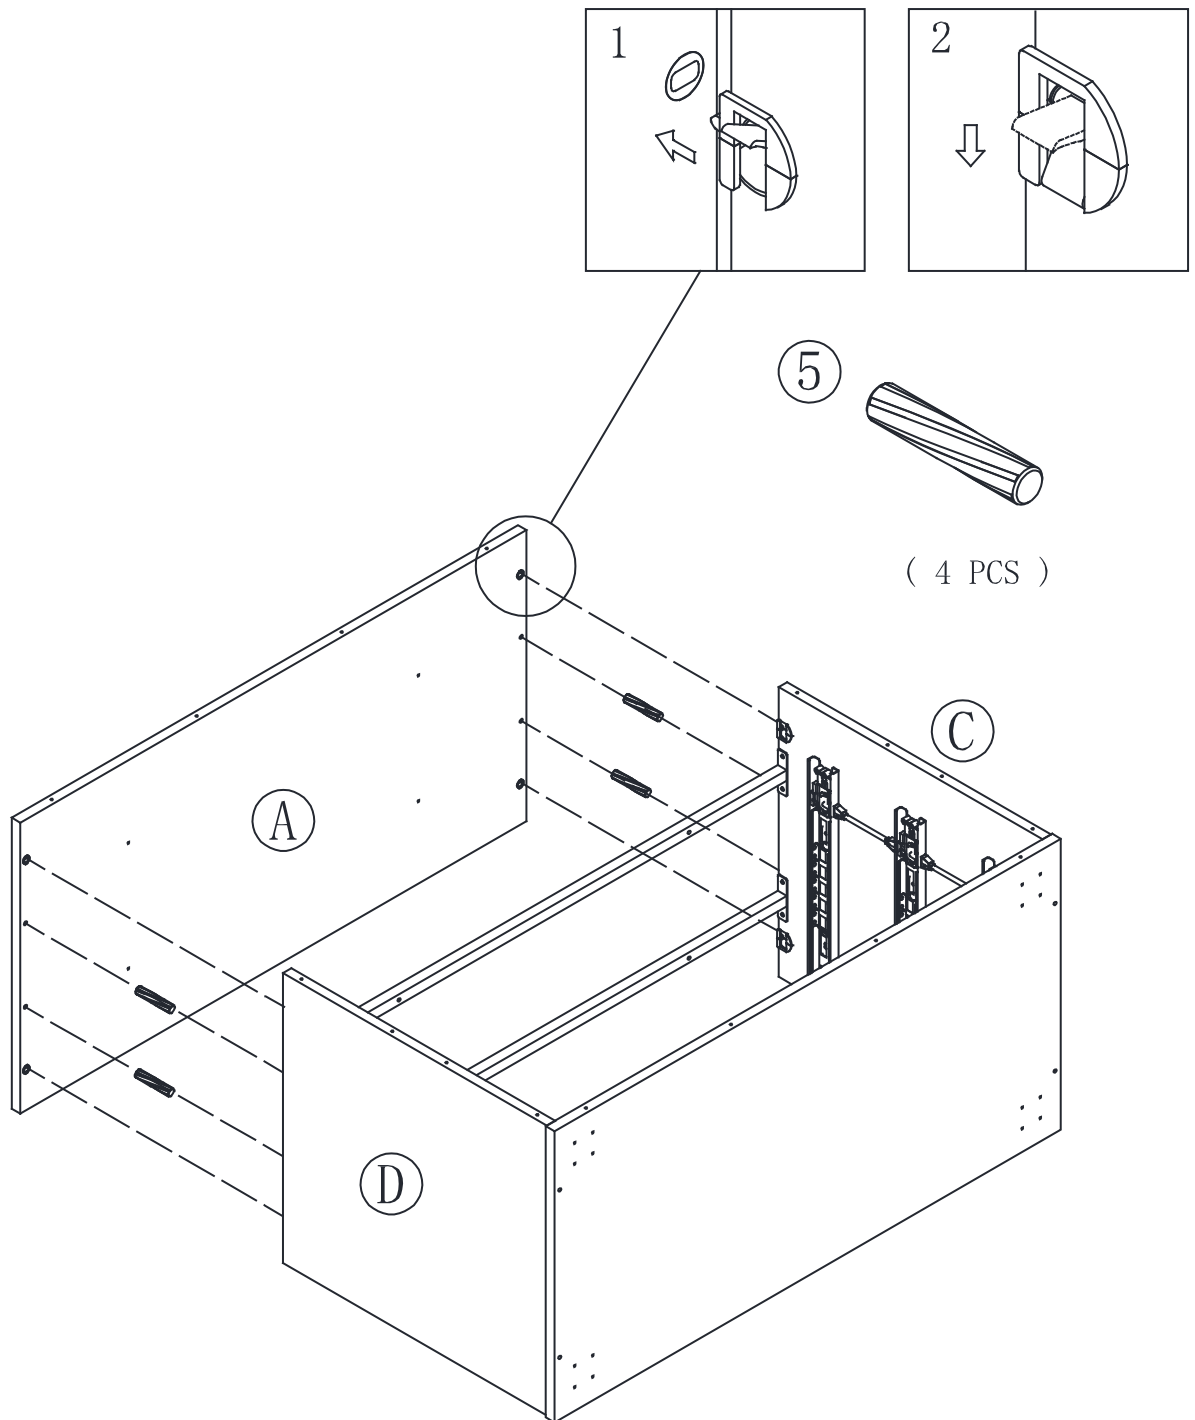

Step 4

- ◆ Fasten the two CONNECTING TUBE (Q) to the TOP (A) by using four BOLTS (3).

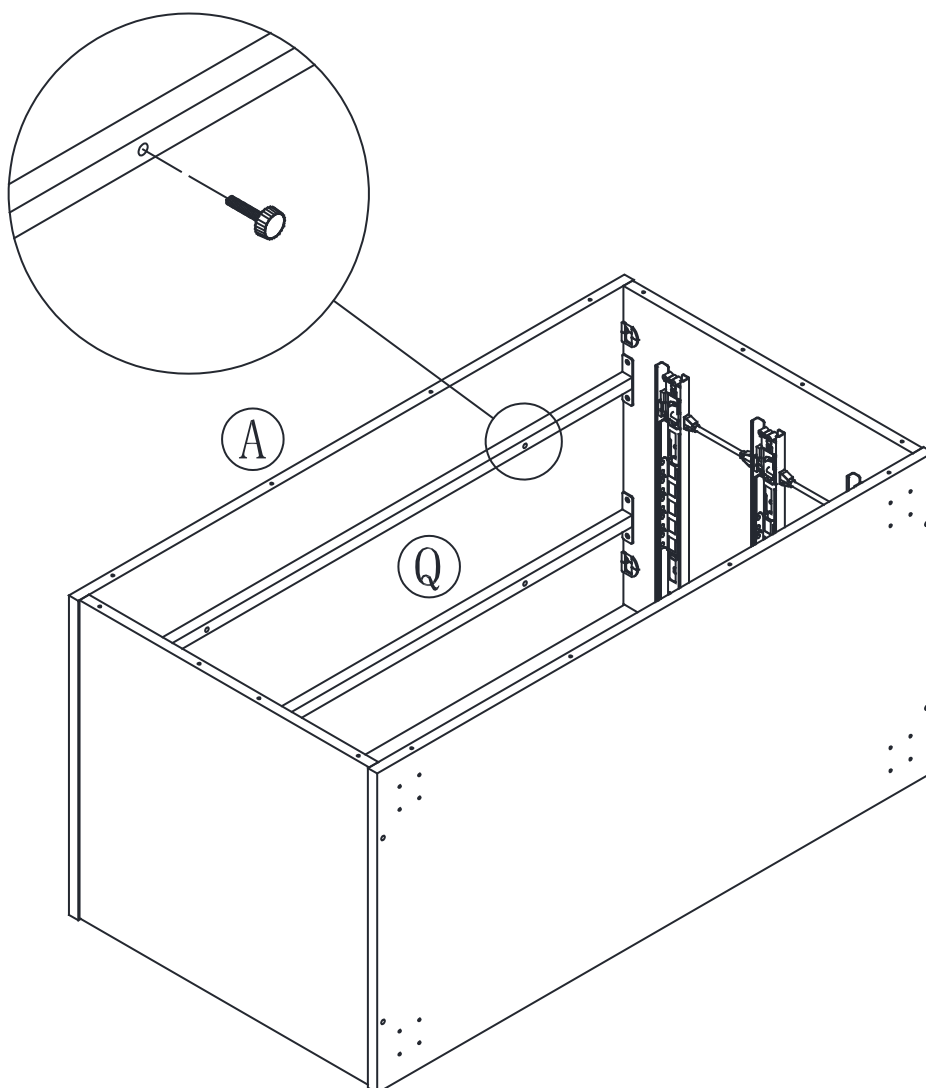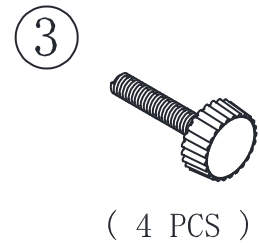


Step 5

- ◆ Fasten the BACKS (E) to the TOP (A), ENDS (C and D) and the BOTTOM (B) by using sixteen BOLTS (2).
- ◆ You should start each BOLT a few turns before completely tightening any of them.

②



(16 PCS)

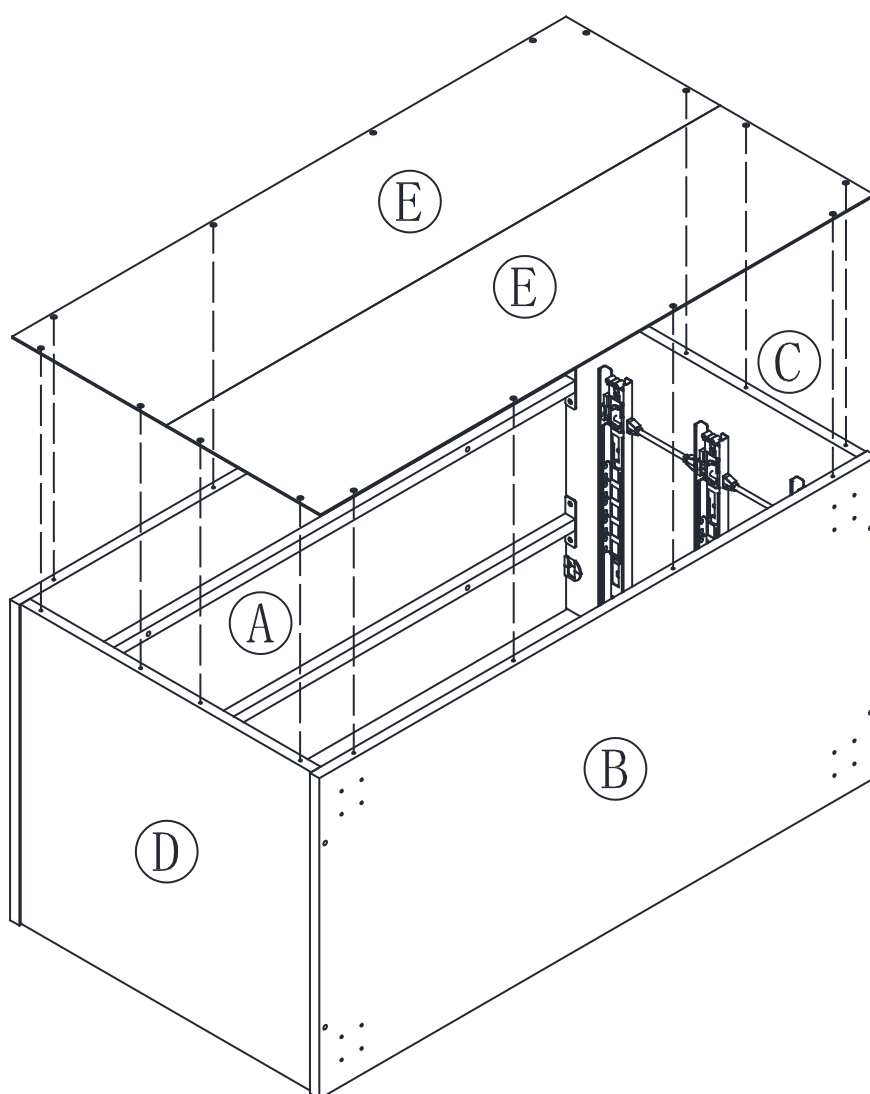


Step 6

- ◆ Fasten the LEGS (P) to the BOTTOM (B) by using sixteen BOLTS (2).

②




(16PCS)

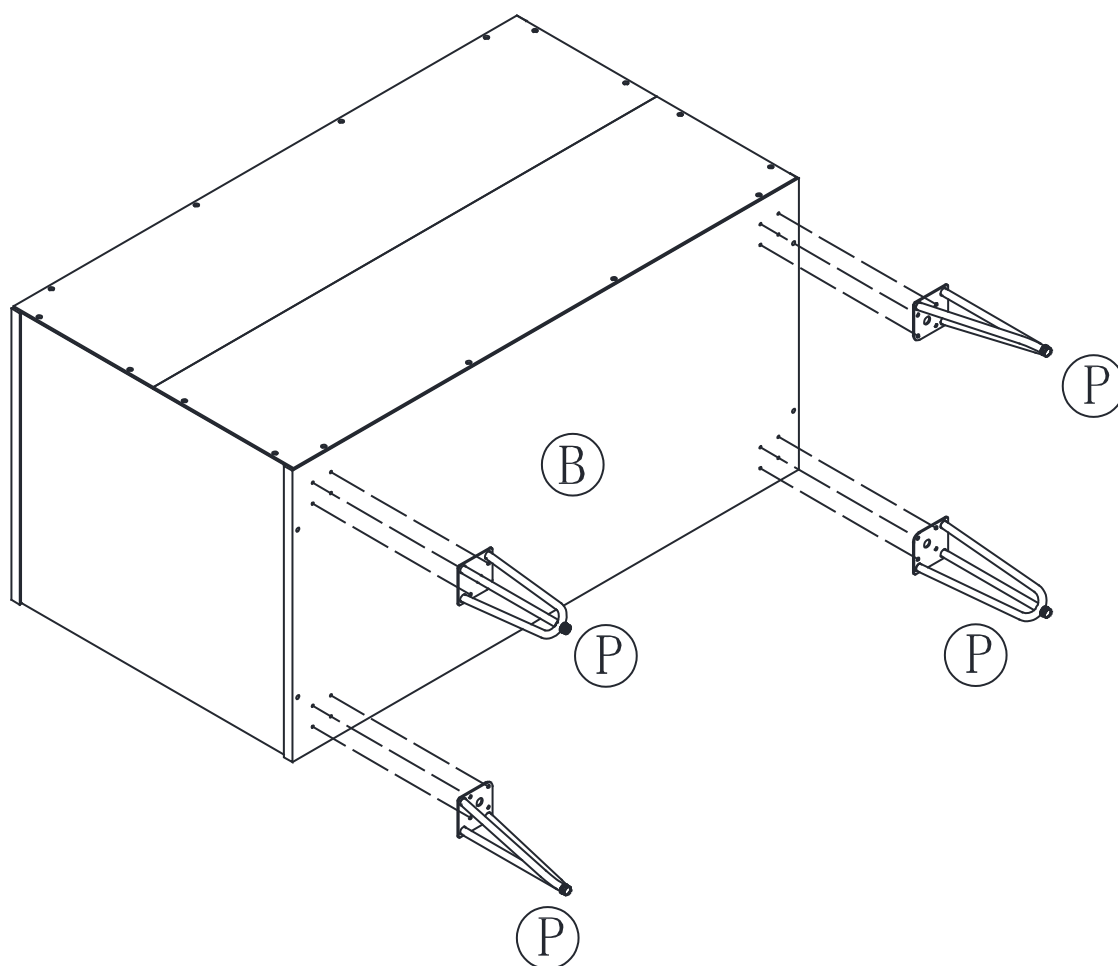


Step 7

- ◆ Attach the DRAWER SIDES (S and R) to the DRAWER FRONT (X), slide the PLASTIC CONNECTIONS to the grooves.

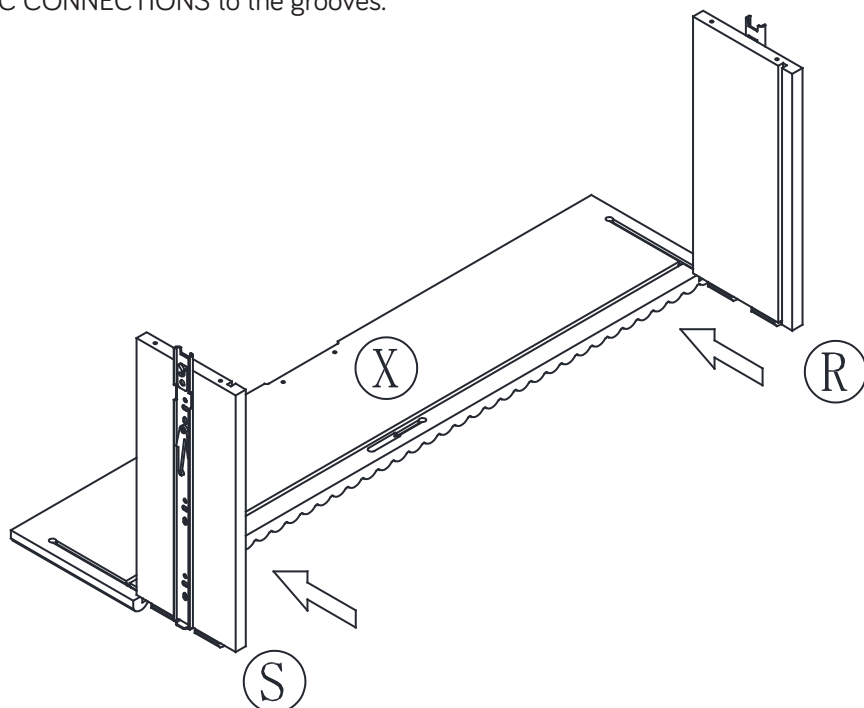


- ◆ Slot the DRAWER BOTTOM SUPPORT (O) to the DRAWER FRONT (X).

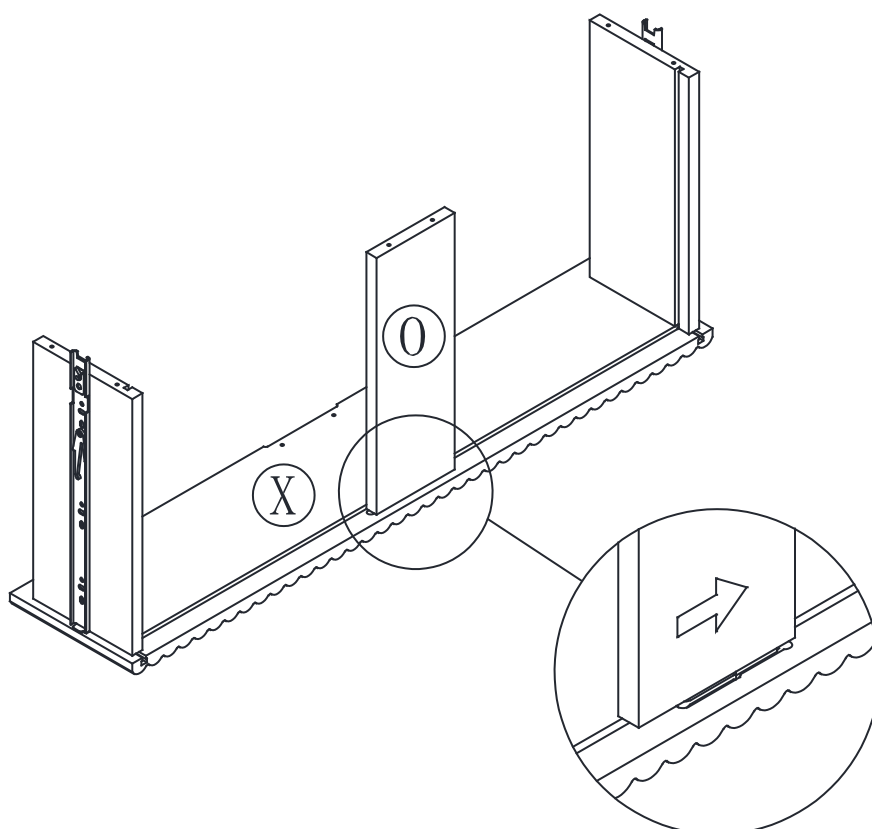

Step 8


- ◆ Slide the DRAWER BOTTOM (M) into the grooves, in the DRAWER SIDES (S and R), and the DRAWER FRONT (X).

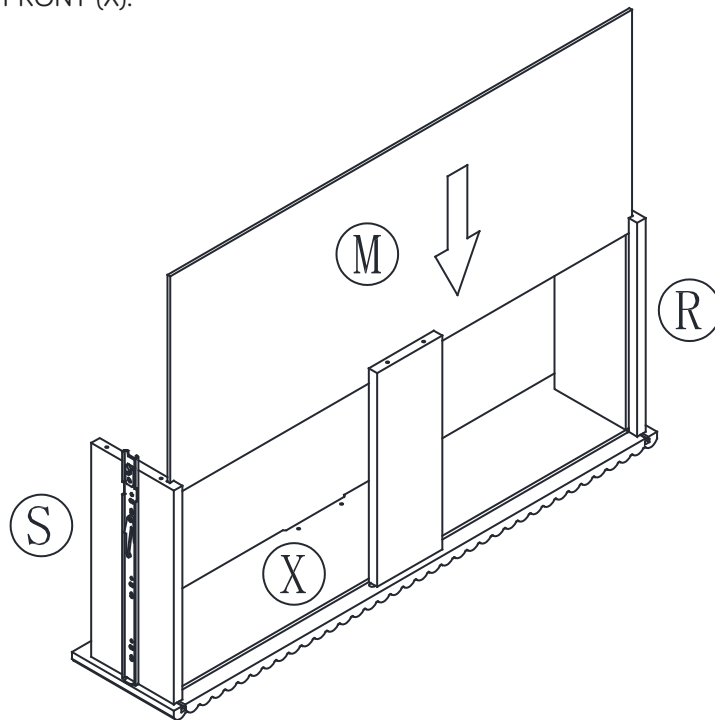

X 3

- ◆ Fasten the DRAWER BACK (U) to the DRAWER SIDES (S and R) by using six BOLTS (1).

Repeat the Step 7 and Step 8 on the other drawers.

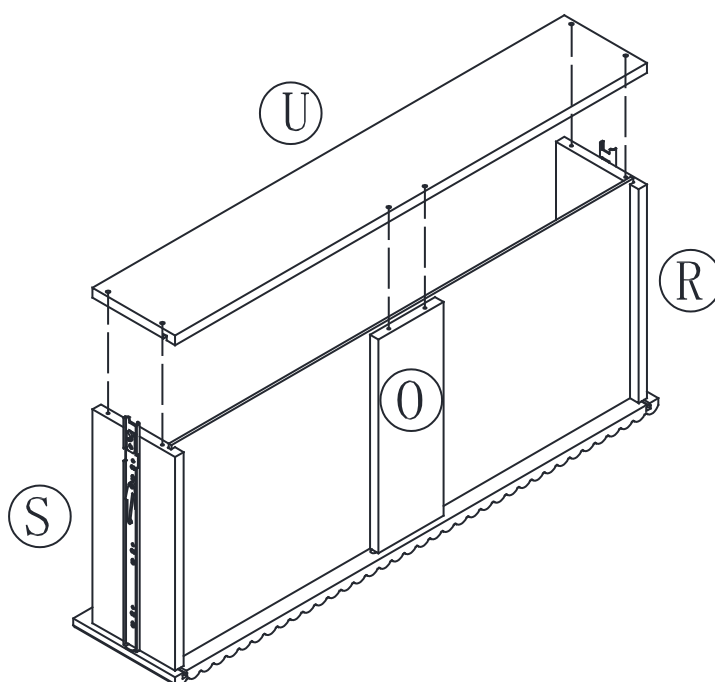

①



(18 PCS)

X 3

Step 9


- ◆ Use two BOLTS (2) to fasten the PULL (4) to DRAWER FRONT (X).

Repeat the same on the other drawer.

②



(6PCS)

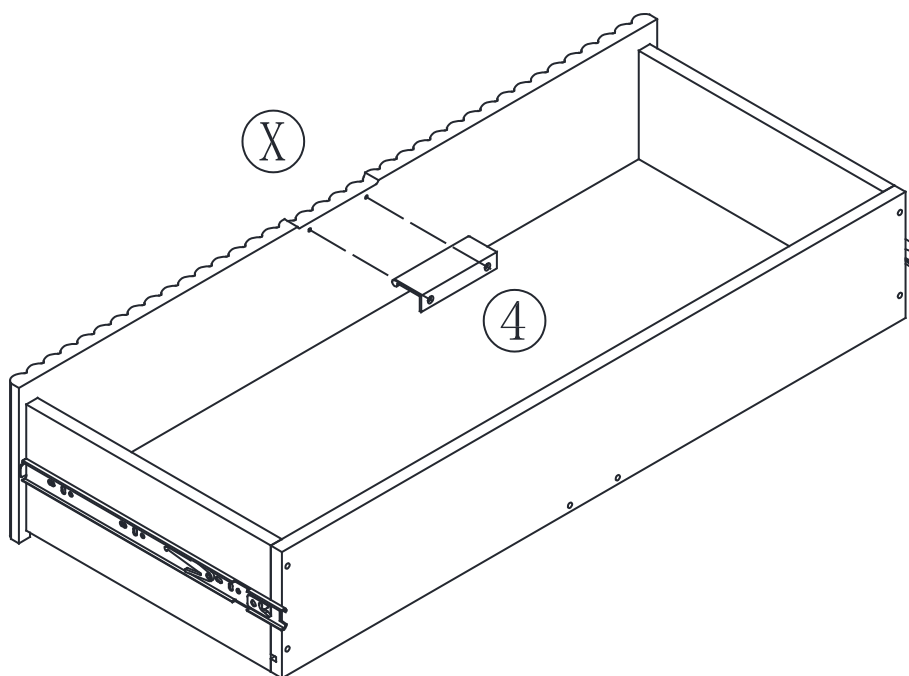


X 3

Step 10


To insert the DRAWER into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS on the unit and push the drawer into the unit.

- ◆ Before the drawer is fully inserted, please make sure the interlock pins on the EXTENSION SLIDES on the drawer is pushed forward as shown on the diagram. The drawer should push in hard until it is all the way in, then it will slide in and out easier.



Attention: This unit used Drawer Interlocking System, when one drawer is open, the other drawers cannot be opened.

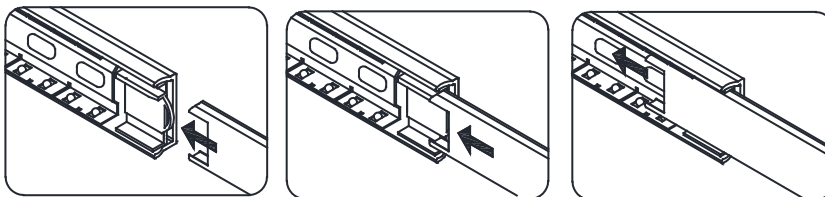


On the Left EXTENSION SLIDES,
please make sure the small pin is upward.

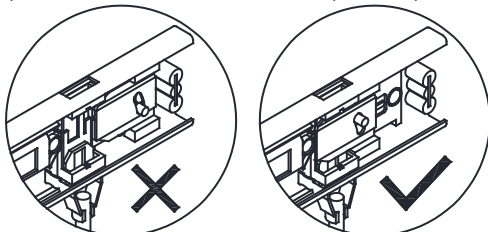

On the Right EXTENSION SLIDES,
please make sure the small pin is downward.

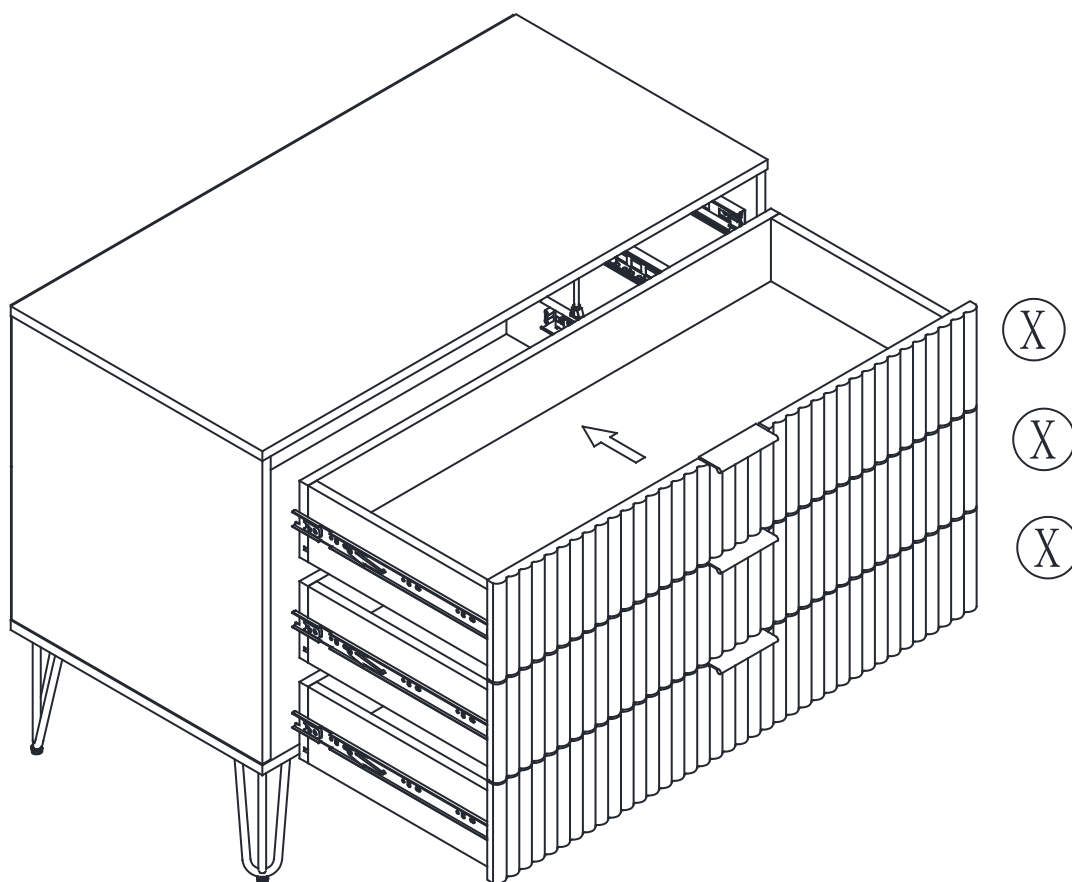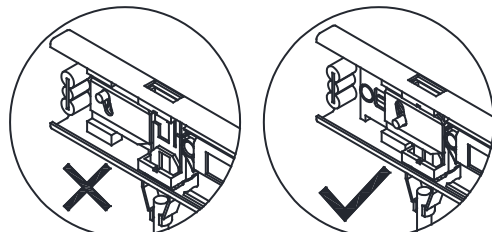

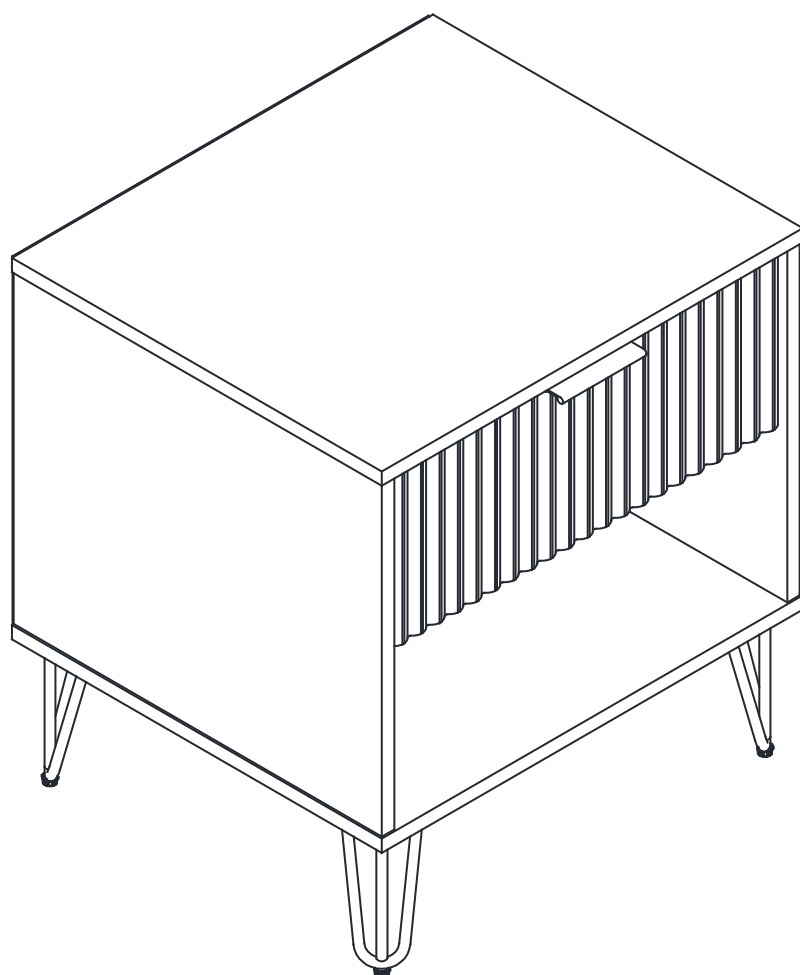




STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

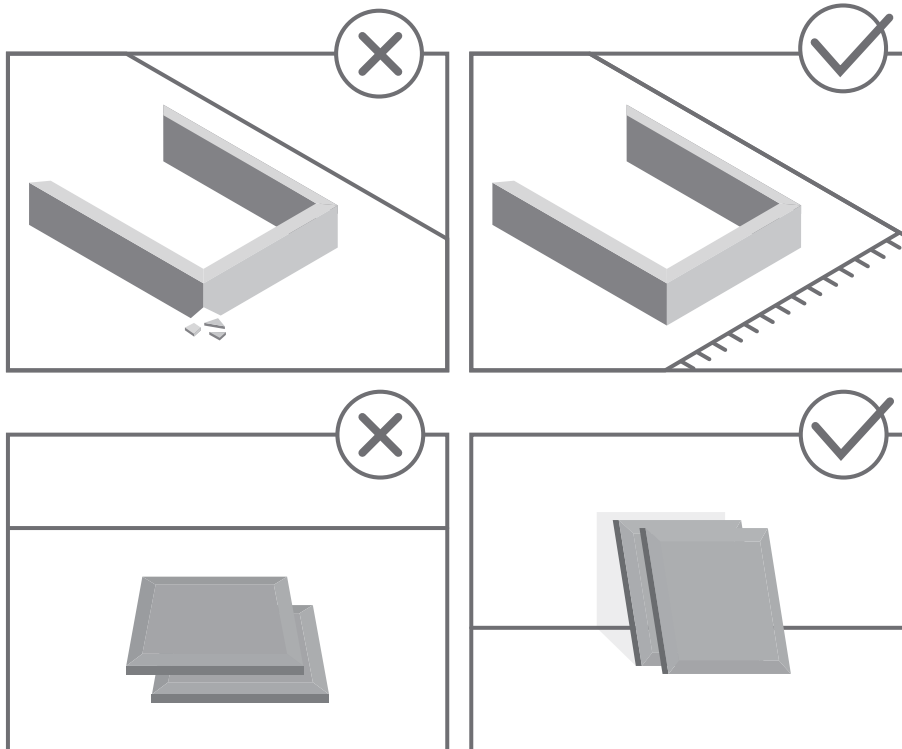


Included in this package:

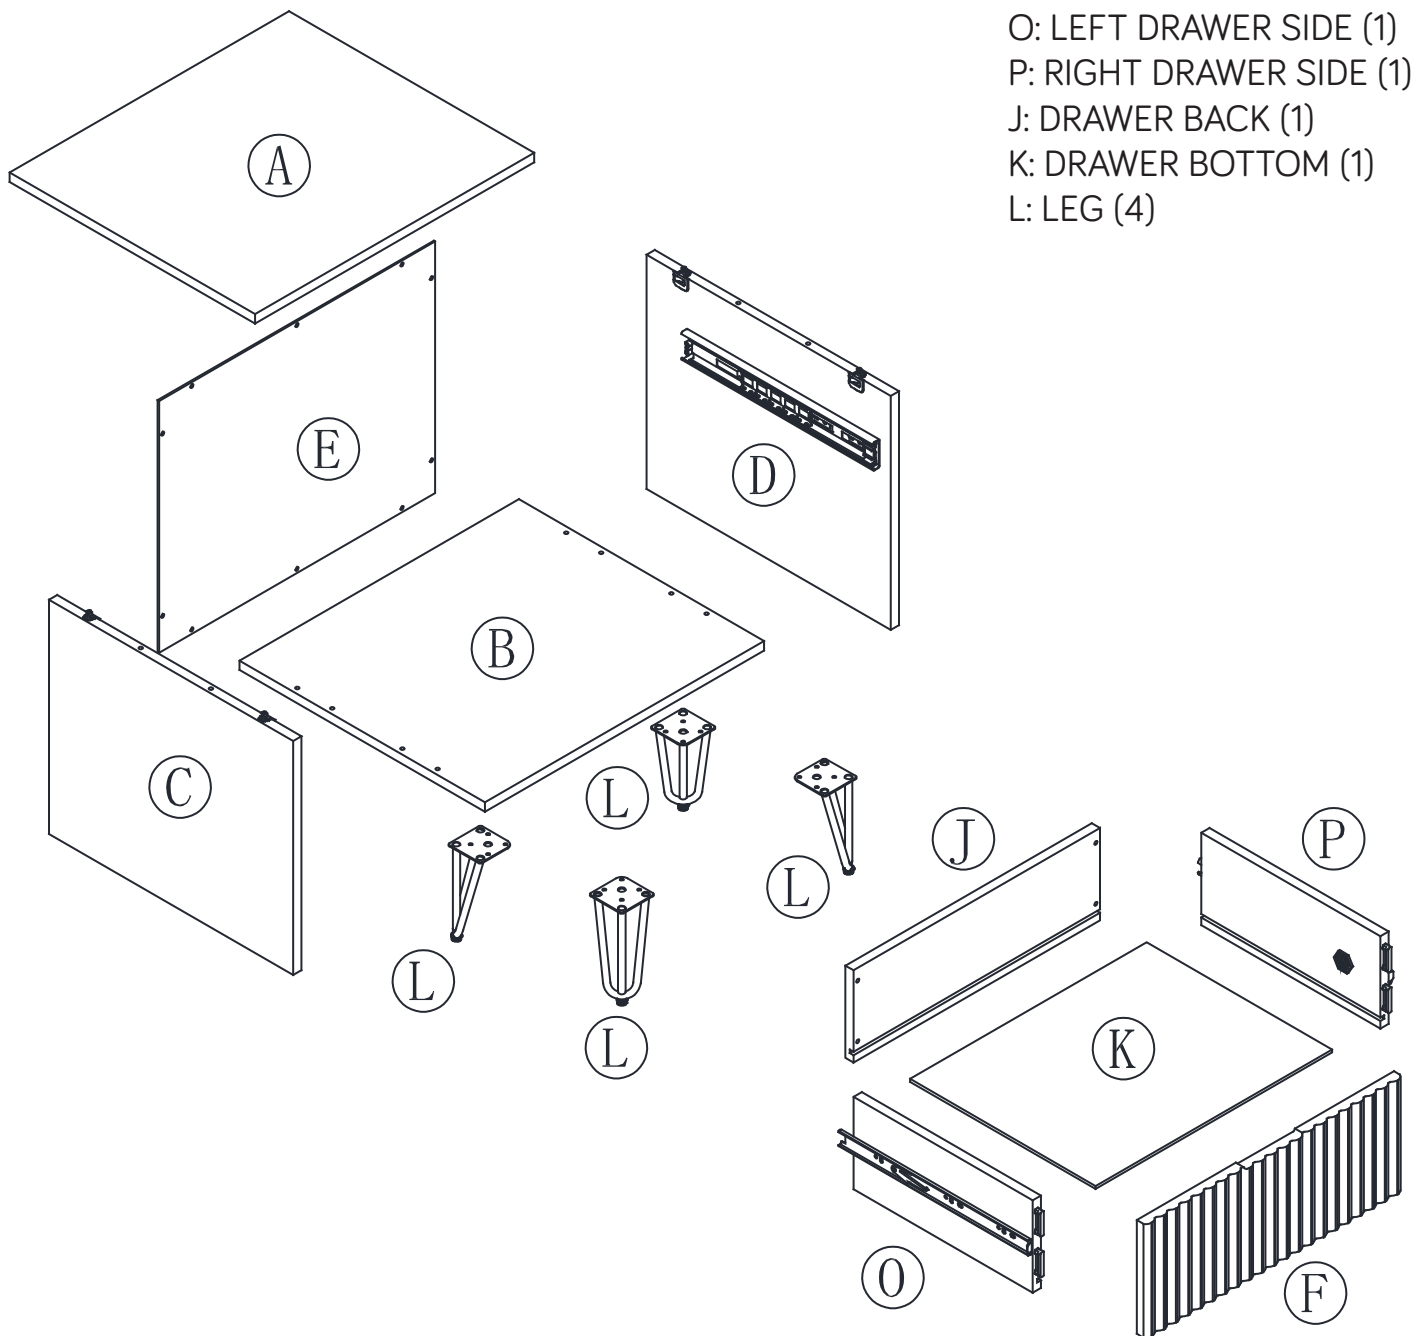


Hardware Identification


- ① BOLT - 8pcs
M4*30mm




- ② BOLT - 28pcs
M4*12mm




- ③ WOOD DOWEL - 8pcs
Ø6*30mm




- ④ PULL - 1pc

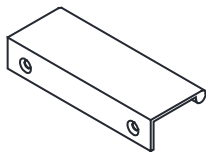

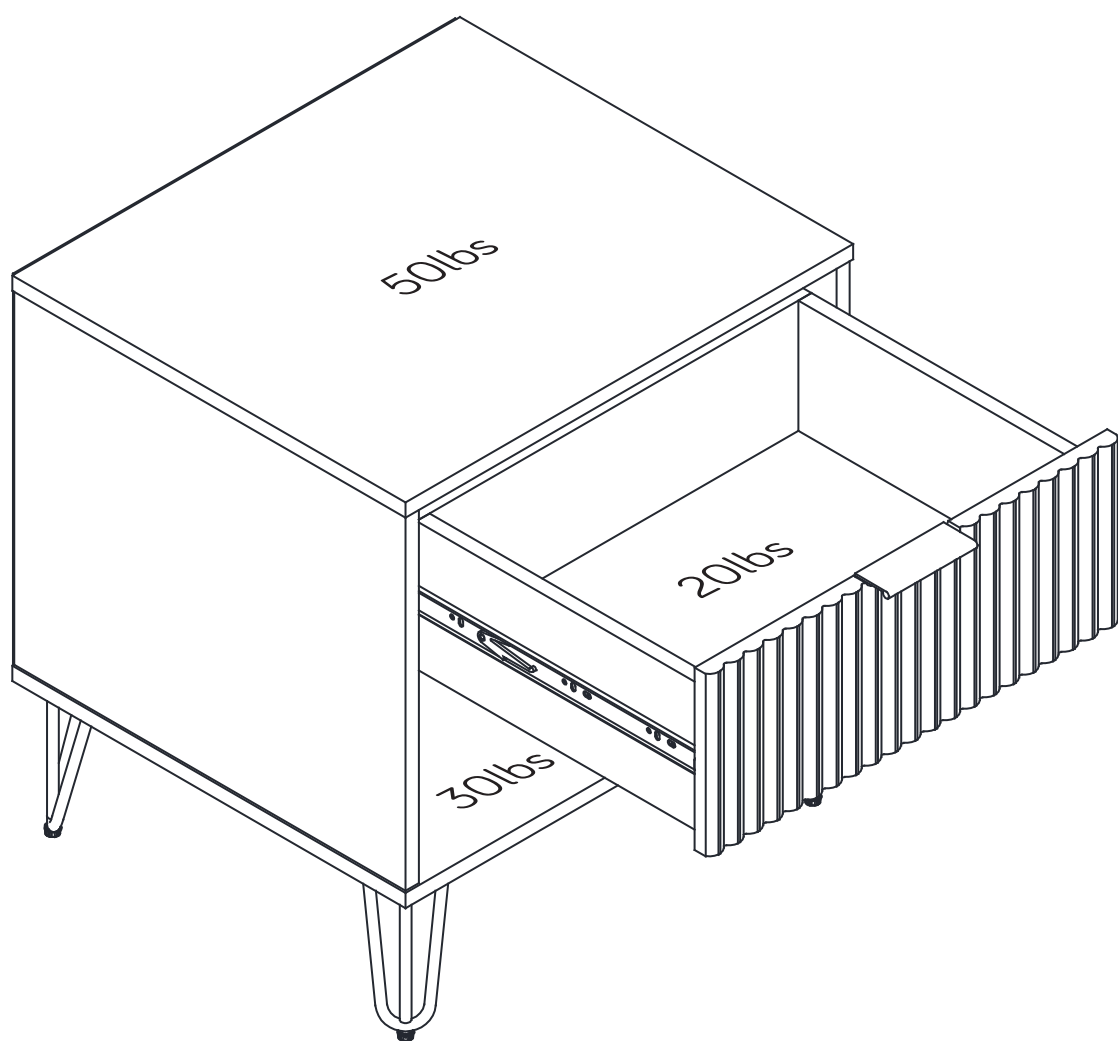




Step 1

- ◆ Insert four WOOD DOWELS (3) to the BOTTOM (B).
- ◆ Attach the BOTTOM (B) to the ENDS (C and D), fasten the BOTTOM (B) by using four BOLTS (1).

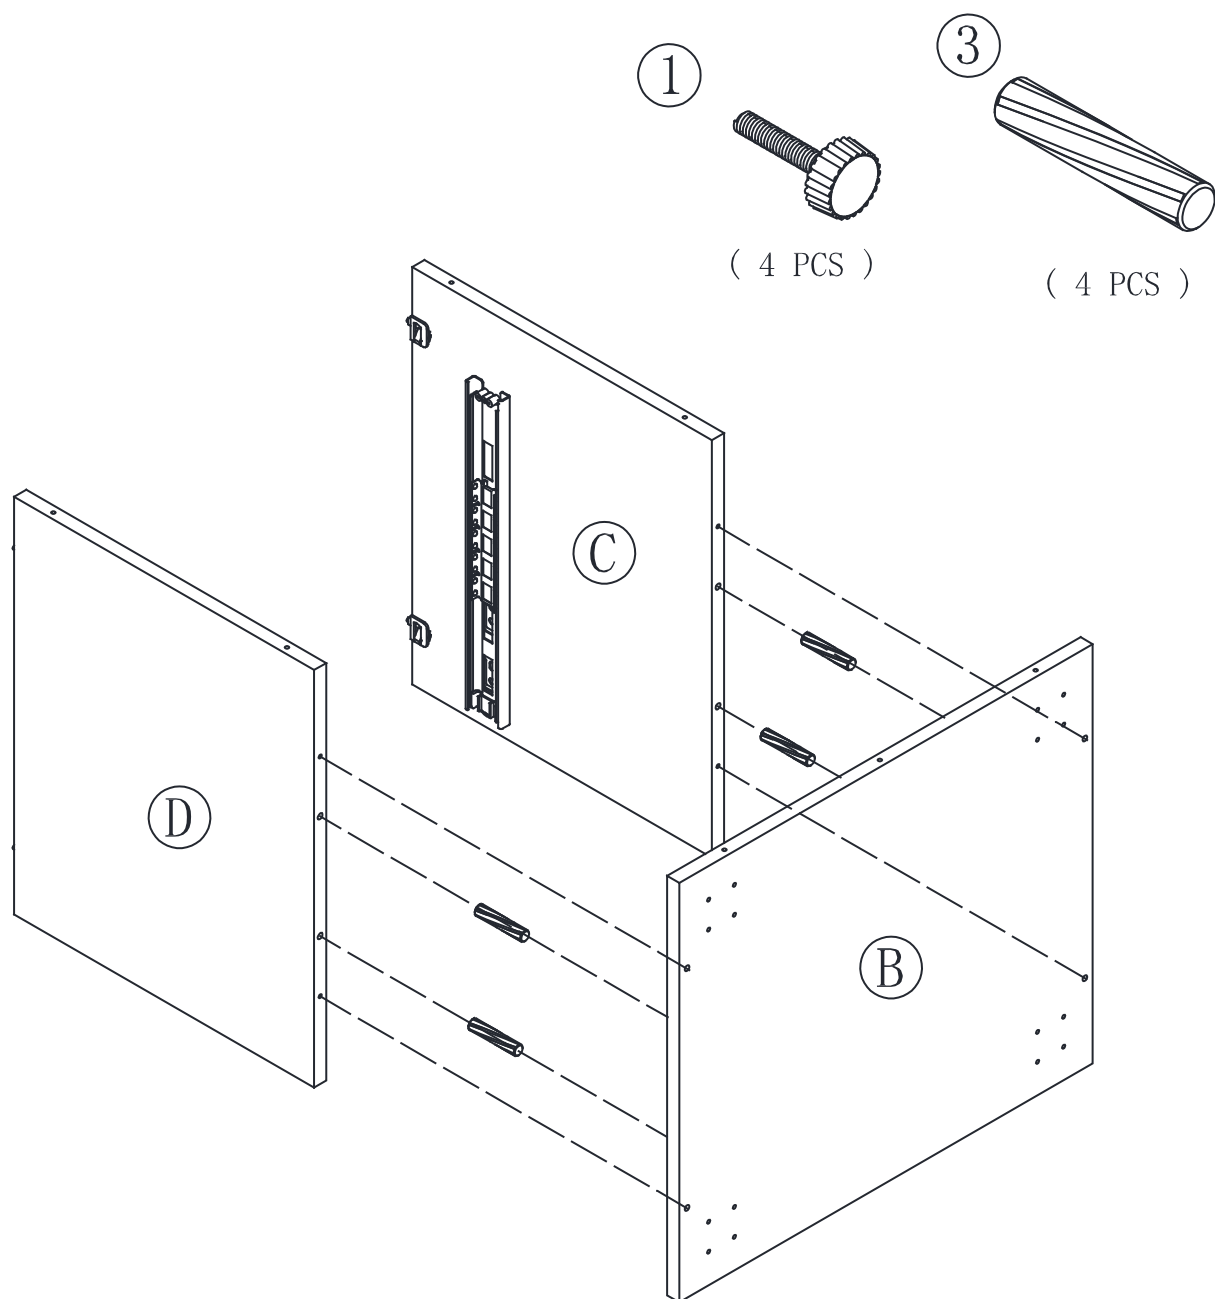

Step 2


- ◆ Insert four WOOD DOWELS (3) to the TOP (A).
- ◆ Attach the TOP (A) to the ENDS (C and D), tighten four PLASTIC CAM LOCKS.

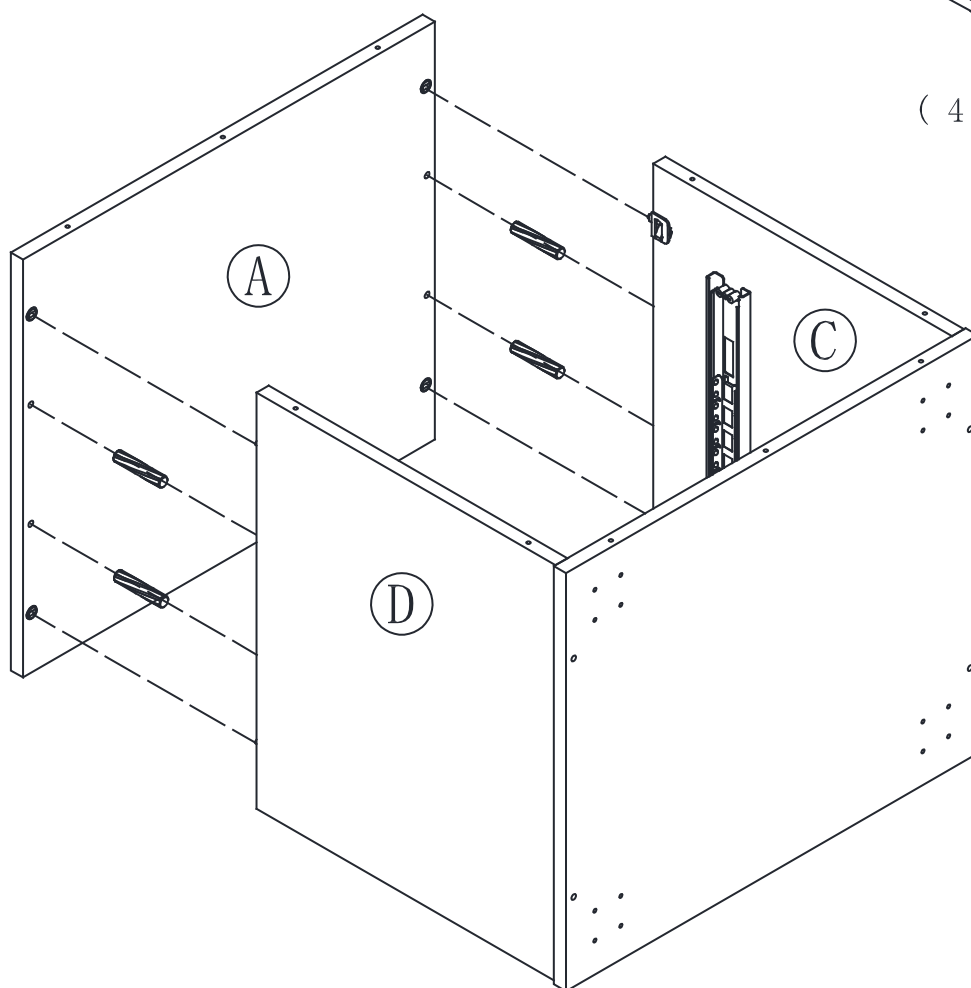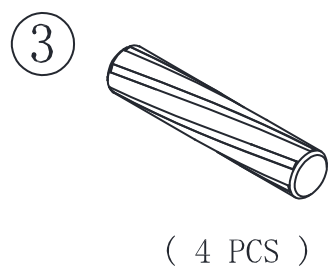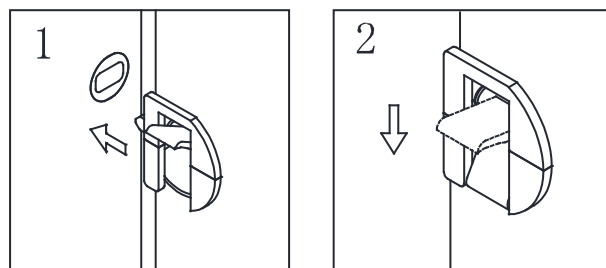


Step 3

- ◆ Fasten the BACK (E) to the TOP (A), ENDS (C and D) and the BOTTOM (B) by using ten BOLTS (2).
- ◆ You should start each BOLT a few turns before completely tightening any of them.

②




(10 PCS)

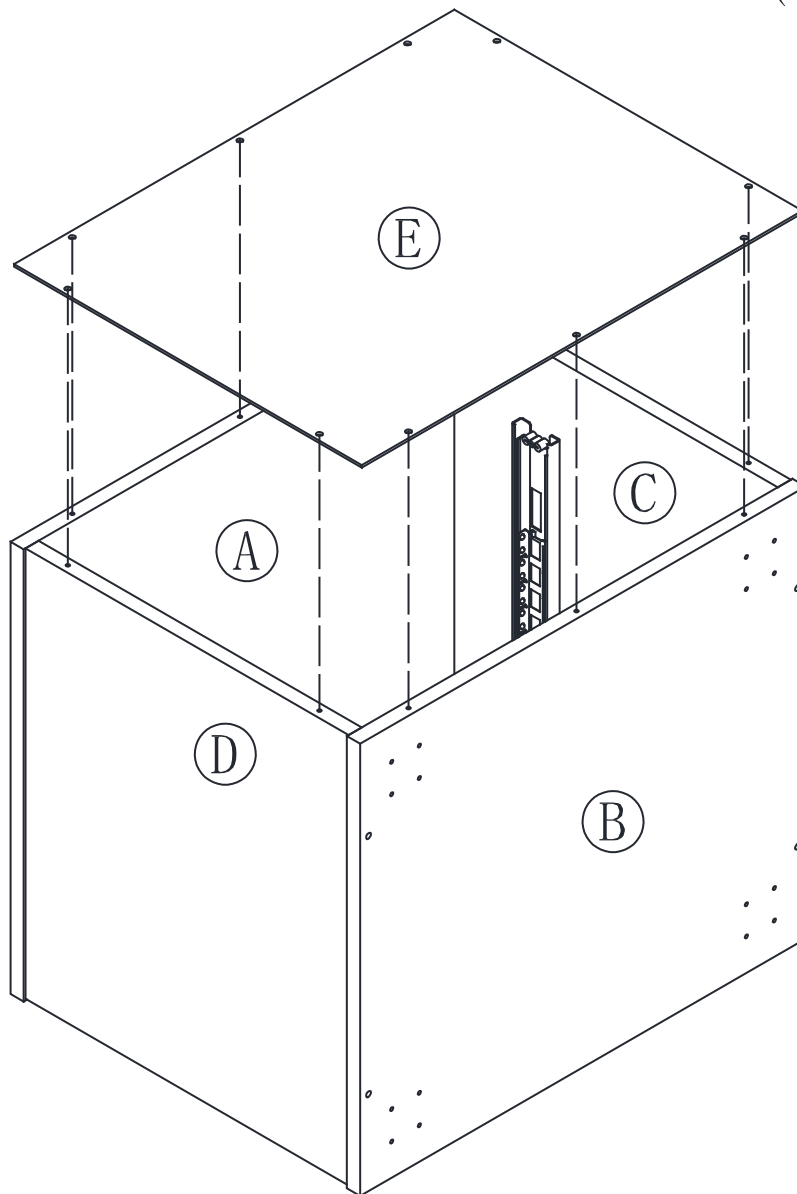


Step 4

- ◆ Fasten the LEGS (L) to the BOTTOM (B) by using sixteen BOLTS (2).

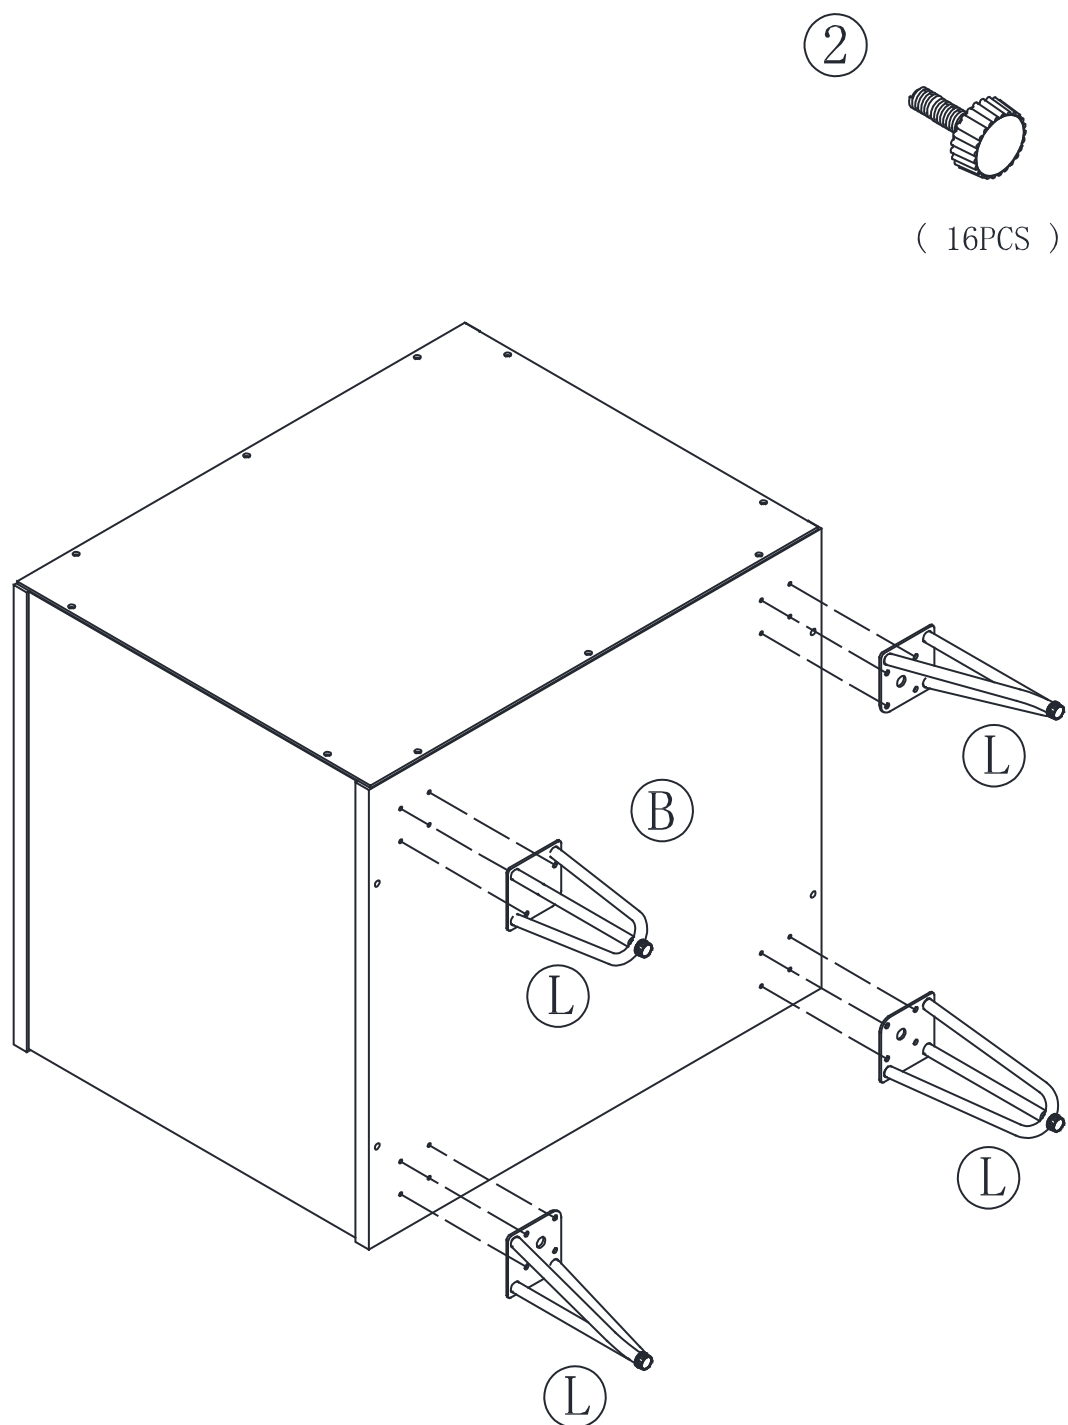


Step 5

- ◆ Attach the DRAWER SIDES (O and P) to the DRAWER FRONT (F), slide the PLASTIC CONNECTIONS to the grooves.


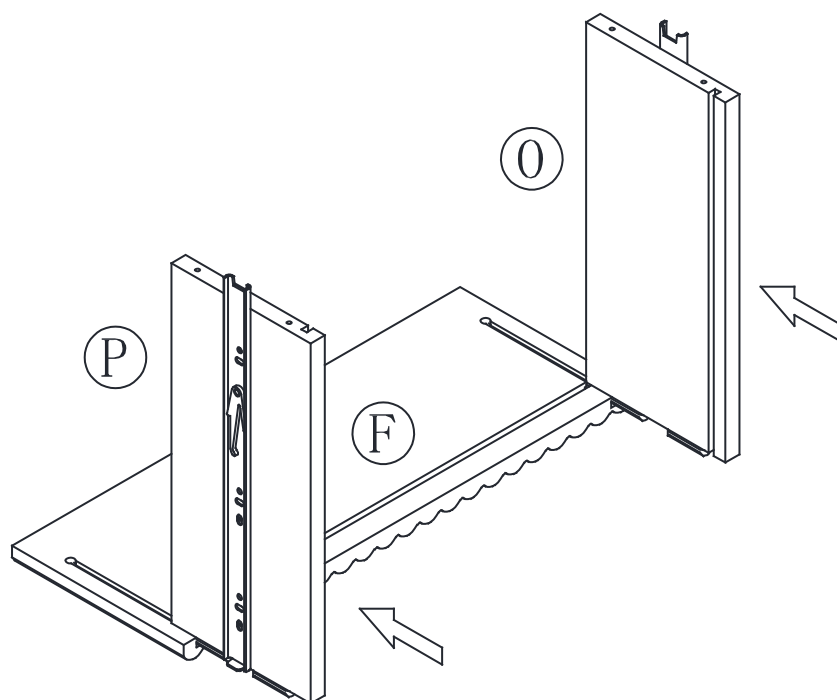


- ◆ Slide the DRAWER BOTTOM (K) into the grooves, in the DRAWER SIDES (O and P), and the DRAWER FRONT (F).


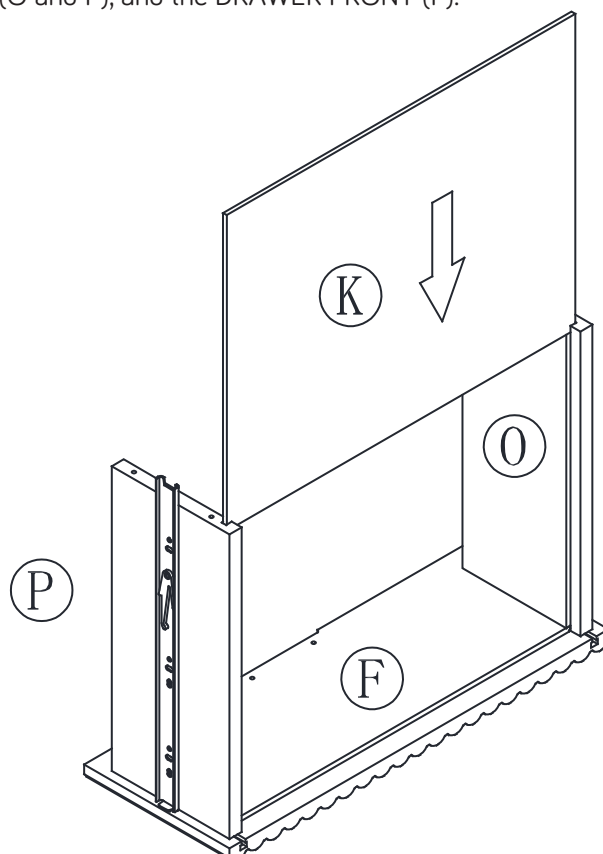


Step 6

- ◆ Fasten the DRAWER BACK (J) to the DRAWER SIDES (O and P) by using four BOLTS (1).

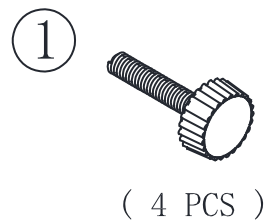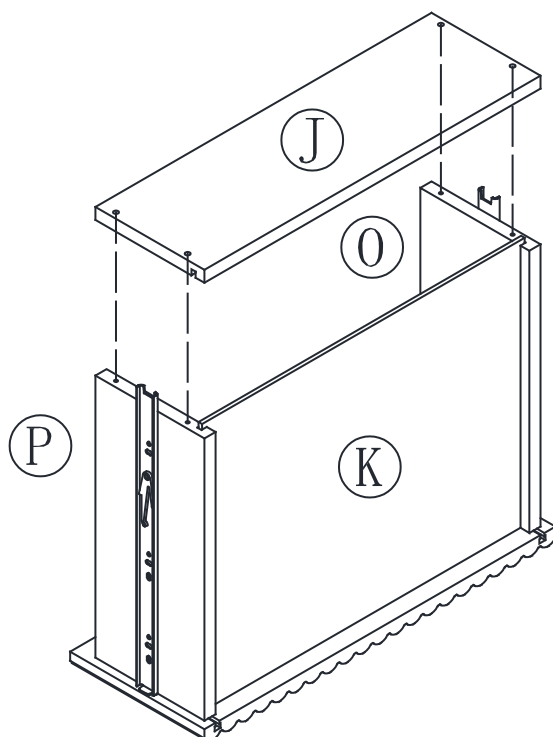

- ◆ Use two BOLTS (2) to fasten the PULL (4) to DRAWER FRONT (F).

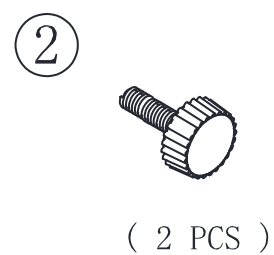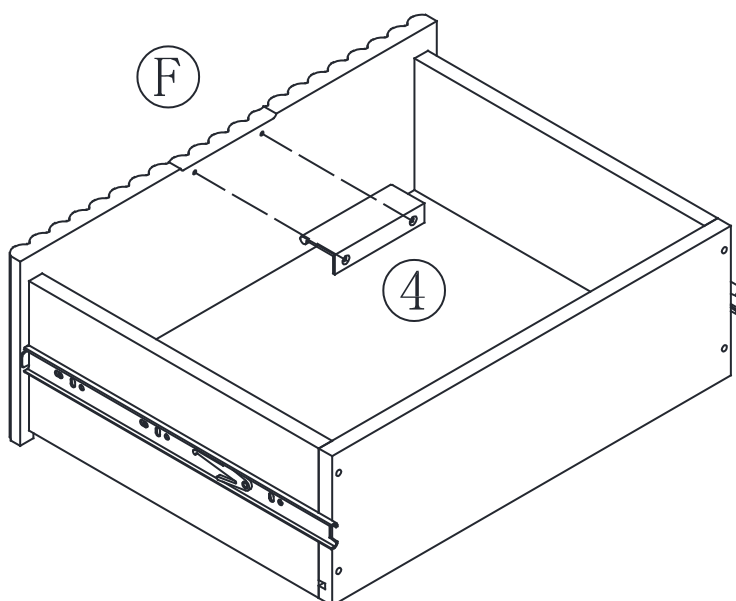

Step 7

To insert the DRAWER into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS

- ◆ on the unit and push the drawer into the unit until the drawer is fully inserted.
The drawer should push in hard until it is all the way in , then it will slide in and out easier.

