


The indicated values consider static weights and evenly distributed over the parts.




WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.


INCLUDED IN THE PACKAGE

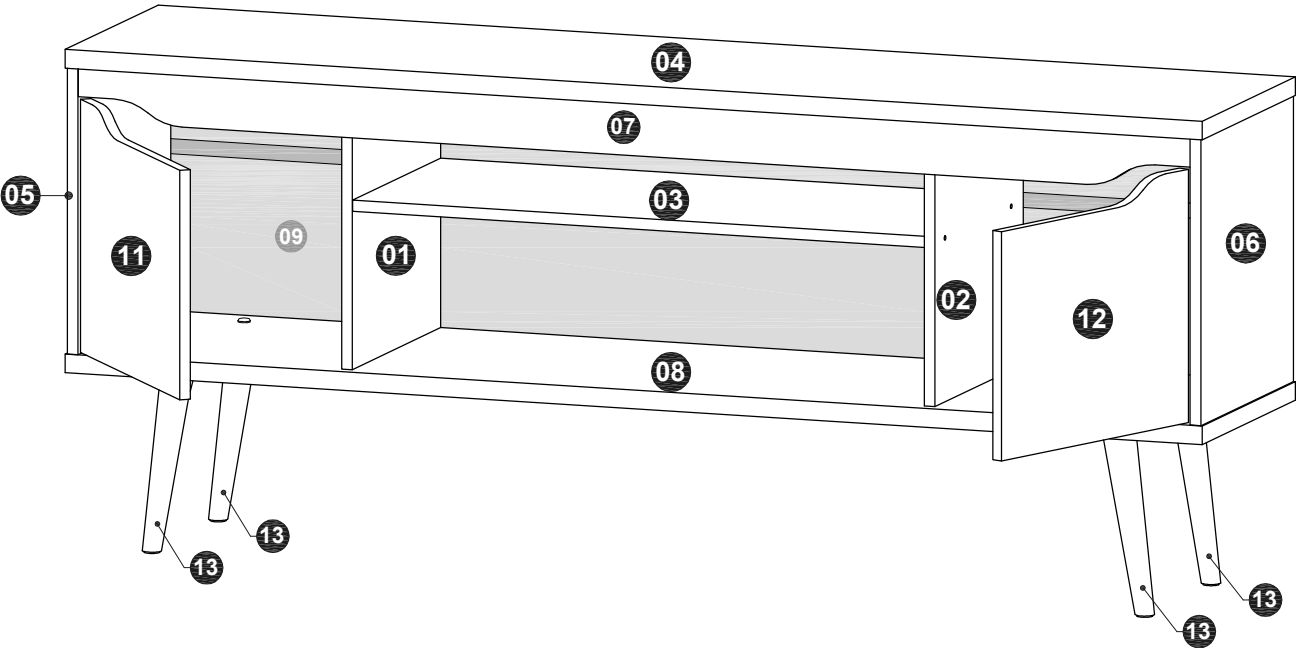

REAR VIEW

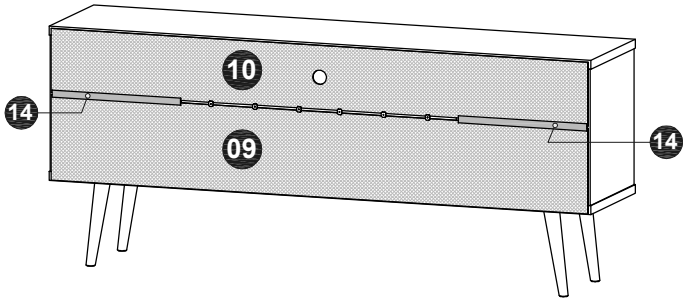



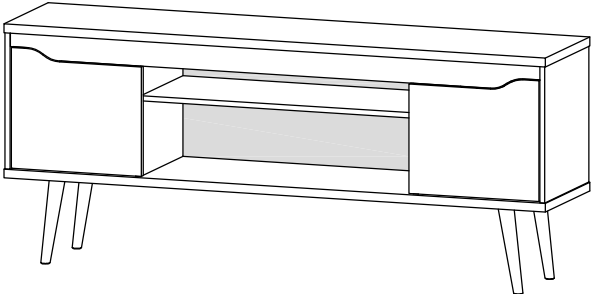

FINAL APPEARANCE - FRONT VIEW


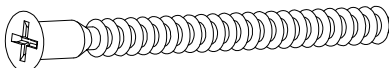
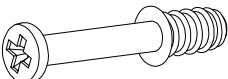
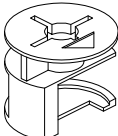
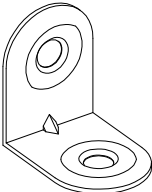



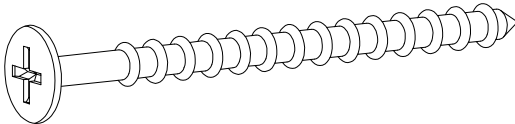
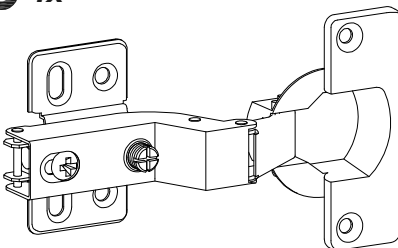

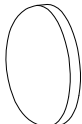



n.° ID	Parts Identification (Description)	Quantity
01	Left Partition	1
02	Right Partition	1
03	Middle Shelf	1
04	Top Panel	1
05	Left Side Panel	1
06	Right Side Panel	1
07	Front Frame	1
08	Base	1
09	Lower Back Panel	1
10	Upper Back Panel	1
11	Left Door	1
12	Right Door	1
13	Wood Feet H240mm	4
14	Plastic Profile "H" (380mm)	2


TOOLS NEEDED

  	
--	---

INCLUDED IN THE HARDWARE

A 20x 	B 12x 	C 8x 	
D 8x 	E 8x 	F 16x 	
G 6x 	H 55x 	I 4x 	
J 4x 	K 24x 	L 4x 	M 4x 


STEP 1

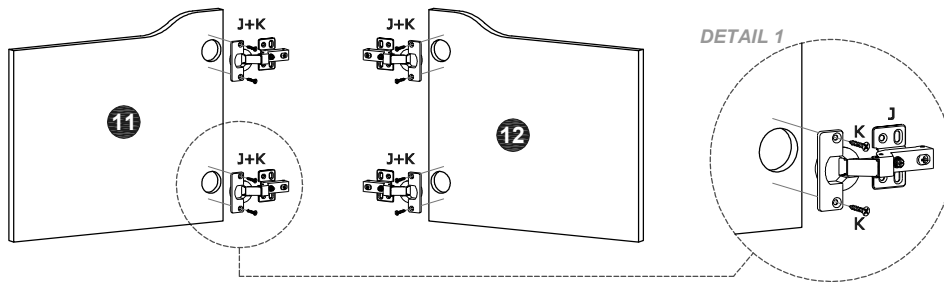

Preparing the Doors:


- Fix the hinges (J) in the Doors (11) and (12) with bolts (K), as shown in DETAIL 1.

STEP 2

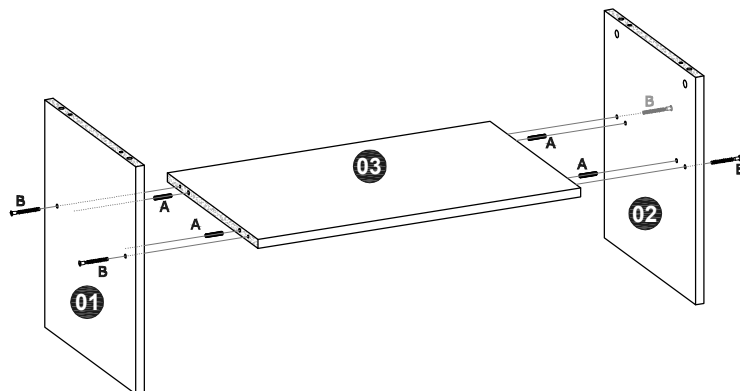


- Connect the Shelf (03) into Partitions (01) and (02) with dowels (A) and bolts (B).

STEP 3

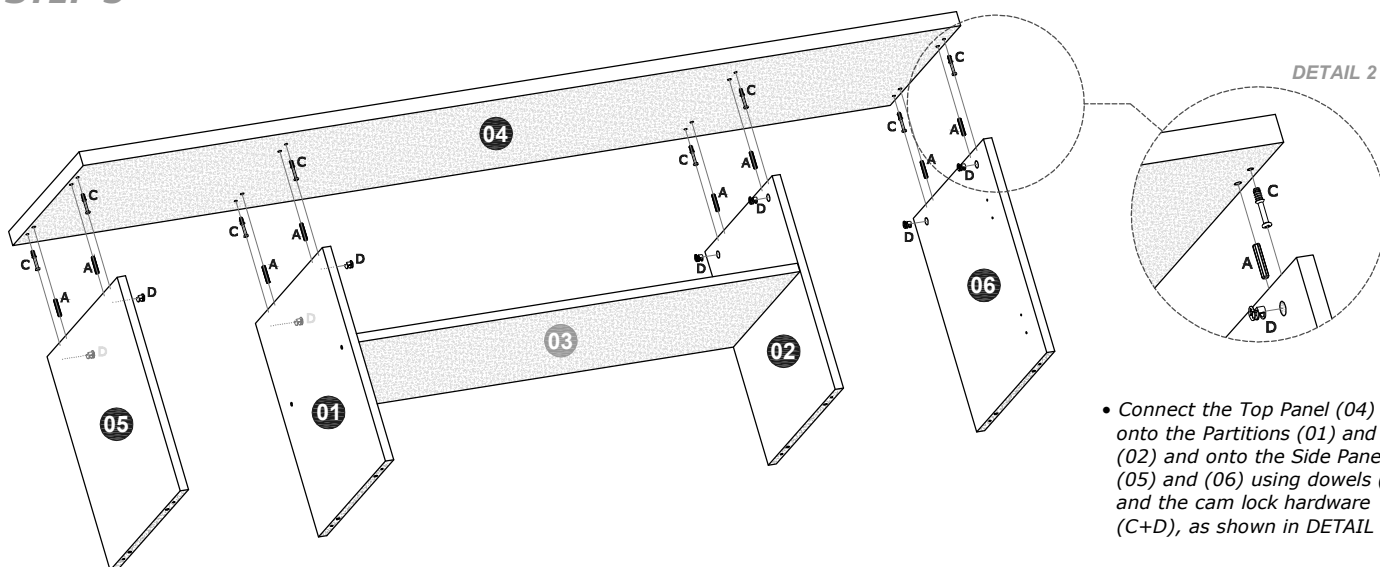


- Connect the Top Panel (04) onto the Partitions (01) and (02) and onto the Side Panels (05) and (06) using dowels (A) and the cam lock hardware (C+D), as shown in DETAIL 2.

STEP 4

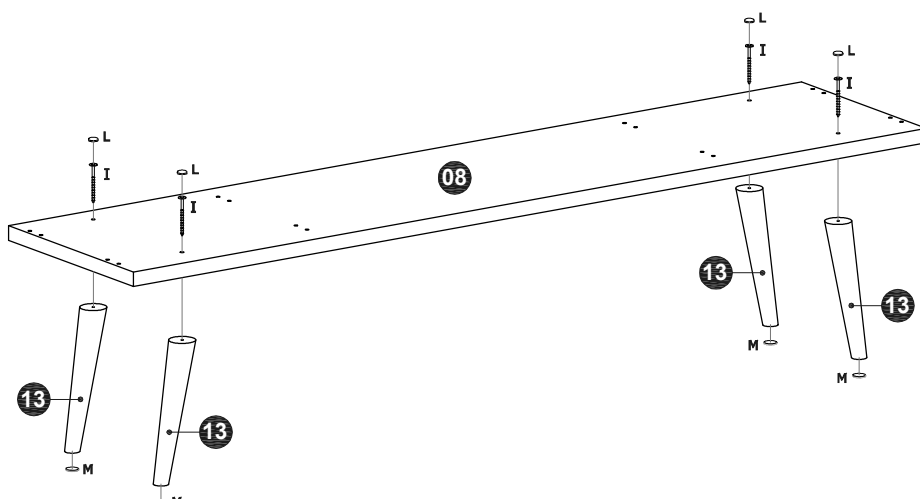


- Fix the wood feet (13) under the Base (08) with the bolts 5.5 x 65mm (I).
- Apply the plastic cover (L) on the bolts (I).
- Apply the adhesive protective felt (M) under the feet (13).

STEP 5

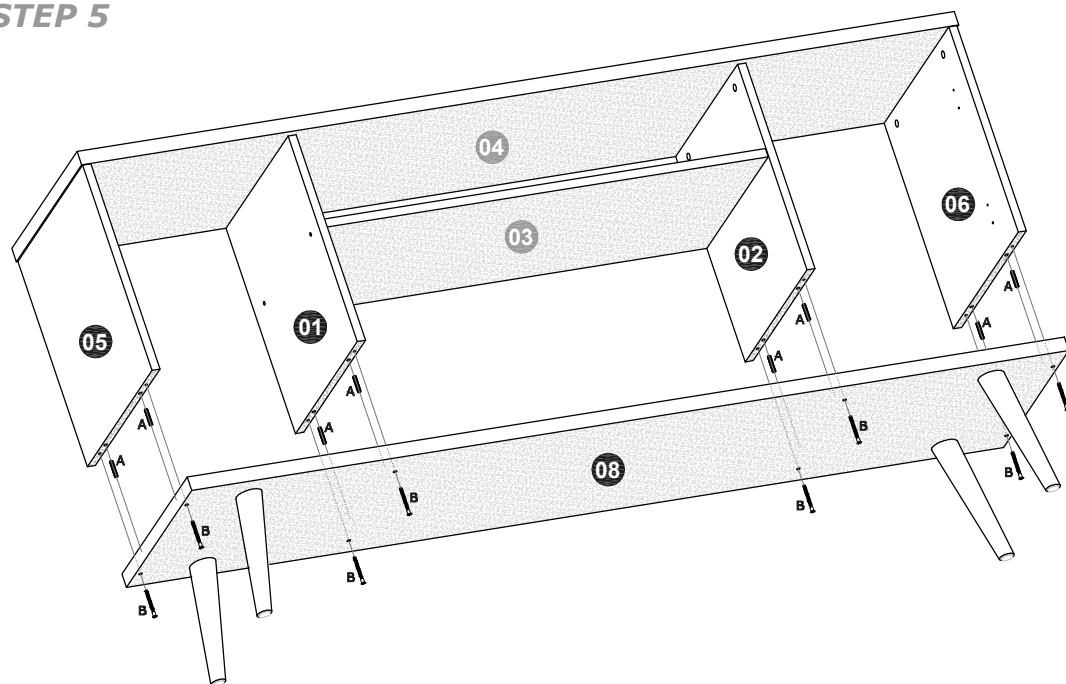


- Connect the Base (08) into the Partitions (01) and (02) and into the Side Panels (05) and (06) with dowels (A) and bolts (B).

STEP 6

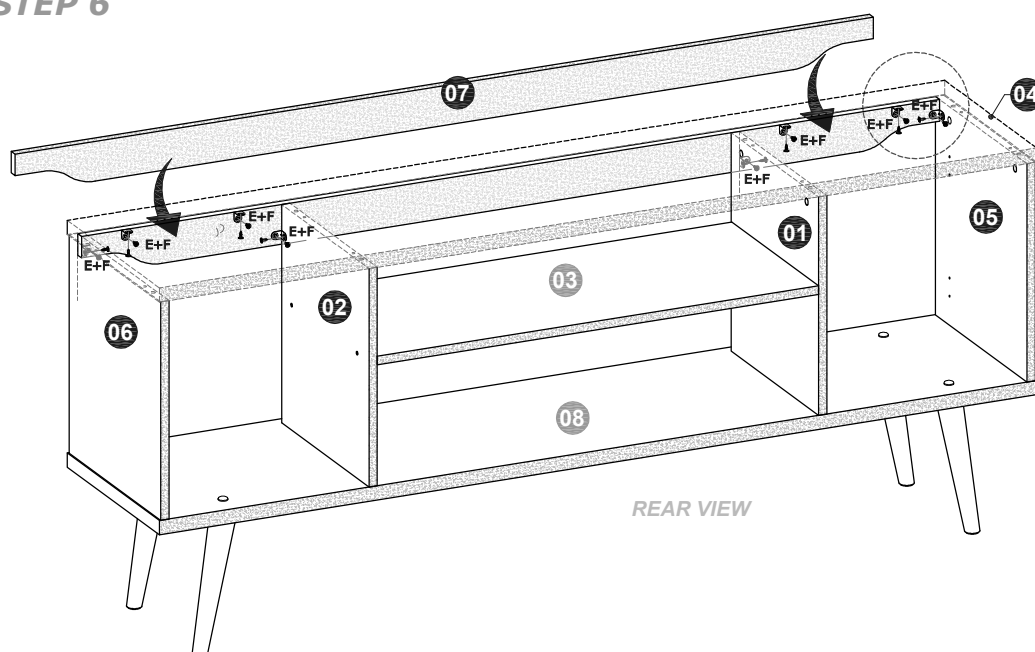


REAR VIEW

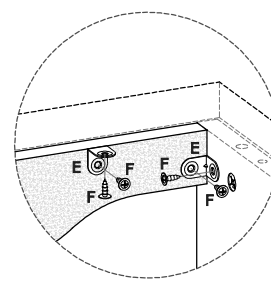

DETAIL 3

- Fit the Front Frame (07) under the Top Panel (04) and between the Side Panels (05) and (06) and fix it into the Top Panel (04), the Side Panels (05) and (06) and the Partitions (01) and (02) with metal brackets (E) and bolts (F), as shown in DETAIL 3.



STEP 7

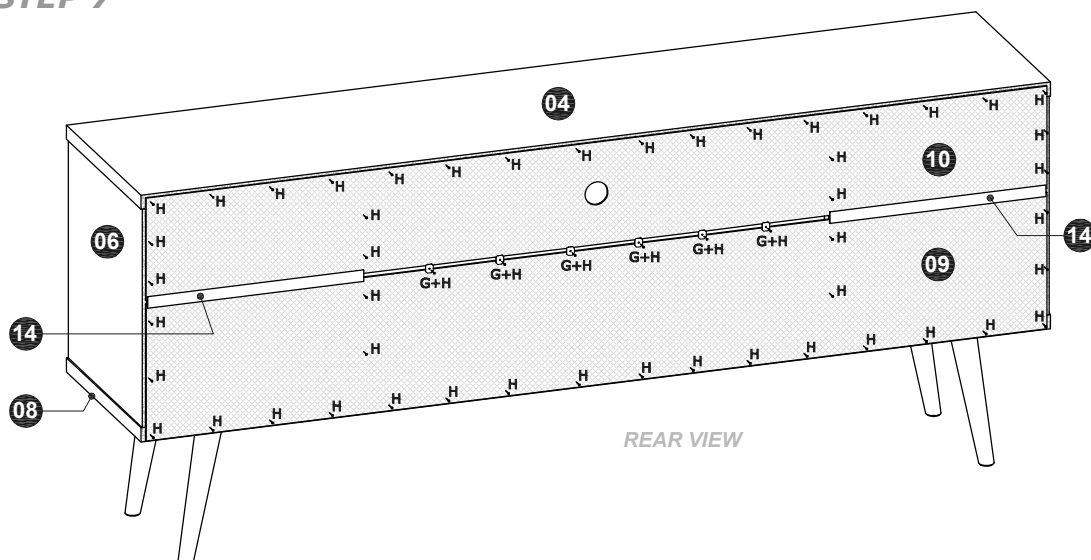

REAR VIEW

- Connect the Lower Back Panel (09) and the Upper Back Panel (10) with metal plates (G), nails (H) and Plastic Profiles (14), applying them to the positions shown in drawing.

STEP 8

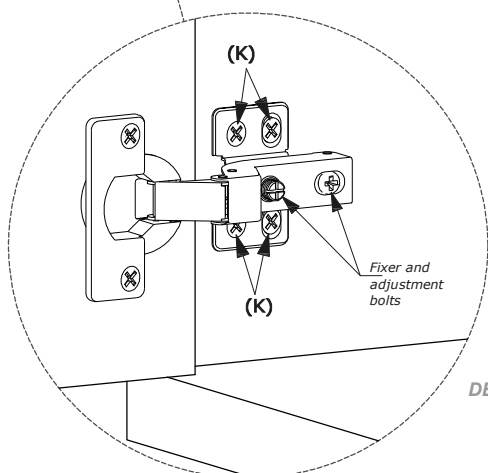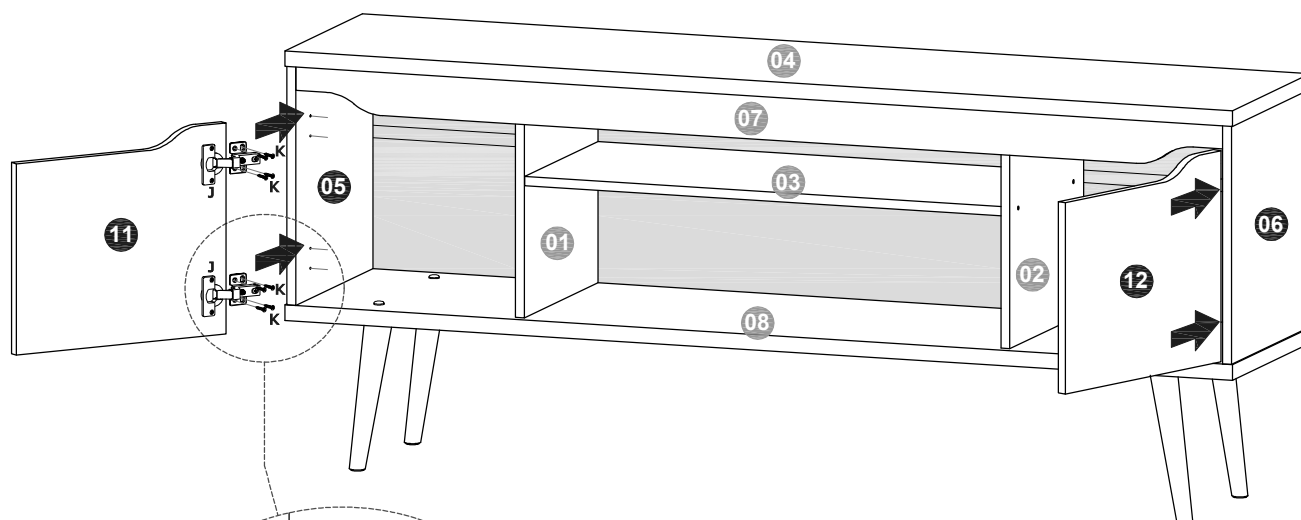

DETAIL 4

Installing the Doors (11) and (12):

- Fix the hinges connectors (J) of the Doors (11) and (12) on the Left Side Panel (05) and Right Side Panel (06) with bolts 3.5 x 14mm (K), taking the markings on the panels (05) and (06) as reference for correct positioning.
The hinge and connector includes two more bolts, shown in DETAIL 4. Use these **fixer and adjustment bolts** to tighten, adjust and align the doors.