


 **WARNING: To avoid serious personal injury:**


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# ASSEMBLY INSTRUCTIONS

## Over Toilet Shelf

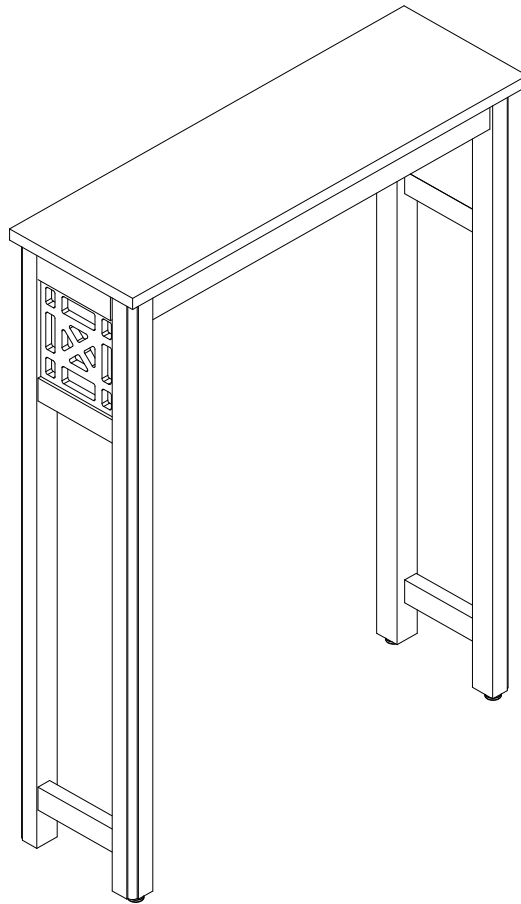


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!  
. Please assemble on a clean soft surface to avoid damage.

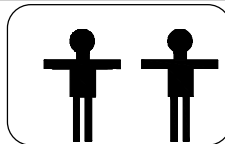


50 minutes


### Tool Included

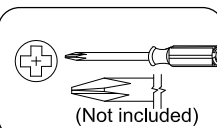





(Not included)

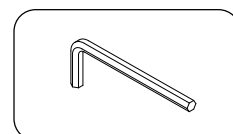

Part List- Over Toilet Shelf

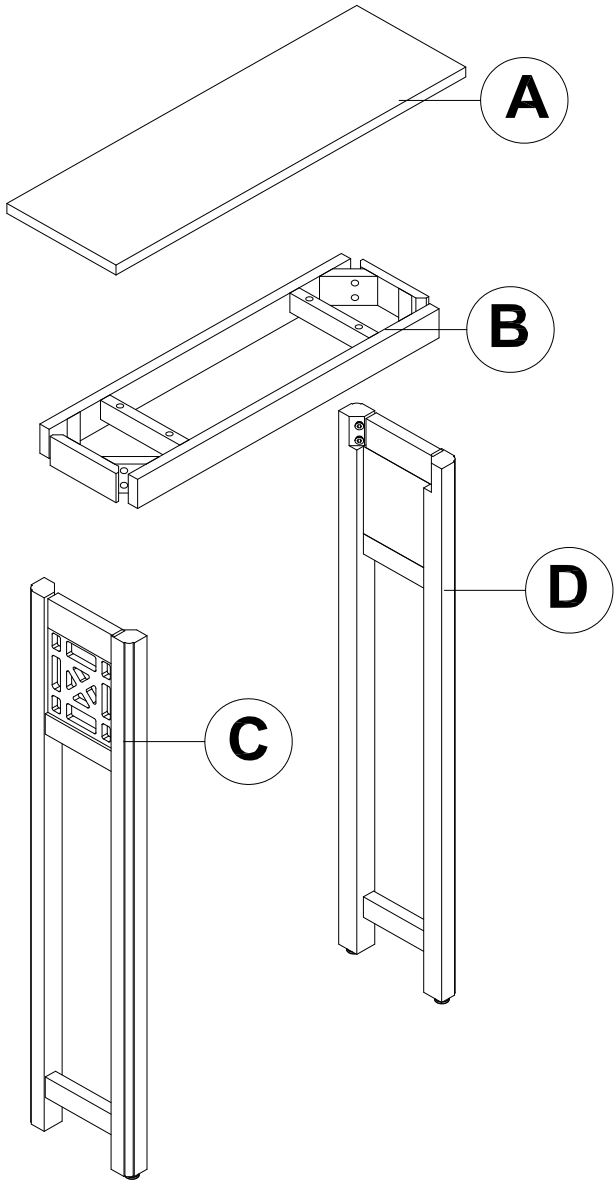


Identifying the hardware-Identify the hardware using the illustrations below.
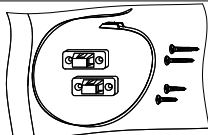
<div>E</div> <div></div> <div>04</div> <div>M6X45mm</div>	<div>F</div> <div></div> <div>08</div> <div>M6X60mm</div>
<div>G</div> <div></div> <div>01</div> <div></div>	<div>H</div> <div></div> <div>01</div> <div>Anti-Tip Bag</div>

## Step 1


**E**  04  
**M6X45mm**


**G**  01

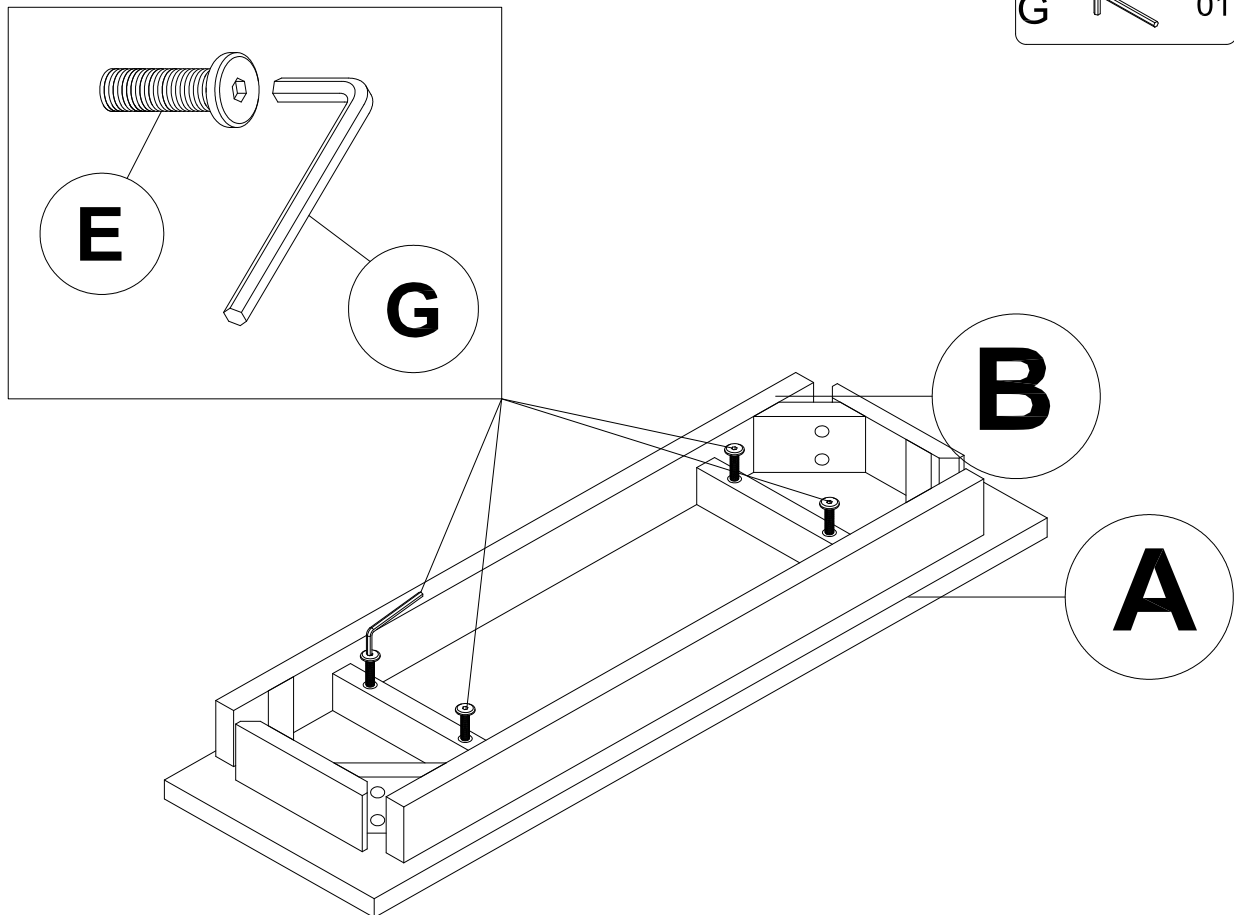

## Step 2


**F**  04  
**M6X60mm**

**G**  01

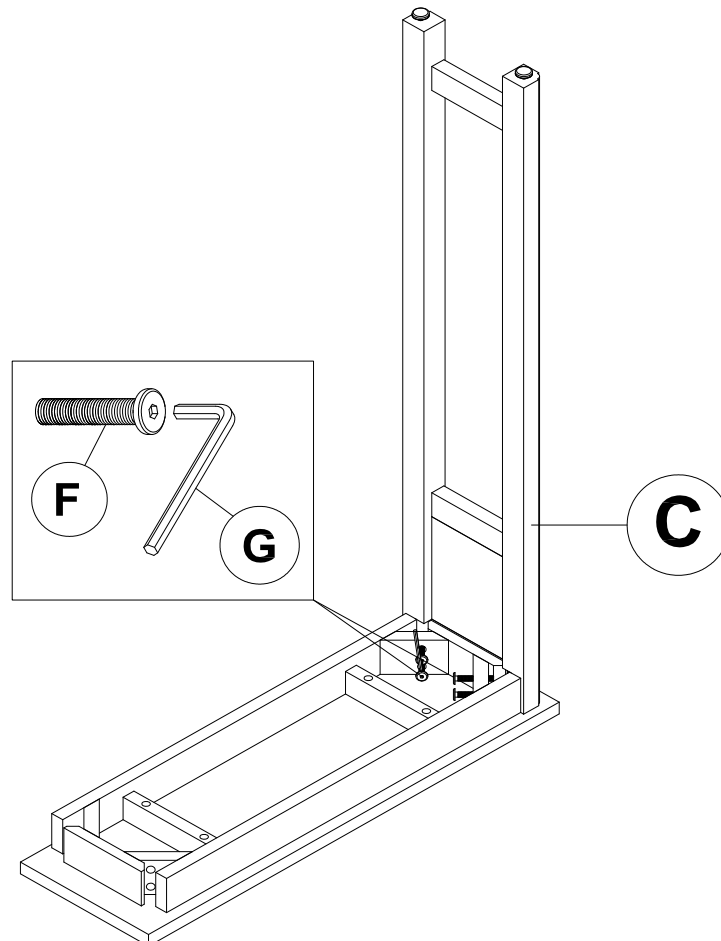


Step 3

F



  
M6X60mm

04





G




01

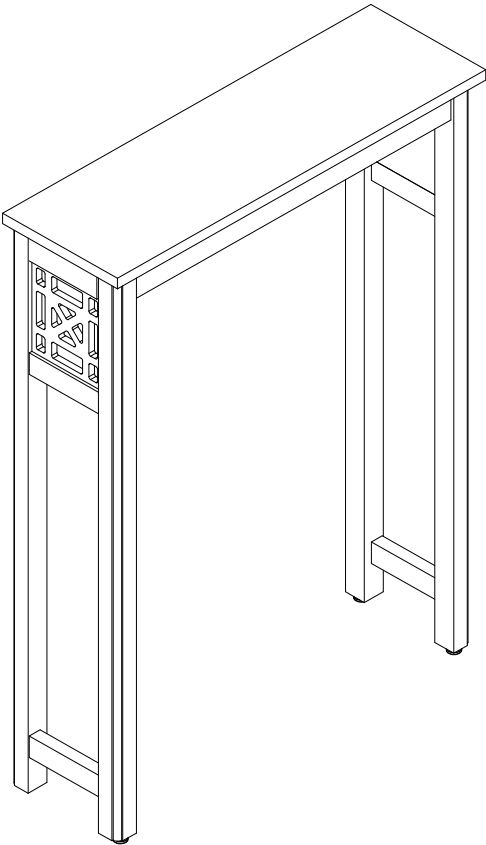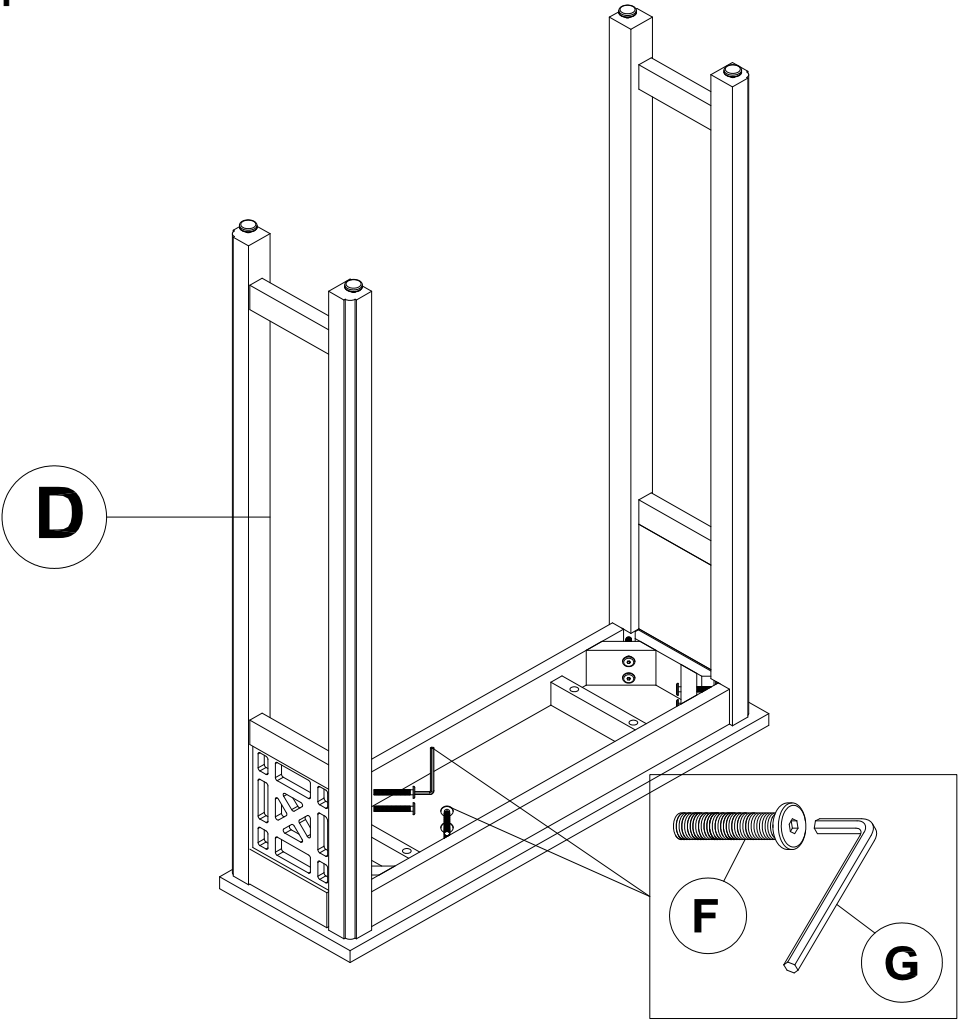

"H" Anti-Tip Bag

<b>A</b>	 4x14 Screw	<b>02</b>	<b>C</b>	 Plastic wall bracket	<b>02</b>
<b>B</b>	 4x35 Screw	<b>02</b>	<b>D</b>	 Nylon strap 140mm	<b>01</b>

Secure to Stud Behind Wallboard

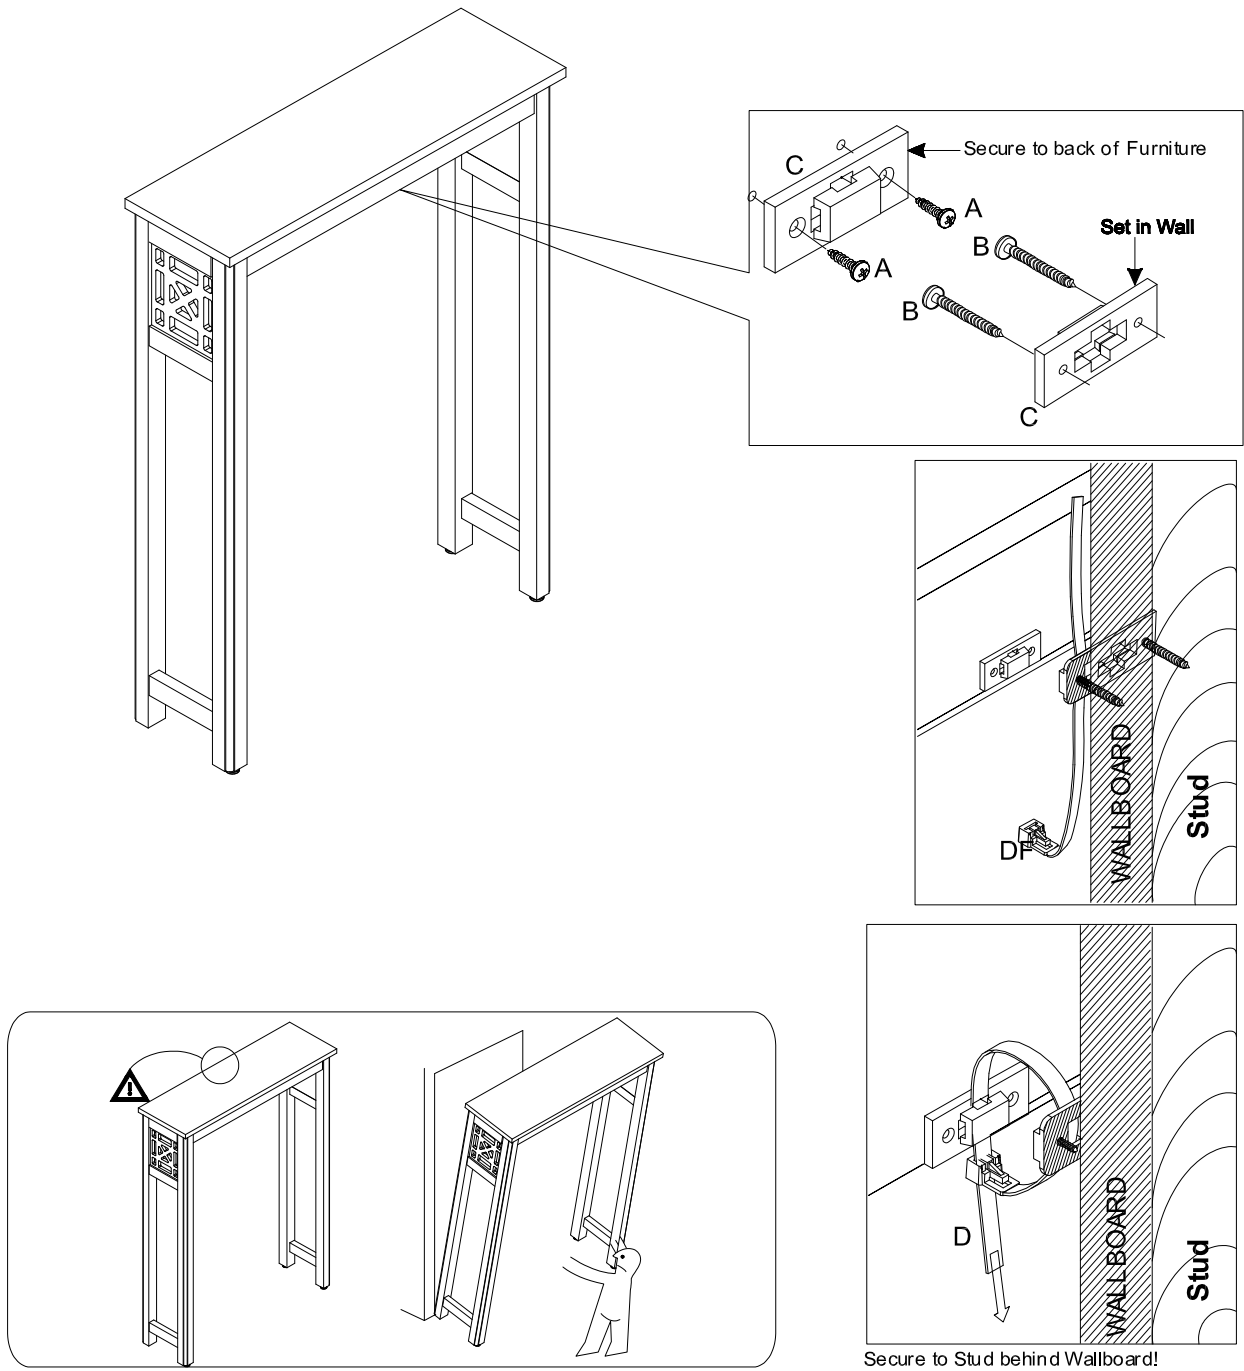


 **WARNING: To avoid serious personal injury:**


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# ASSEMBLY INSTRUCTIONS

## Over Toilet Hutch with Doors

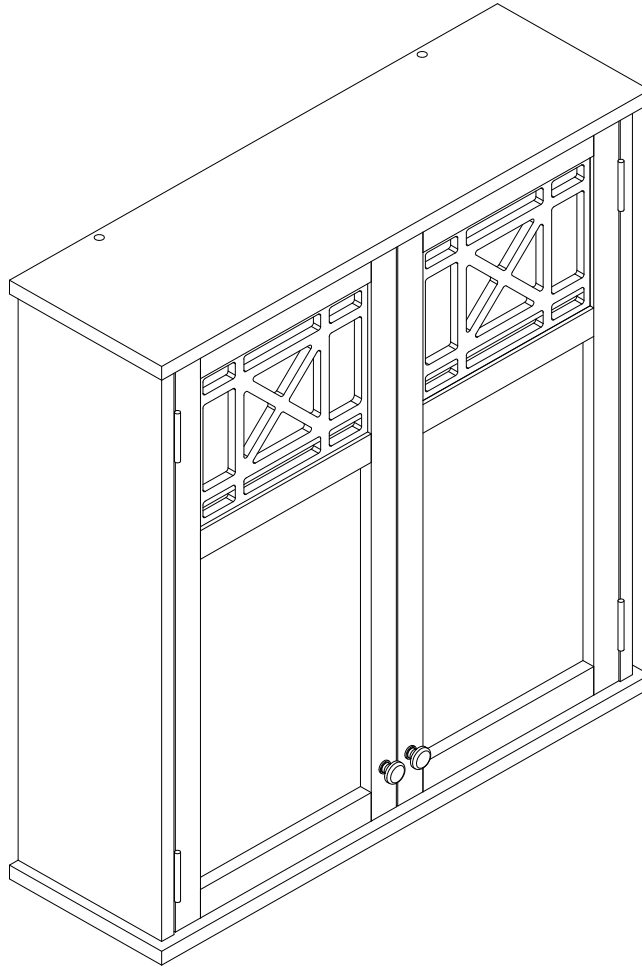


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!  
. Please assemble on a clean soft surface to avoid damage.

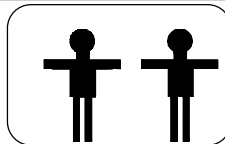


60 minutes

### Tool Included

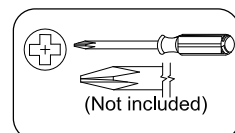

Part List-Over Toilet Hutch with Doors

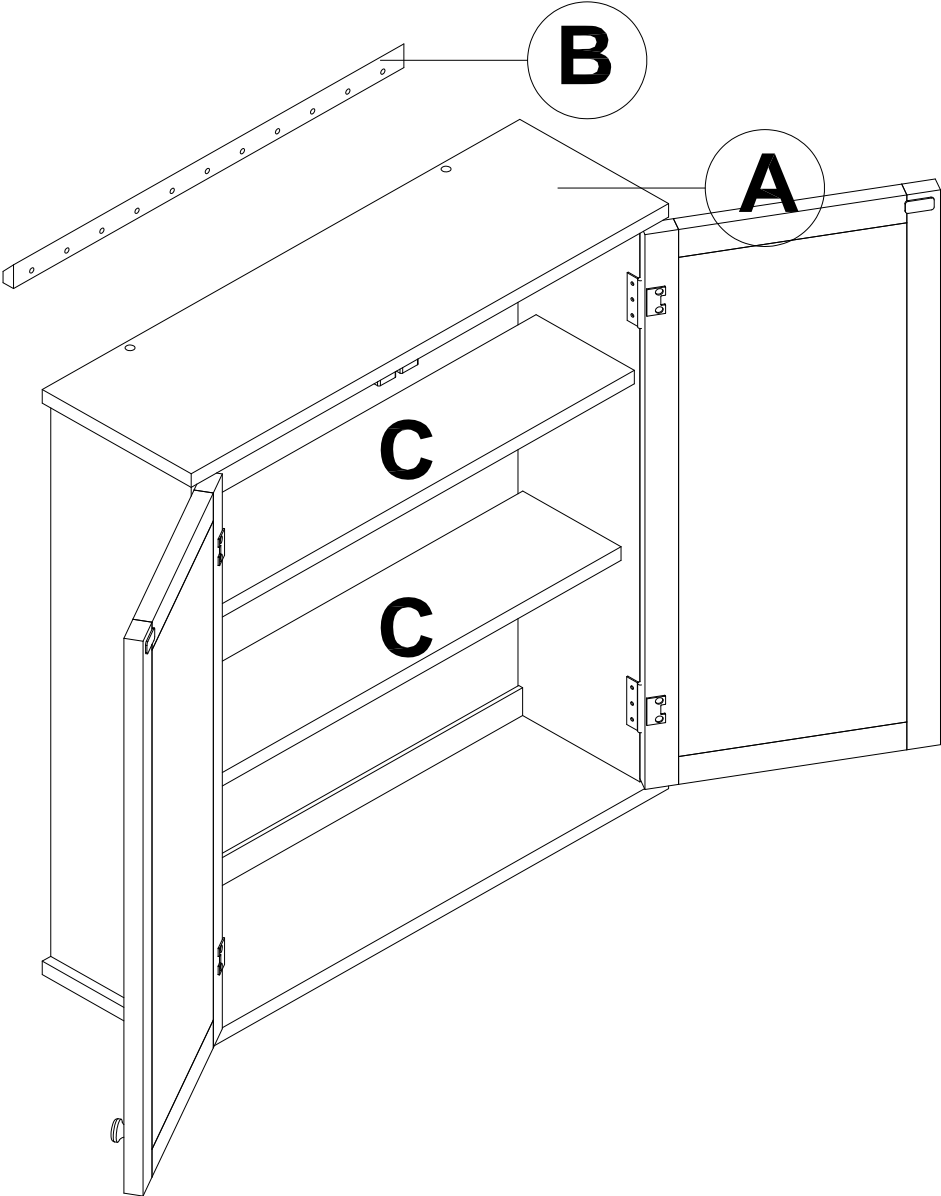

**Identifying the hardware**-Identify the hardware using the illustrations below.

D



06

4x50MM

E



04

4x40MM


F



04

EZ-ANCHOR

G



08


H



04


M6X45mm

I



01

J




01

Anti-Tip Bag


## Step 1

Remove French Cleat(B) from the back of the Over Toilet Hutch with Doors by unscrewing 2 pre-installed Wood Screw(D) from the top of the hutch.

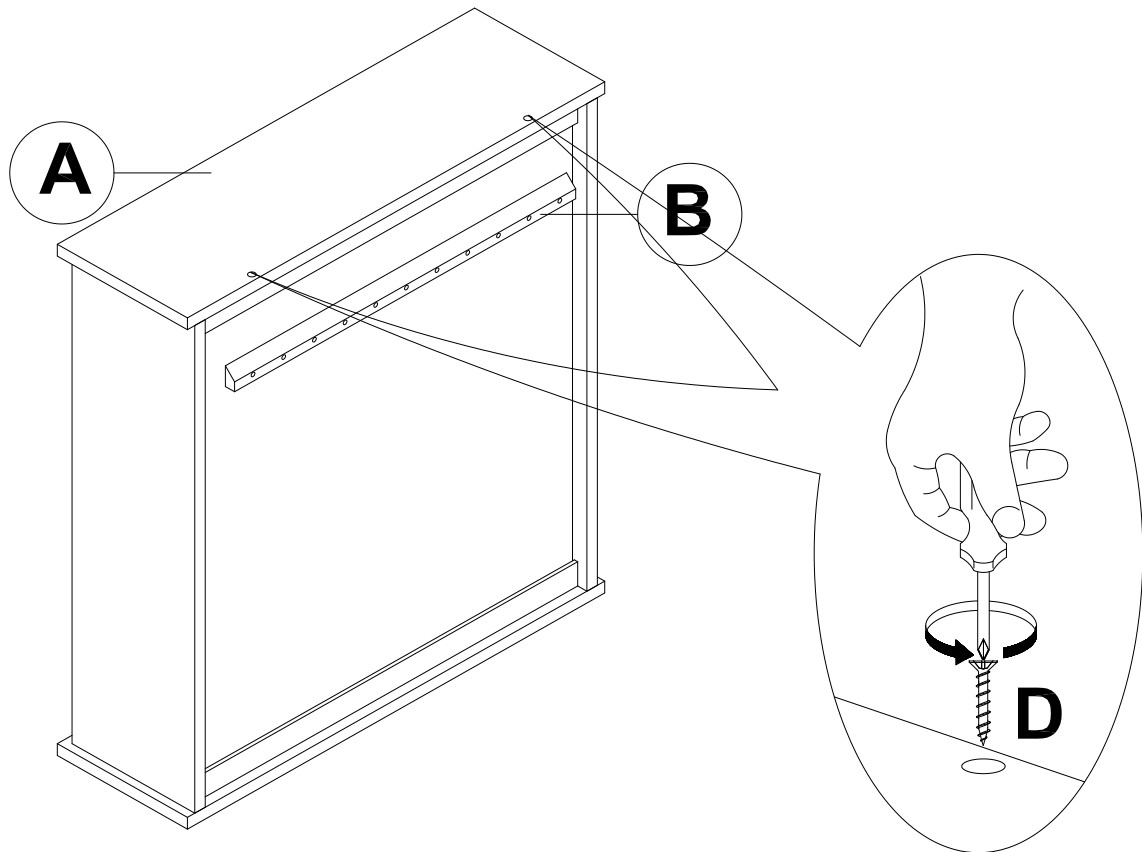

## Step 2

Open the doors of the Over Toilet Hutch with Doors(A), Insert 8 Shelf Clips(G) in Holes on Side Frames at desired location. Place Shelves( C) on Shelf Clips(G)

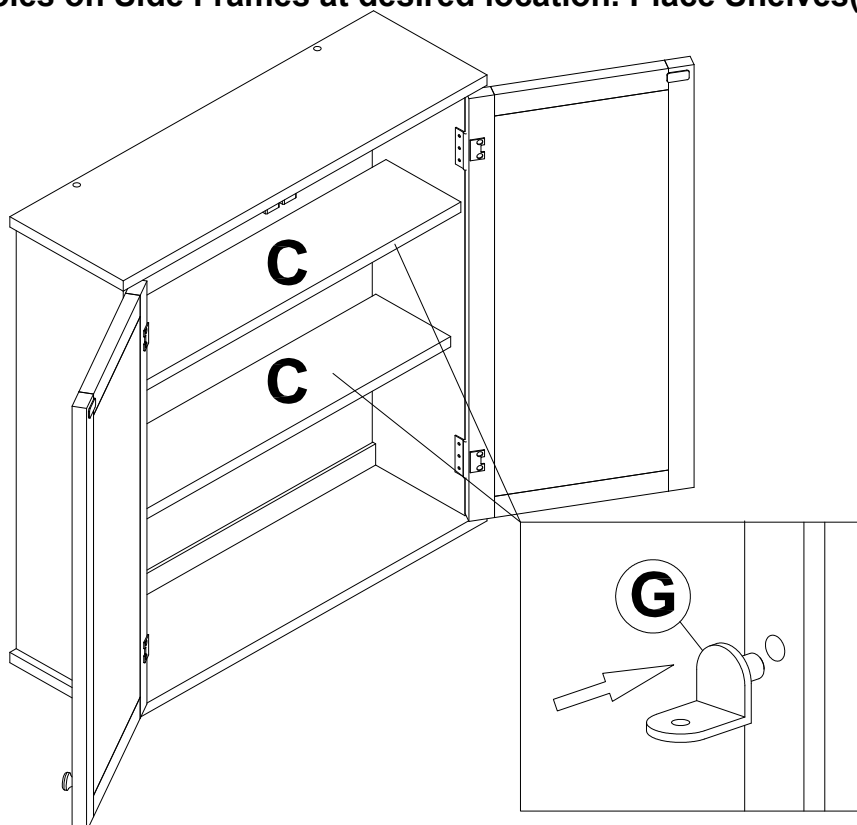

**Note:** If possible, we recommend that you secure cleat (B) to stud in wall.

### Step 3

Position Cleat (B) on wall in desired location where shelf will be hung.  
Make sure cleat is level.

---


### Step 4

Using Cleat (B) as template, align holes in cleat to studs in wall. Drill  
1/8" pilot holes 3/4" deep.

---

### Step 5


Attach French Cleat (B) to Studs in wall in 4 locations using  
wood screws (D)

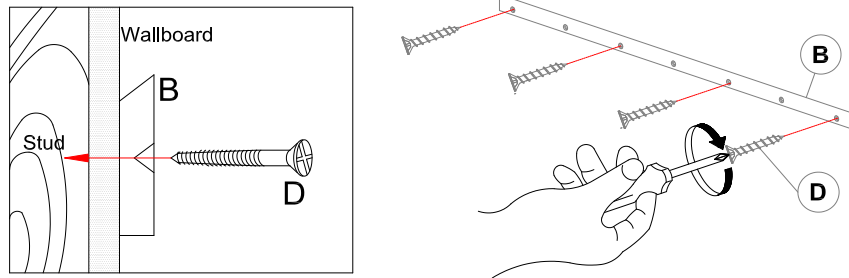

### Step 6


If hole locations do not align with stud in wall, install the EZ Anchor(F) in to drywall by tapping it in to the predrilled pilot holes up to the thread, and then screwing the EZ Anchor in to the drywall. Attach Cleat (B) using wood screw (E) to EZ Anchors.

**NOTE:** Cleat could be secured using combination of Studs and EZ Anchors.

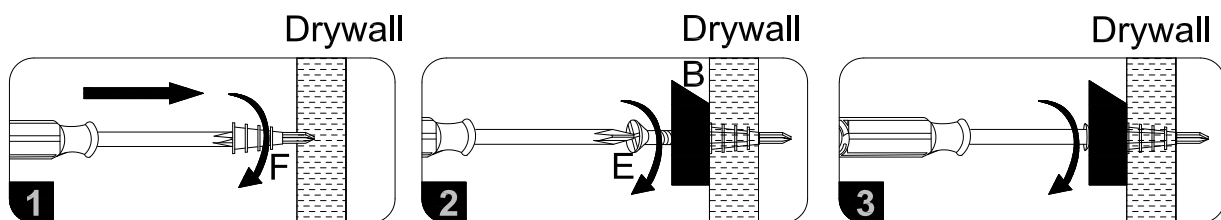

### Step 7:


Hang Shelf(A) on cleat. Secure in 2 places using wood screw (D).

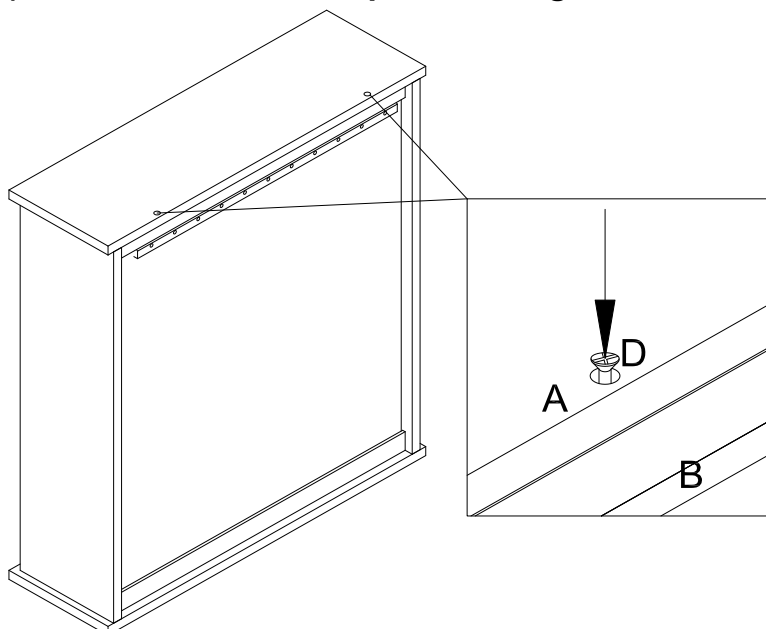

**To attach Over Toilet Hutch with Doors on optional Over Toilet Shelf  
(ANDE72WH)**


**Step1**

**Remove Table Top of Over Toilet Shelf by unscrewing 4 pre-installed Hex Bolts(H)**

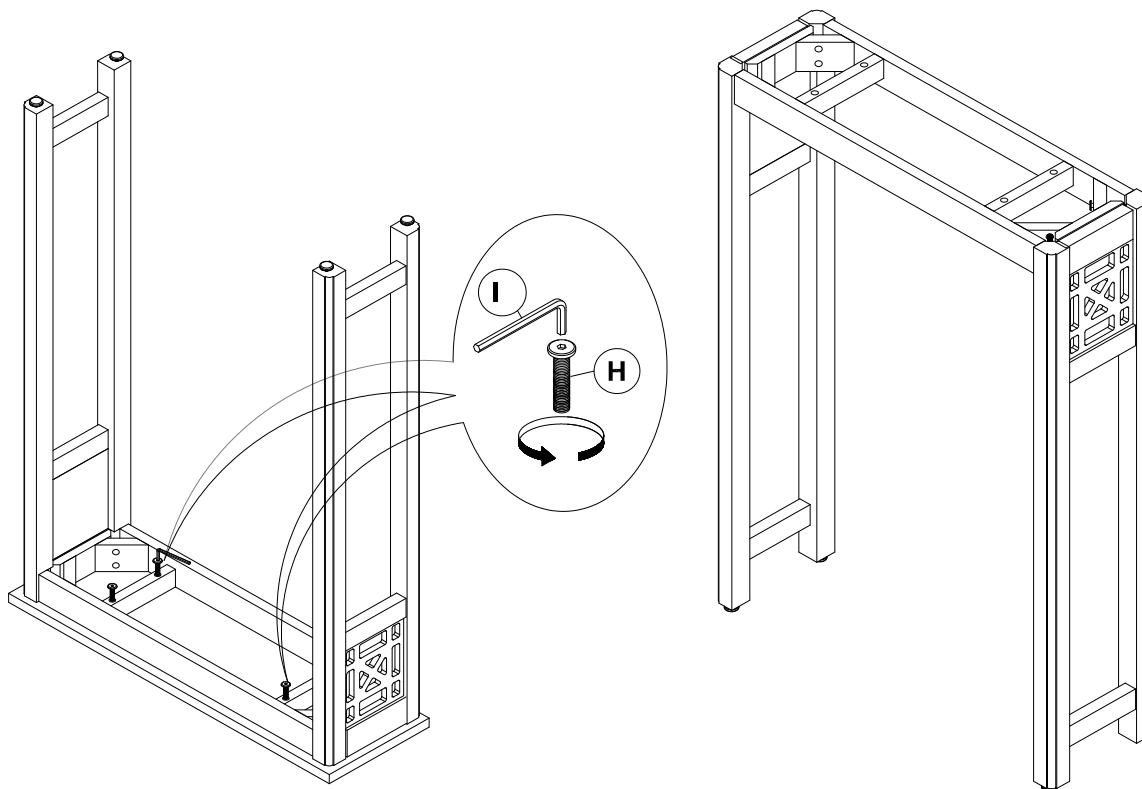

**Step2**


**Open the doors of Over Toilet Shelf(A). Insert 8-Shelf Clips(G) in holes on Side Frames. Set Shelves ( C ) on Shelf Clips(G)**

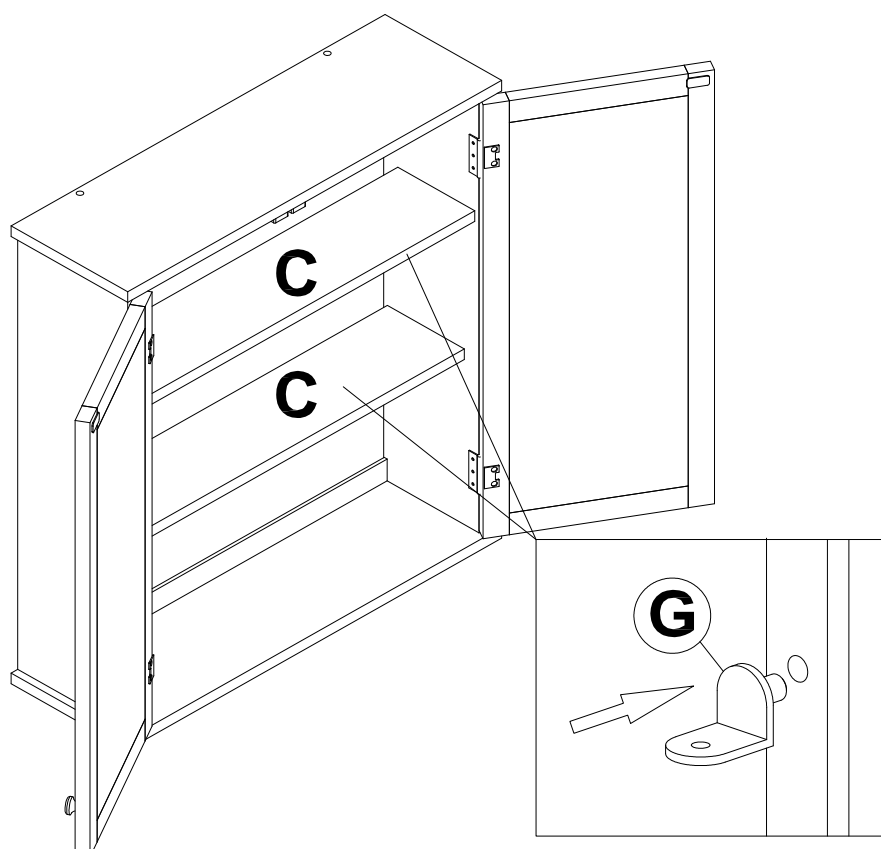





### Step3

Attached Over Toilet Hutch with Doors(A) on Over Toilet Shelf using 4-M6x45mm Hex Bolts(H).


Note: Tighten all bolts at this time!

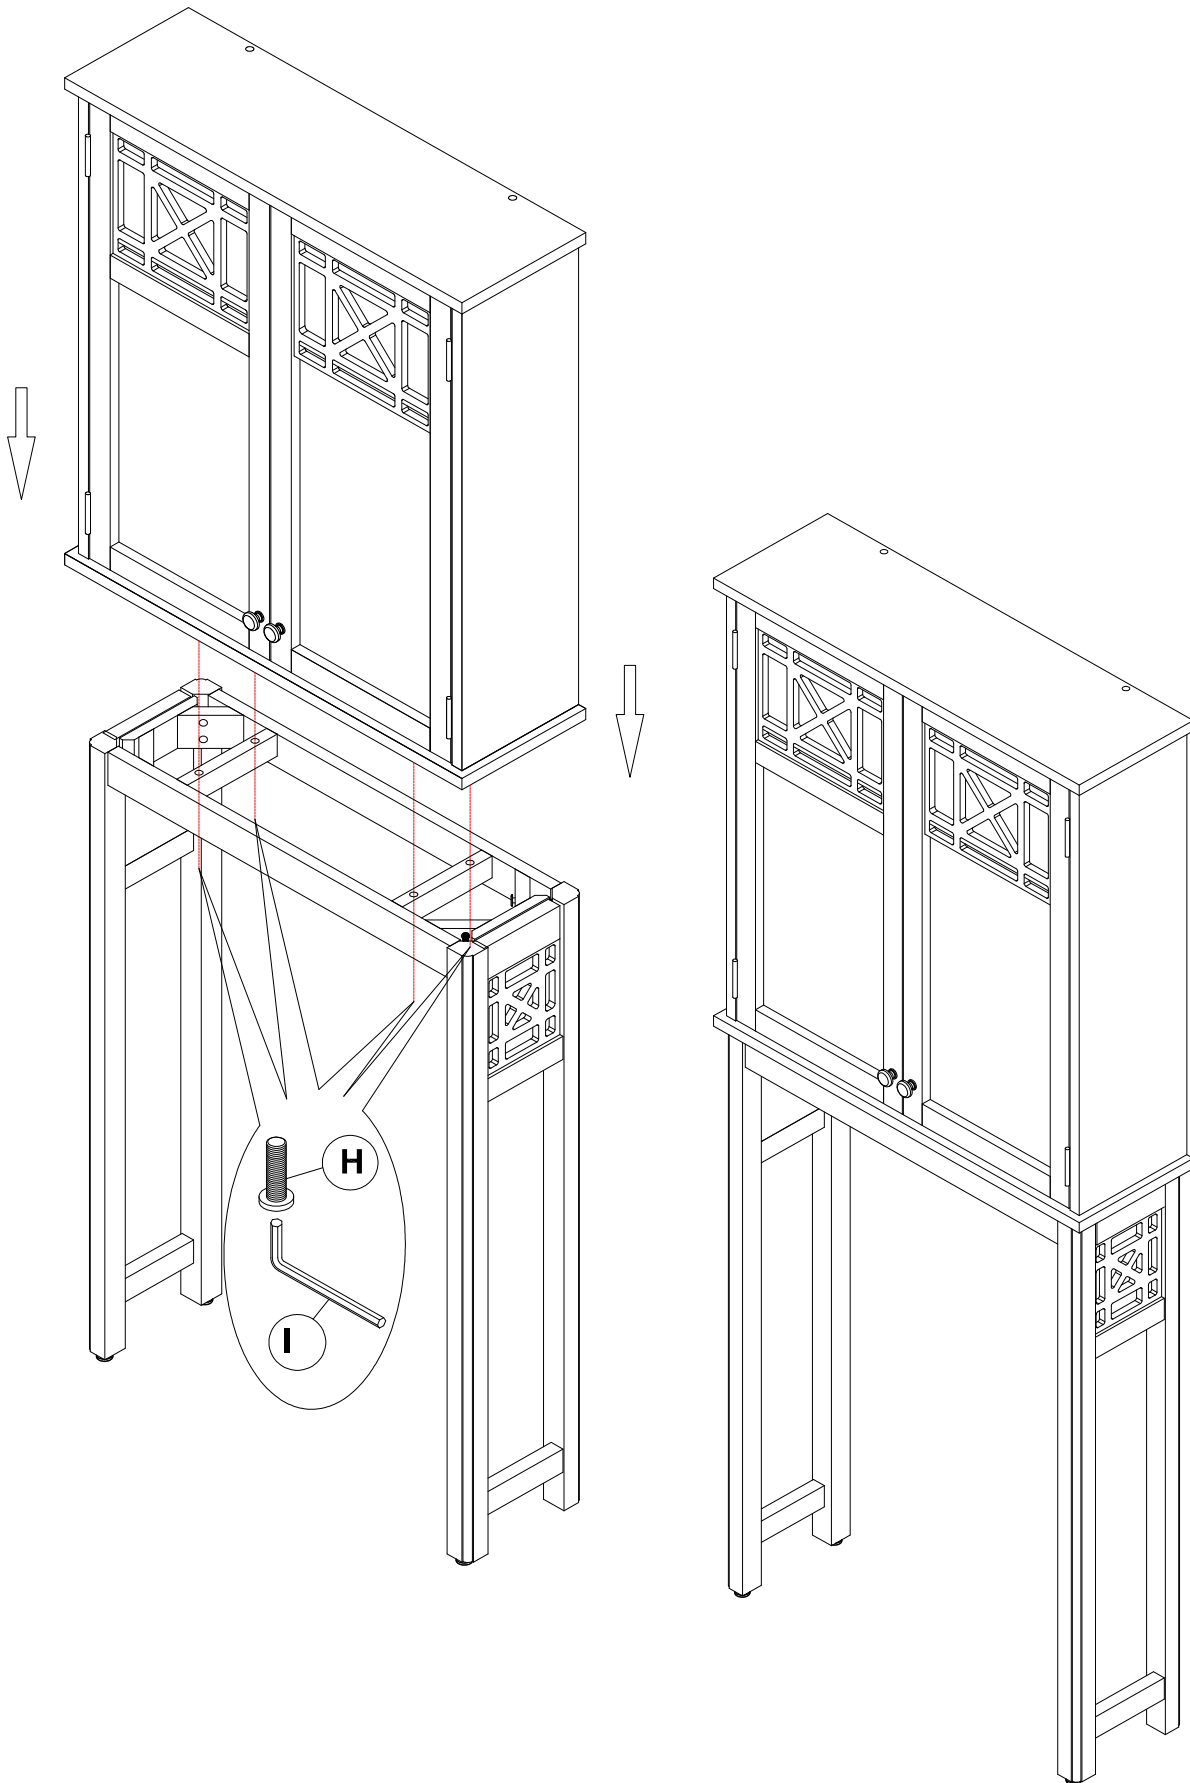

"J" Anti-Tip Bag

<b>A</b>	 4x14 Screw	<b>02</b>	<b>C</b>	 Plastic wall bracket	<b>02</b>
<b>B</b>	 4x35 Screw	<b>02</b>	<b>D</b>	 Nylon strap 140mm	<b>01</b>

Secure to Stud behind Wallboard

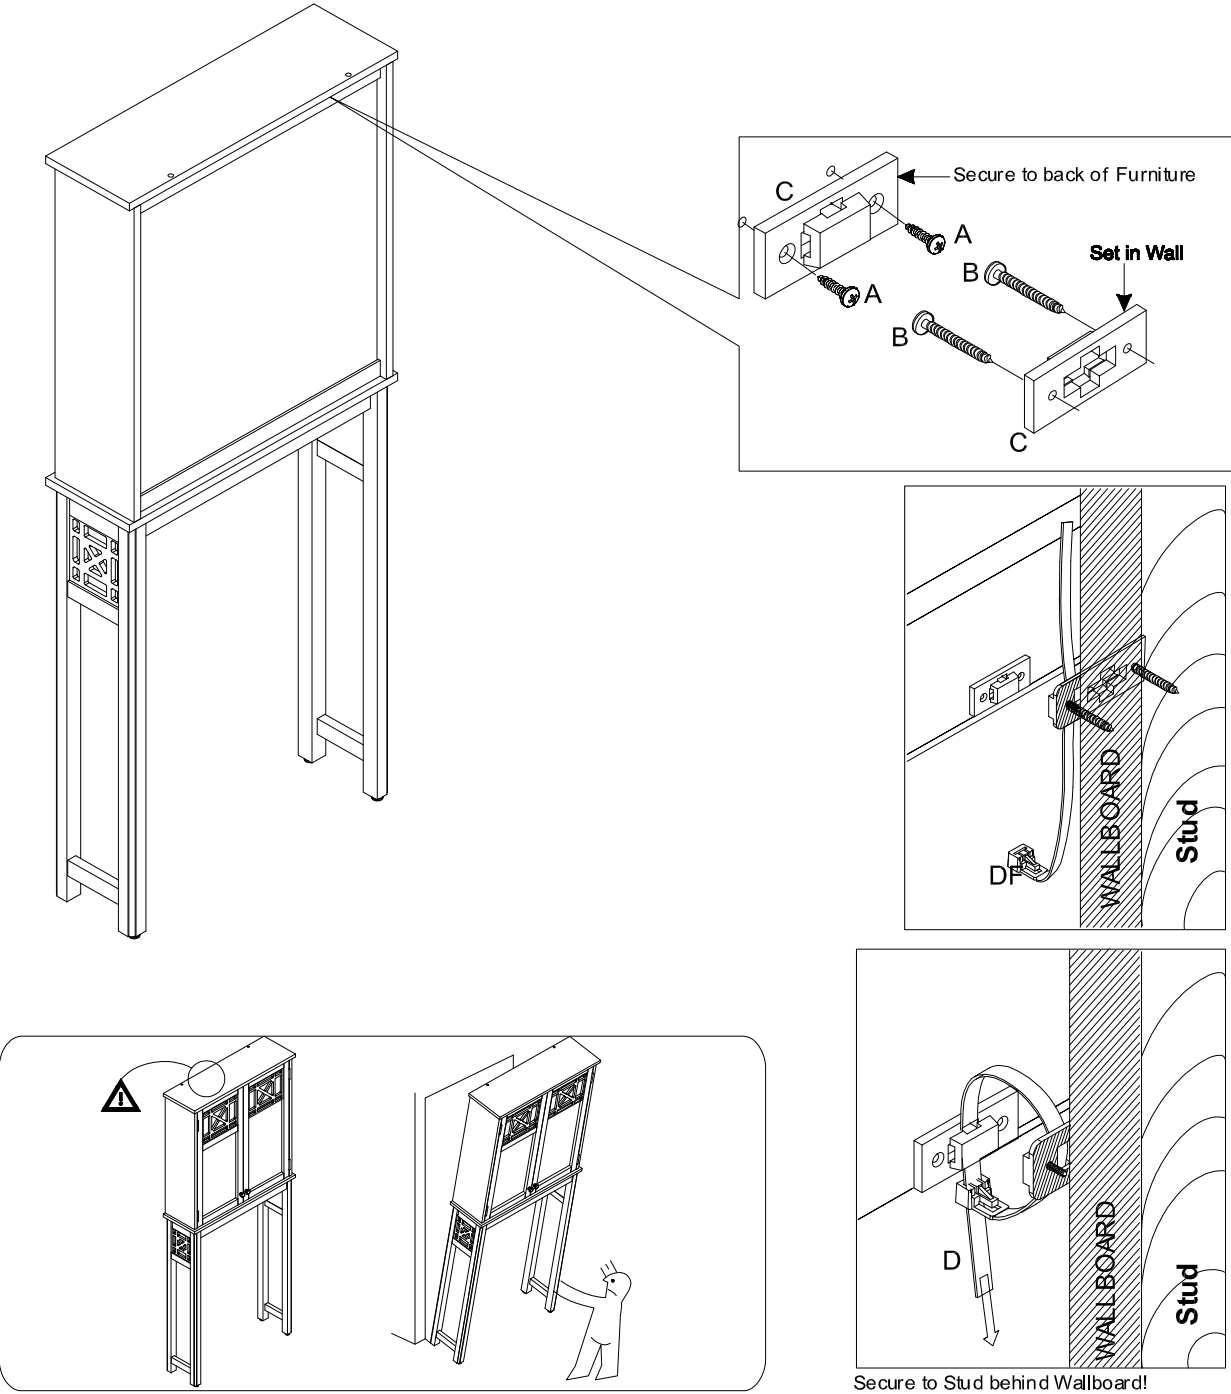


 **WARNING: To avoid serious personal injury:**


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# ASSEMBLY INSTRUCTIONS

## Bath Deluxe Clothes Hamper


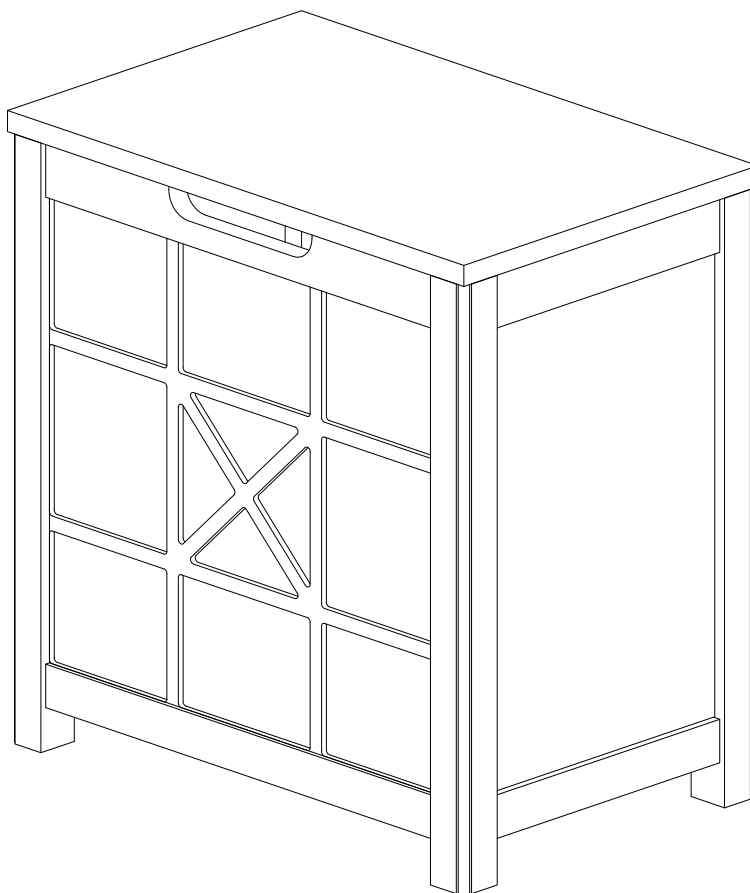


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!  
. Please assemble on a clean soft surface to avoid damage.

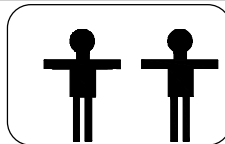


50 minutes


### Tool Included

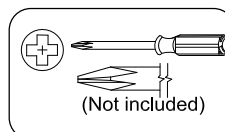



Part List- Bath Deluxe Clothes Hamper

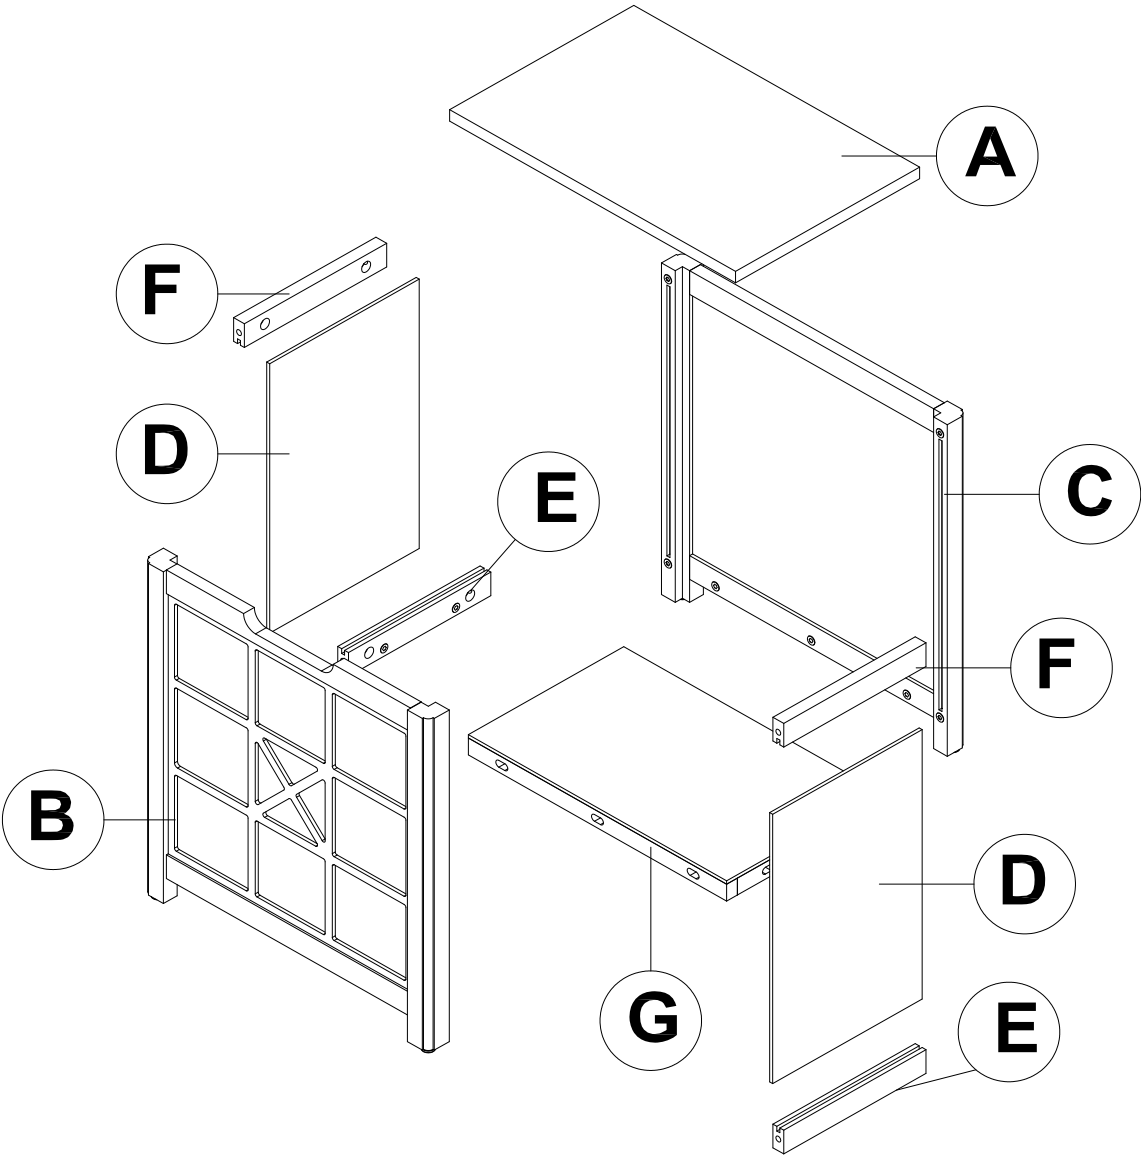


**Identifying the hardware**-Identify the hardware using the illustrations below.


H08


I08

J10  
M6\*30


K01


L15  
M4\*15

M02


N01

## Step 1


H  04

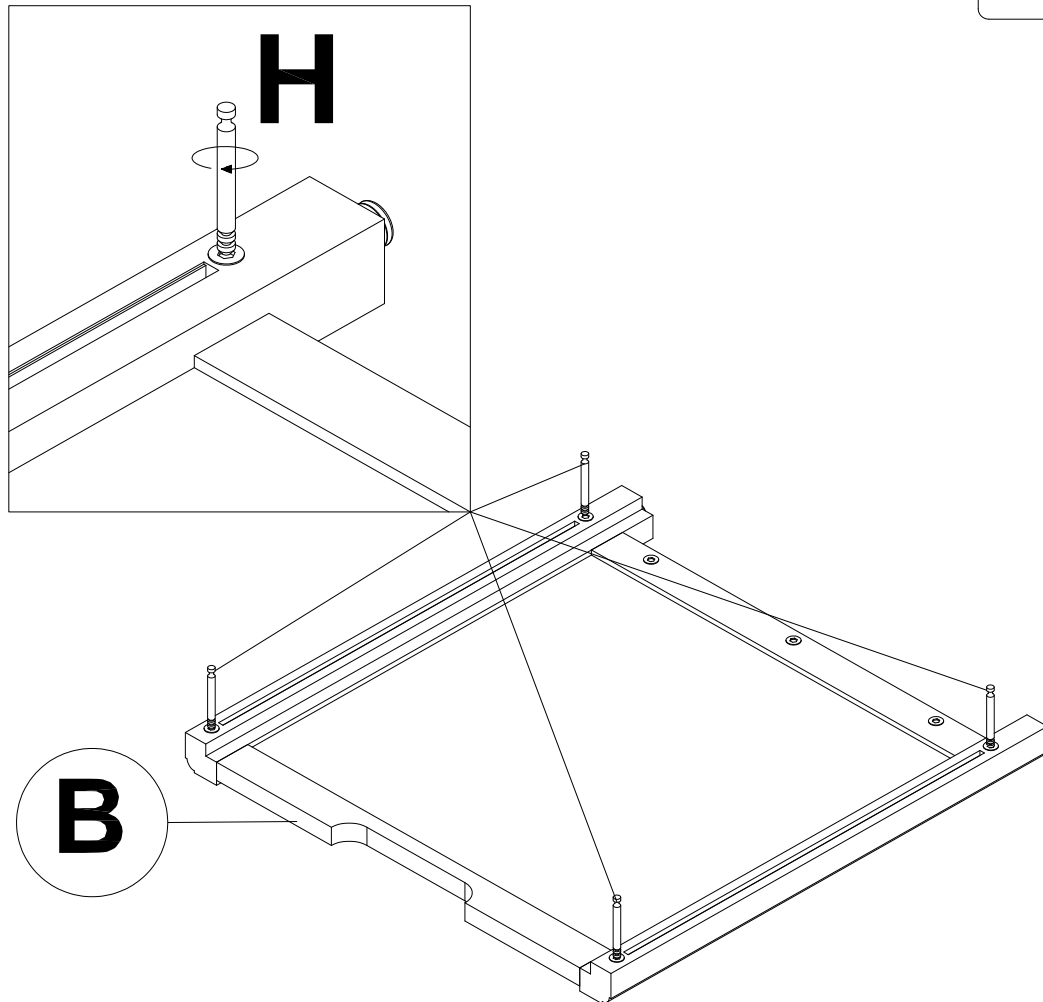


## Step 2

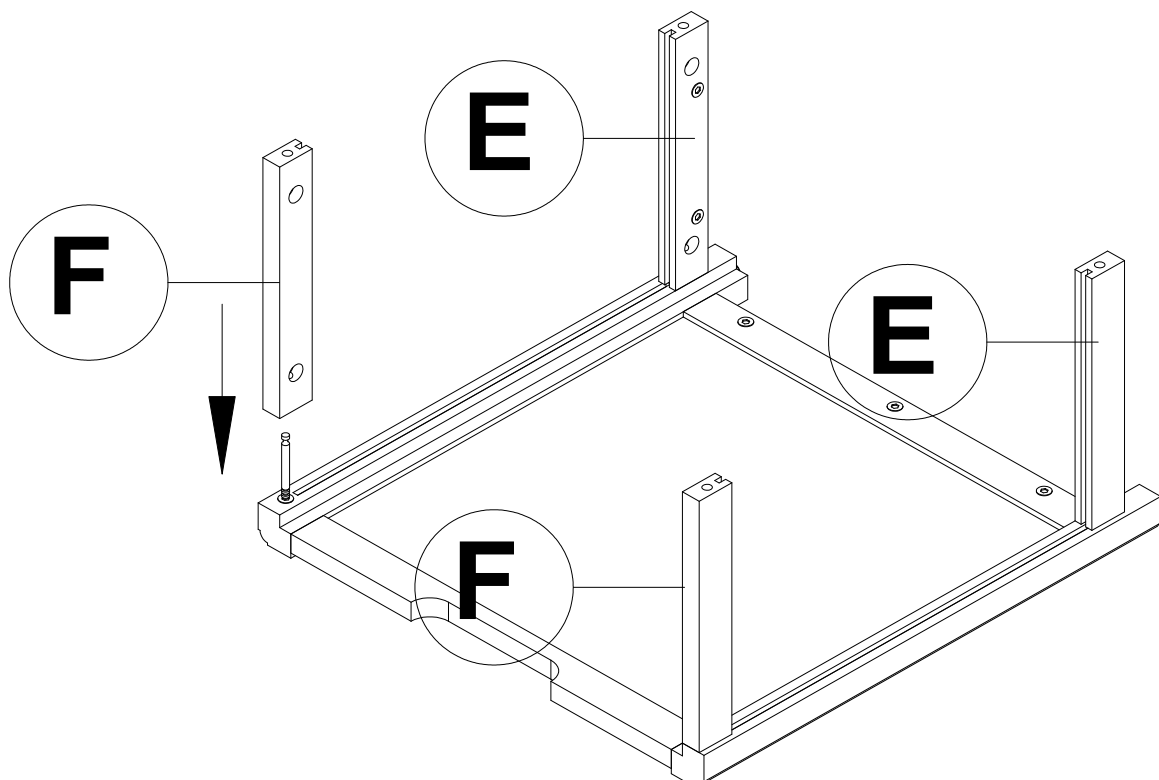

### Step 3

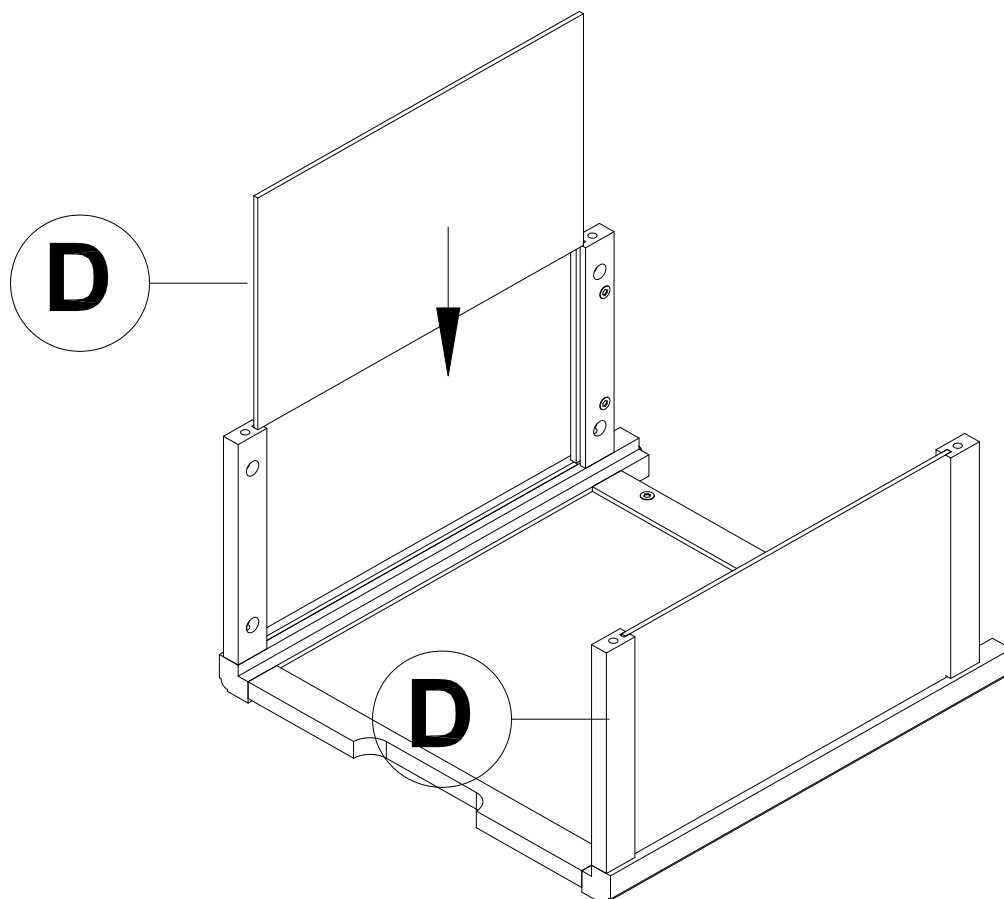

### Step 4:

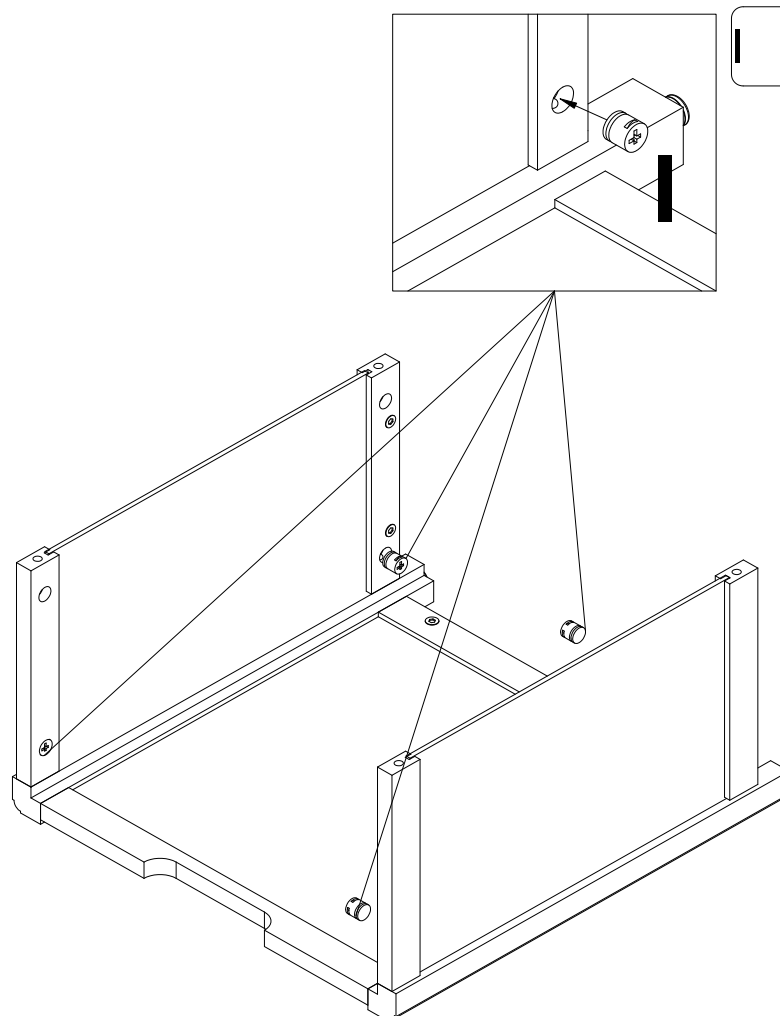


## Step 5:

H



04

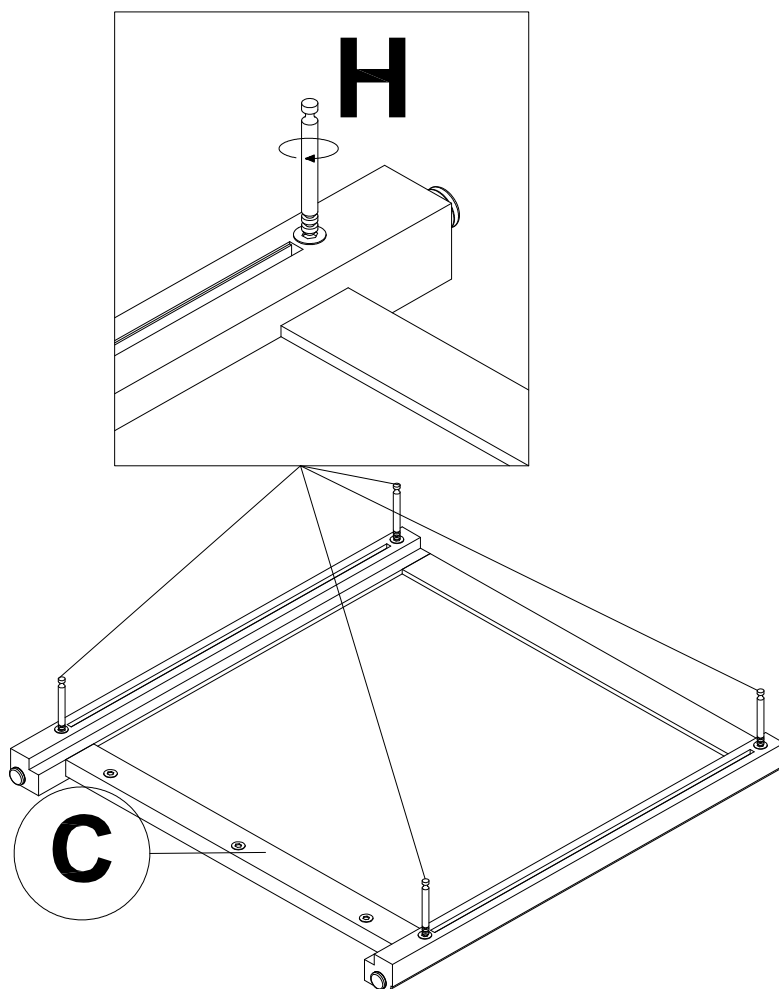


## Step 6:


I




04

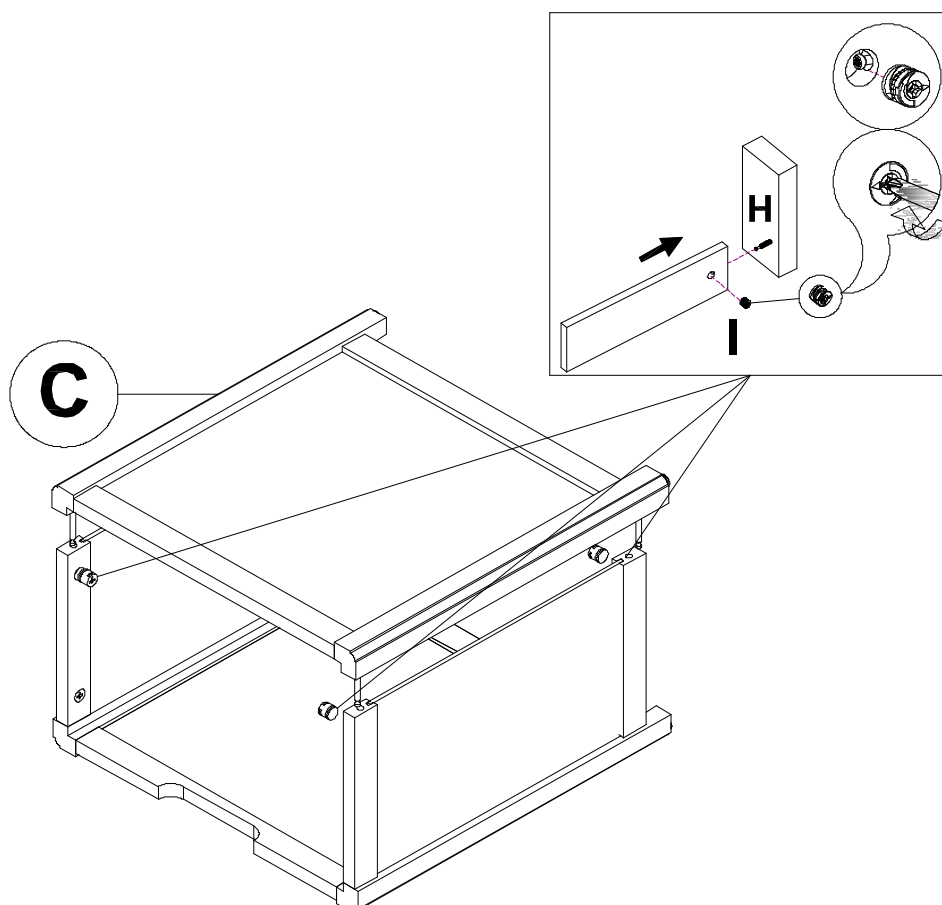



## Step 7:




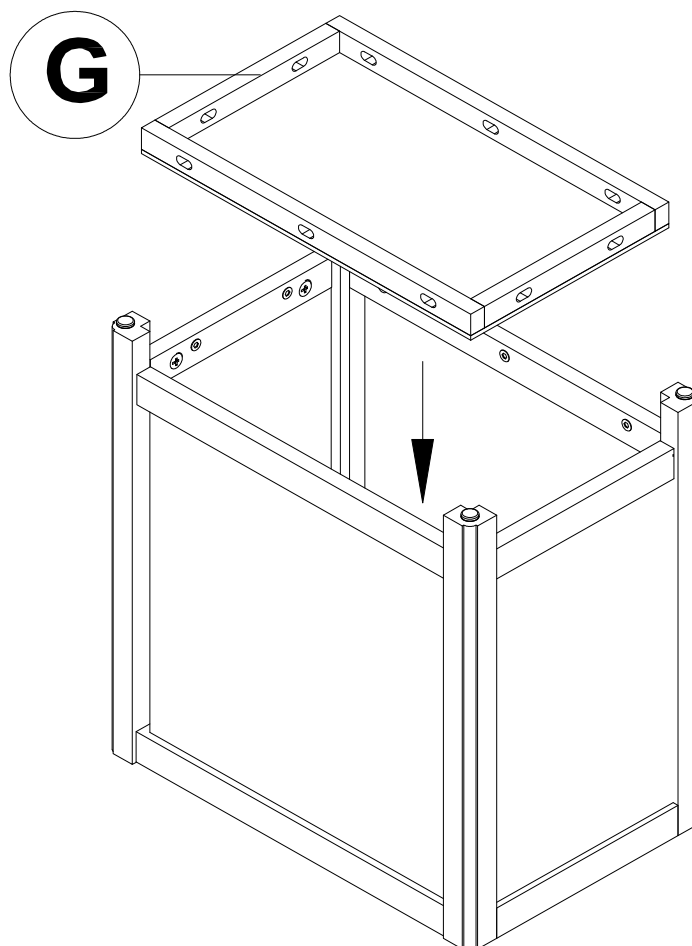


## Step 8:


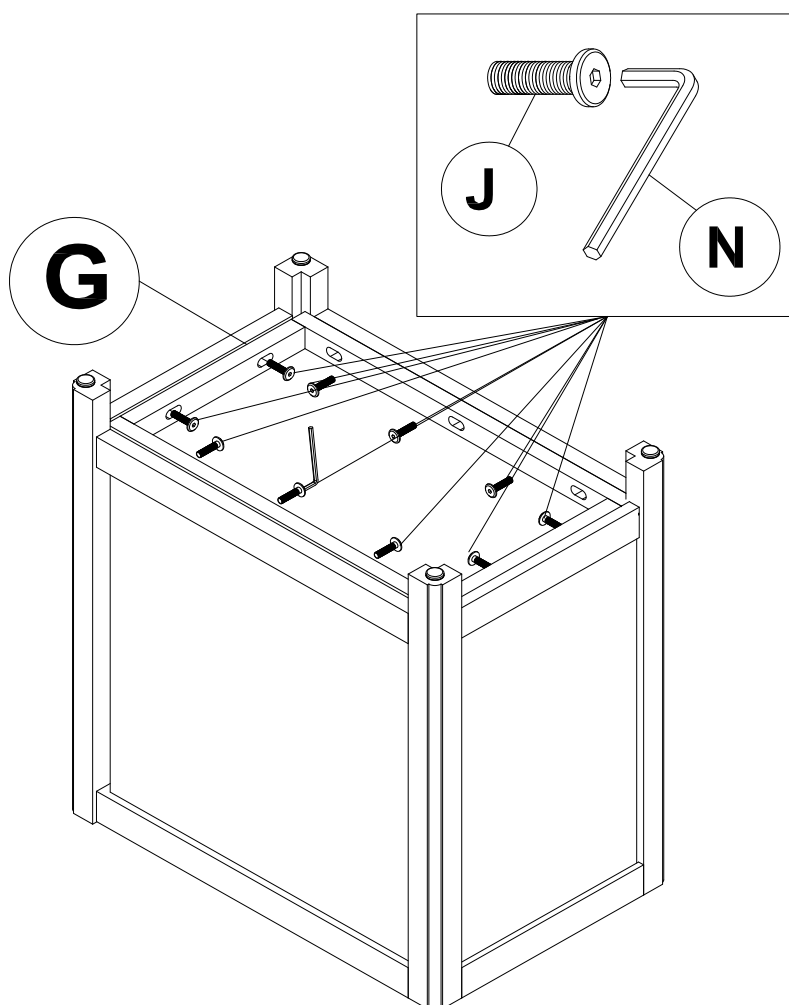


J		10
M6*30		
N		01

## Step 9:

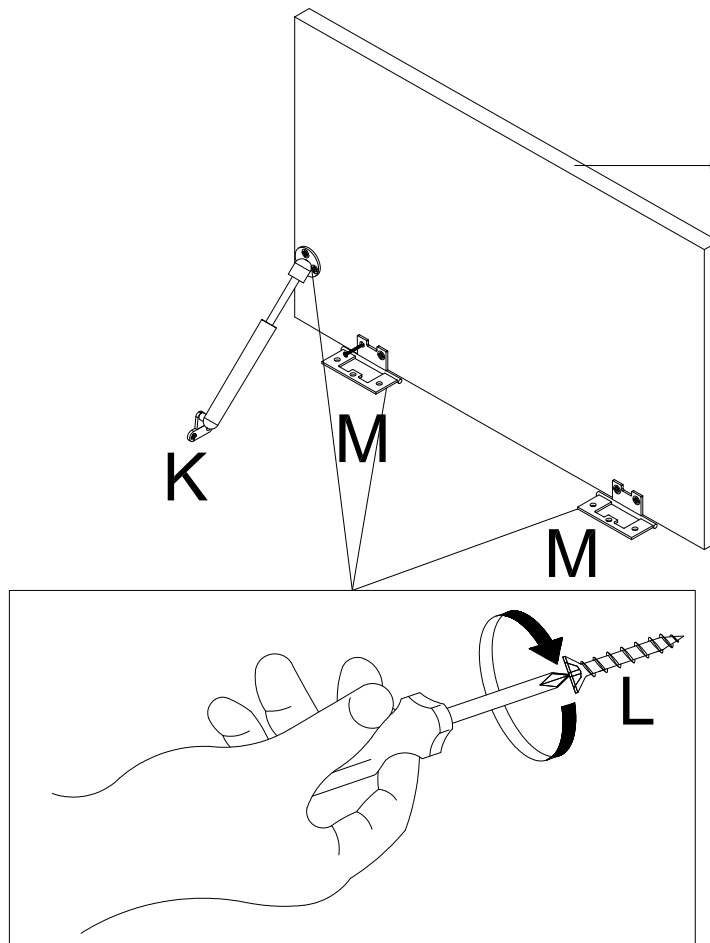

## Step 10:

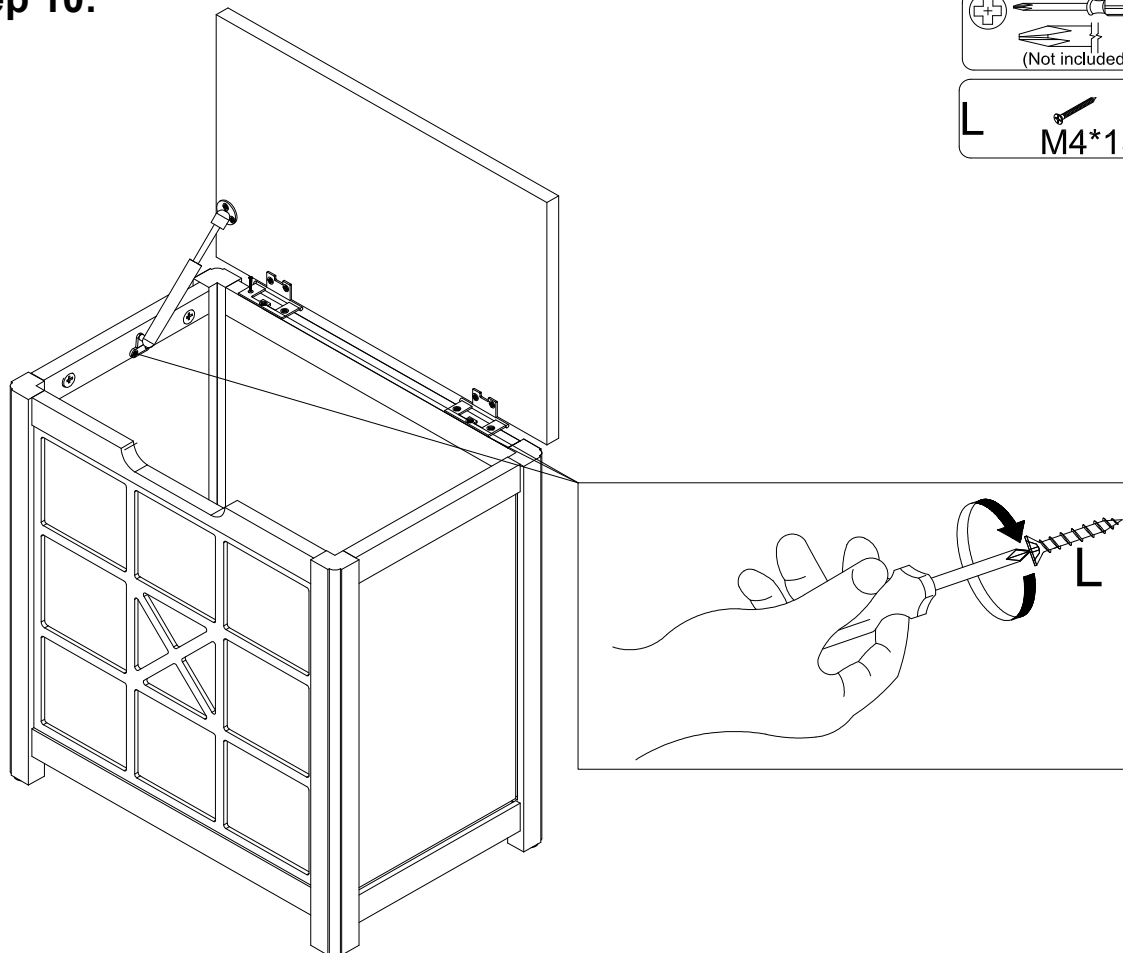


 **WARNING: To avoid serious personal injury:**


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# ASSEMBLY INSTRUCTIONS

## Bath Deluxe Storage Cabinet

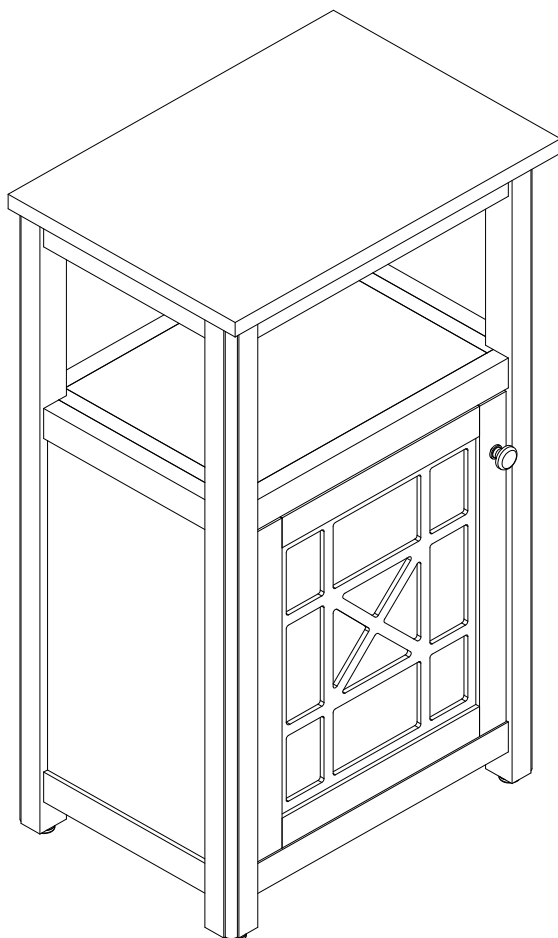


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!  
. Please assemble on a clean soft surface to avoid damage.

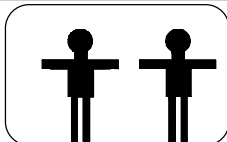


50 minutes


### Tool Included

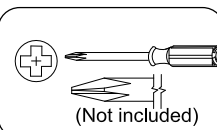



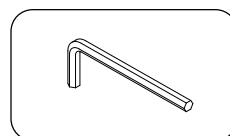


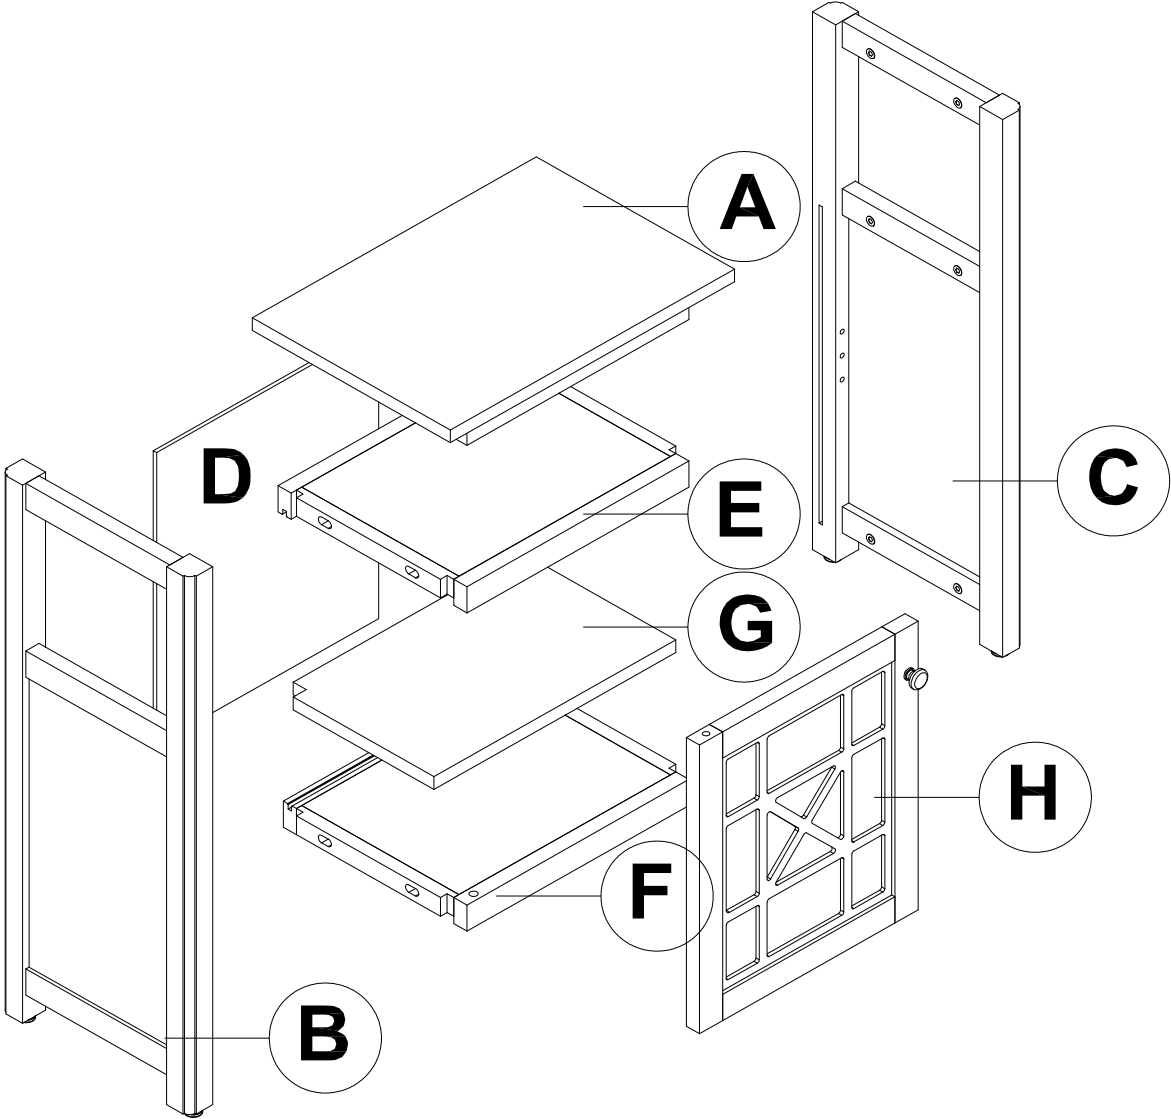


(Not included)



Part List- Bath Deluxe Storage Cabinet




**Identifying the hardware**-Identify the hardware using the illustrations below.

<b>I</b>  <b>M6X30mm</b> 12	<b>J</b>  <b>M6X45mm</b> 01	<b>K</b>  01	<b>L</b>  01
<b>M</b>  04	<b>N</b>  01	<b>O</b>  01	<b>P</b>  <b>M4*25</b> 01

## Step 1

I  02  
M6X30mm

N  01

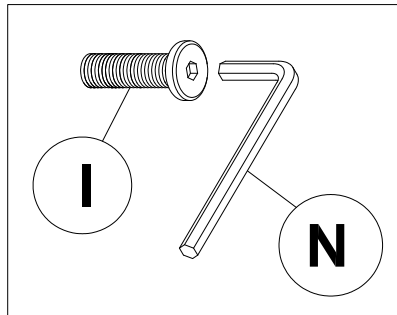


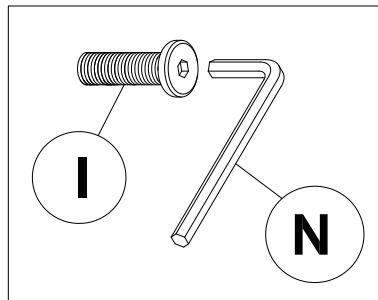
A

B

## Step 2


I  02  
M6X30mm

N  01






E
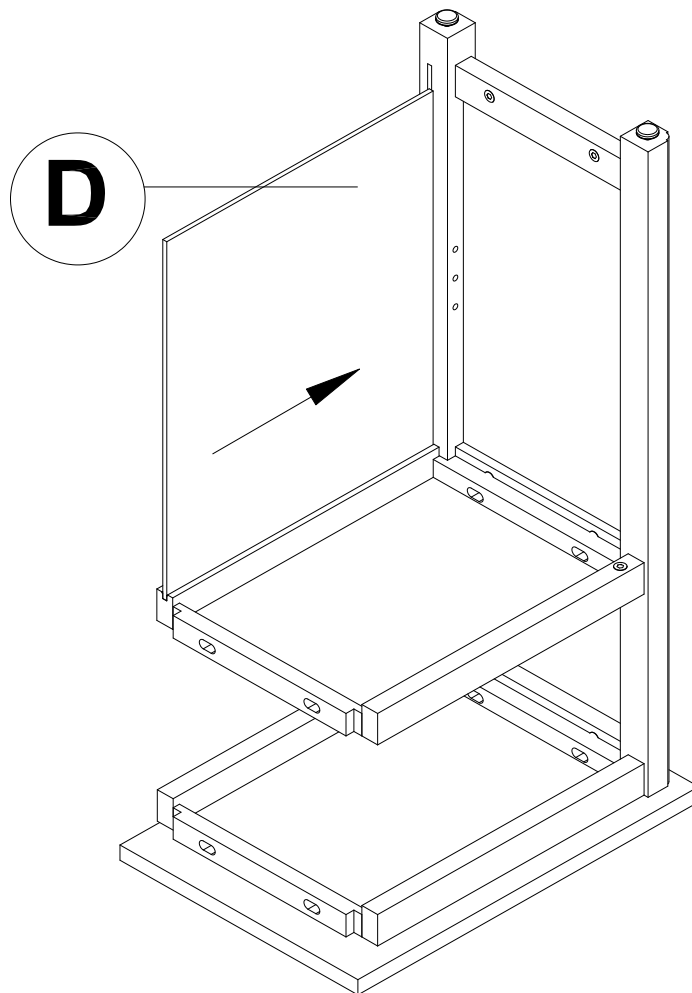
### Step 3

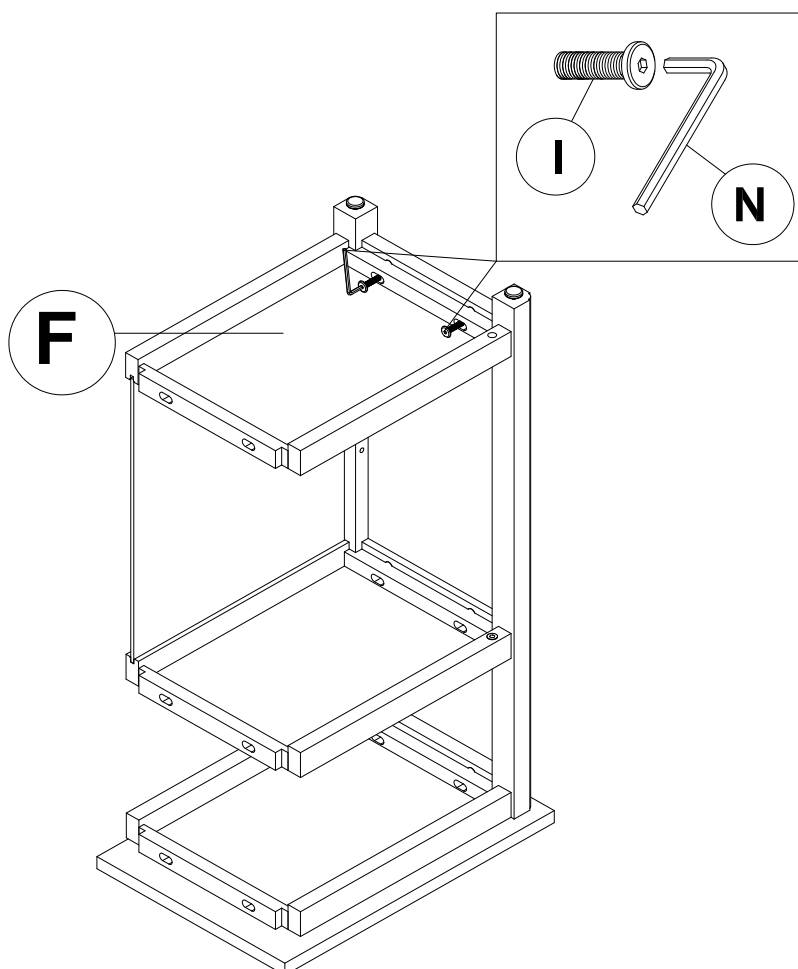


### Step 4:





<b>I</b>		<b>02</b>
	<b>M6X30mm</b>	
<b>N</b>		<b>01</b>

## Step 5:



**I**  **06**  
**M6X30mm**

**N**  **01**

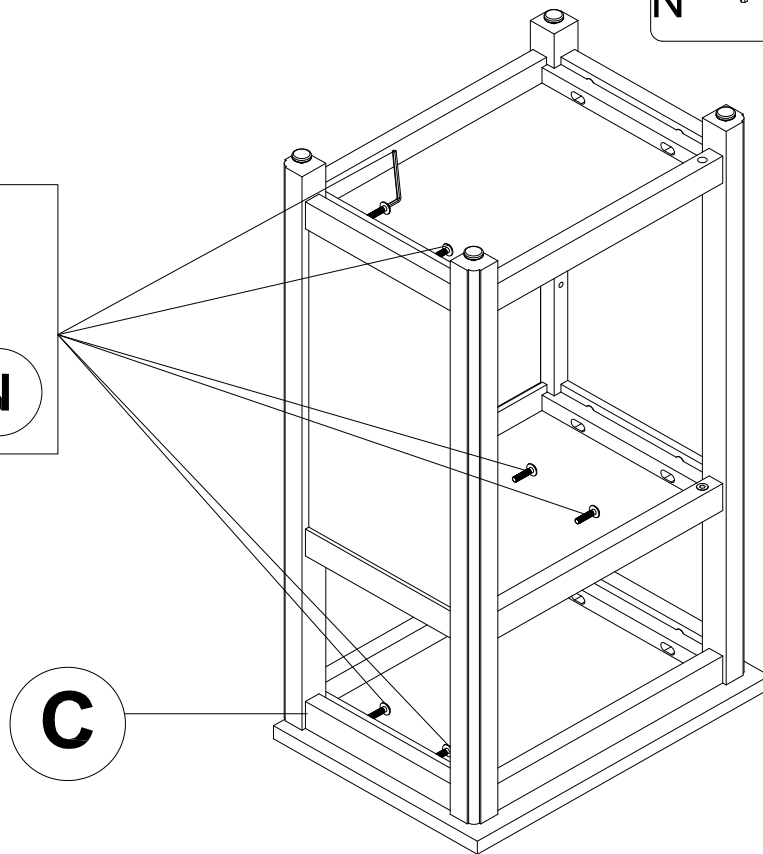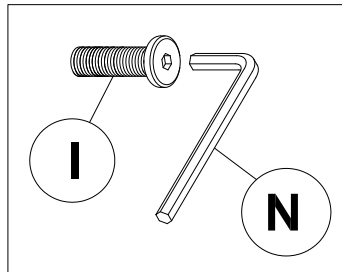


## Step 6:

**M**  **04**

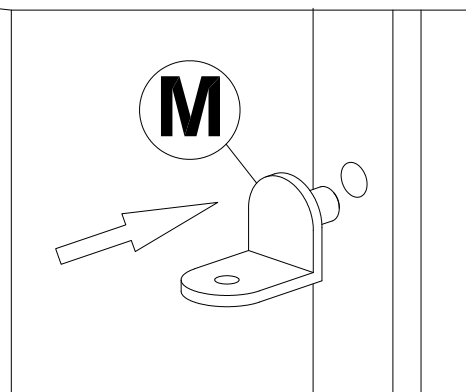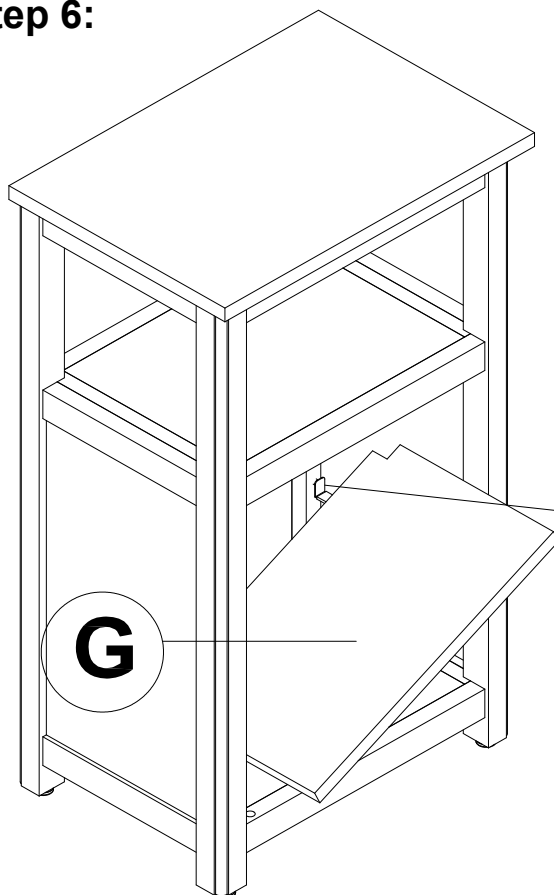

## Step 7:

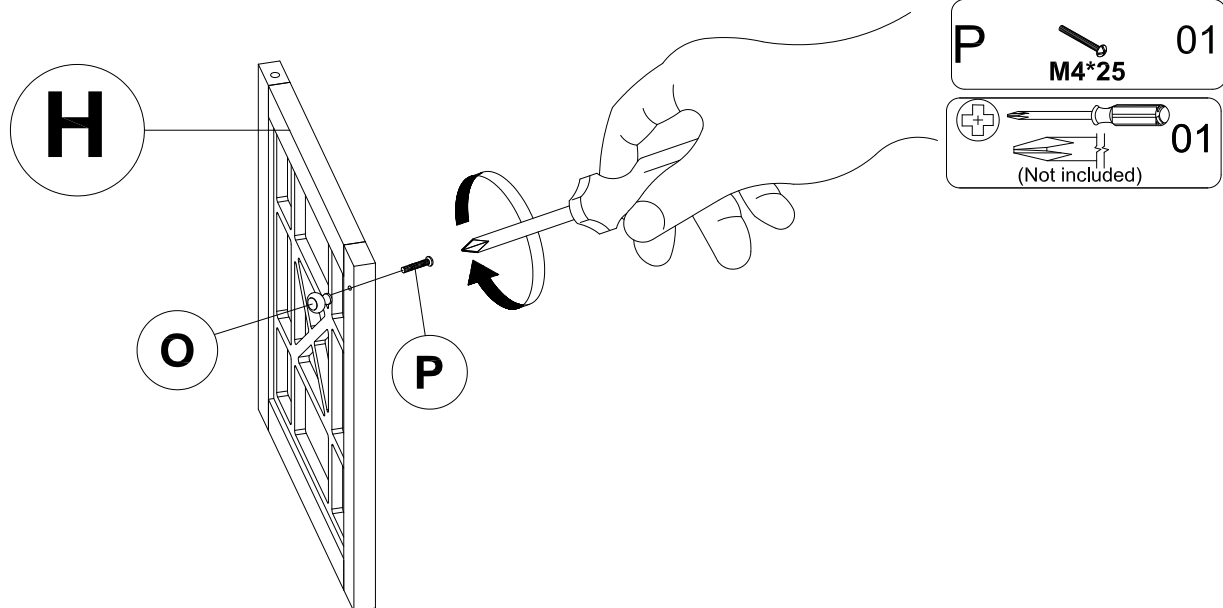

## Step 8:

