
WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small
 parts and hardware that may present a choking hazard to small children.
 Bob's furniture should be assembled only by responsible adults and children
 should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as
 prescribed in these instructions to anchor furniture to wall. Proper use of the
 wall mounting hardware can significantly reduce the potential for furniture
 tip-over and crushing injuries.


ASSEMBLY INSTRUCTIONS

Over Toilet Hutch with Doors

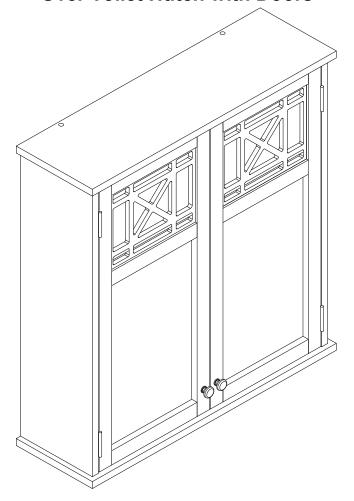





- . Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
- . Please assemble on a clean soft surface to avoid damage.

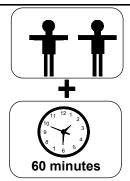


Tool Included



Part List-Over Toilet Hutch with Doors

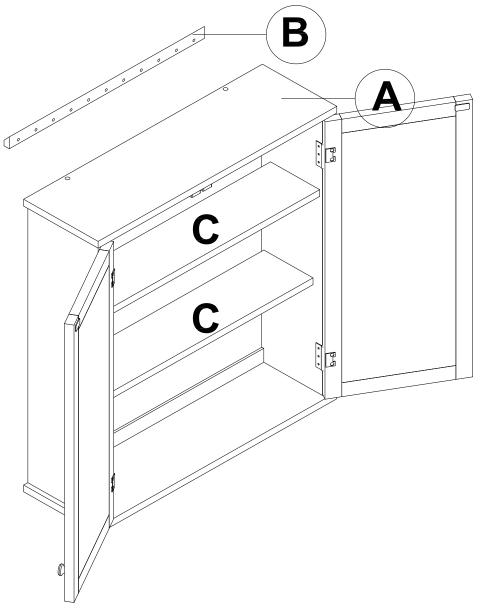


Identifying the hardware-Identify the hardware using the illustrations below.

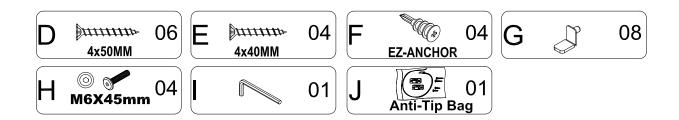


Step 1

Remove French Cleat(B) from the back of the Over Toilet Hutch with Doors by unscrewing 2 pre-installed Wood Screw(D)from the top of the hutch.

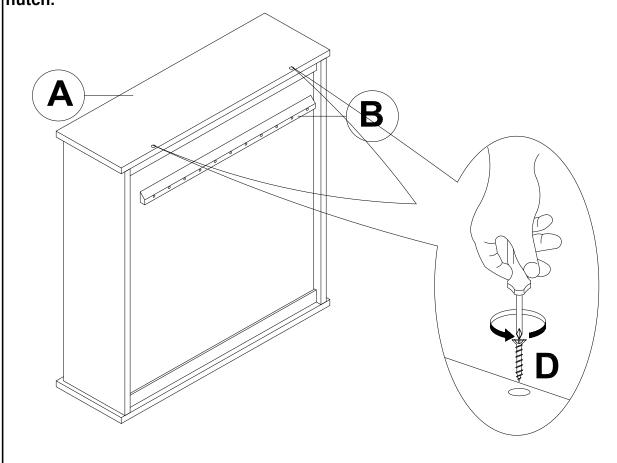

Step 2

Open the doors of the Over Toilet Hutch with Doors(A), Insert 8 Shelf Clips(G) in Holes on Side Frames at desired location. Place Shelves(C) on

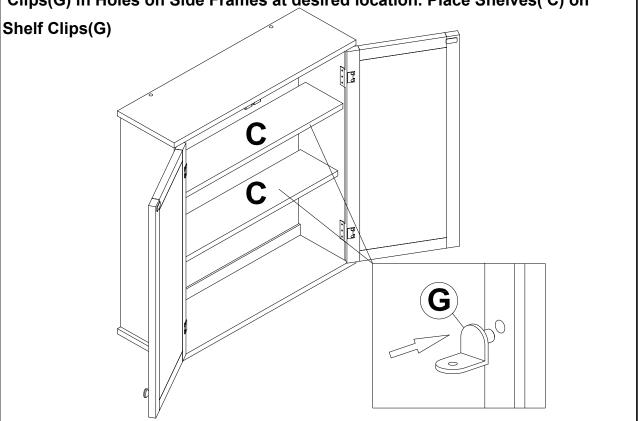

Note: If possible, we recommend that you secure cleat (B) to stud in wall.


Step 3

Position Cleat (B) on wall in desired location where shelf will be hung. Make sure cleat is level.

Step 4

Using Cleat (B) as template, align holes in cleat to stude in wall. Drill 1/8" pilot holes 3/4" deep.


Step 5

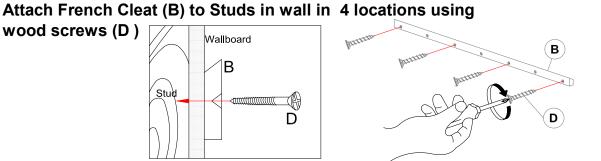

Step 6


If hole locations do not align with stud in wall, install the EZ Anchor(F) in to drywall by tapping it in to the predrilled pilot holes up to the thread, and then screwing the EZ Anchor in to the drywall. Attach Cleat (B) using wood screw (E) to EZ Anchors.

NOTE: Cleat could be secured using combination of Studs and EZ Anchors.

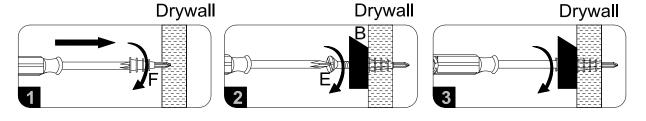


Step 7:

Hang Shelf(A) on cleat. Secure in 2 places using wood screw (D).

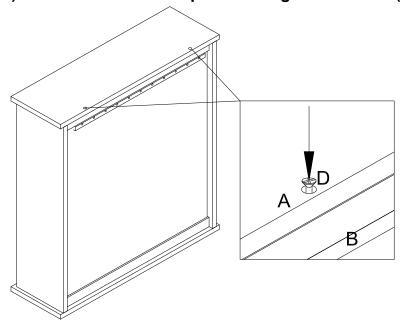


To attach Over Toilet Hutch with Doors on optional Over Toilet Shelf (ANDE72WH)



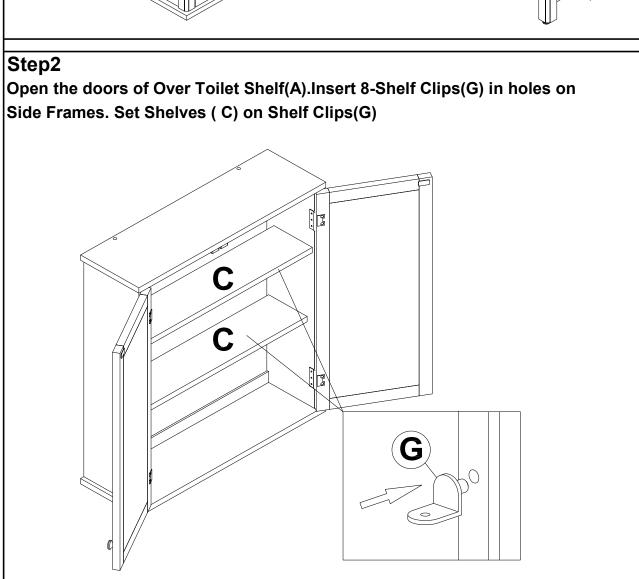

Step3
Attached Over Toilet Hutch with Doors(A) on Over Toilet Shelf using 4-M6x45mm Hex Bolts(H).


Note: Tighten all bolts at this time!

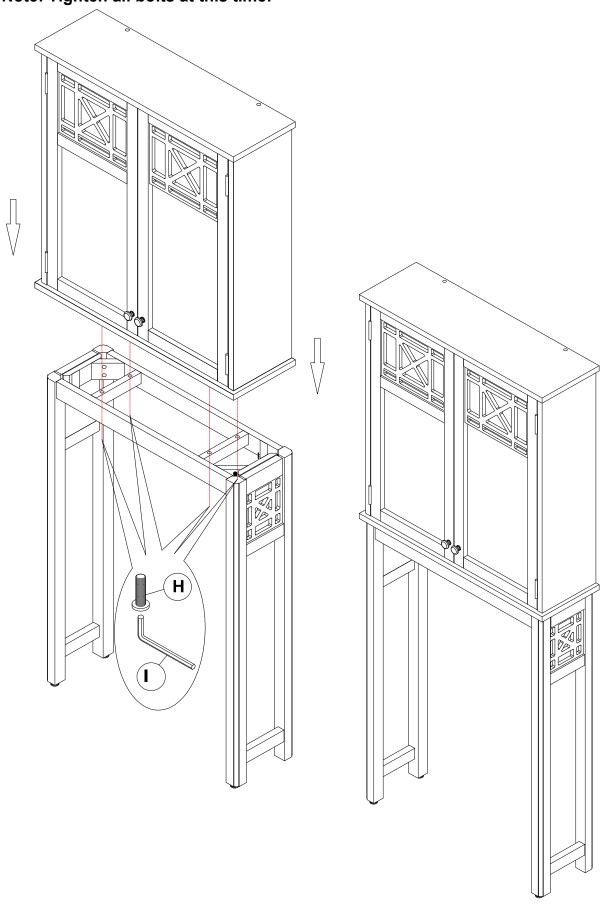

"J" Anti-Tip Bag

Α	4x14 Screw	02	С	Plastic wall bracket	02
В	4x35 Screw	02	D	Nylon strap 1 40mm	01

Secure to Stud behind Wallboard

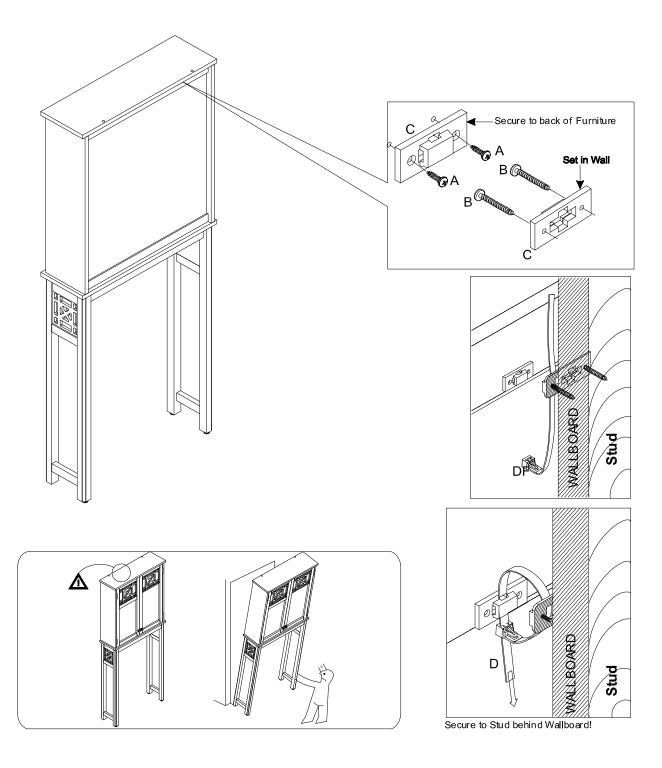


WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small
 parts and hardware that may present a choking hazard to small children.
 Bob's furniture should be assembled only by responsible adults and children
 should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as
 prescribed in these instructions to anchor furniture to wall. Proper use of the
 wall mounting hardware can significantly reduce the potential for furniture
 tip-over and crushing injuries.


ASSEMBLY INSTRUCTIONS

Bath Deluxe Storage Cabinet

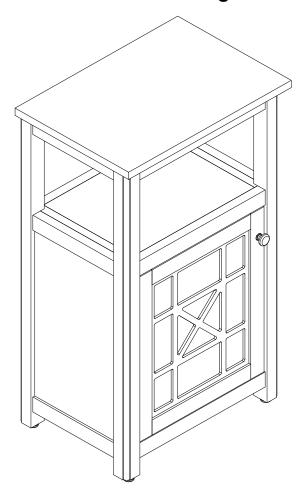





- . Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
- . Please assemble on a clean soft surface to avoid damage.

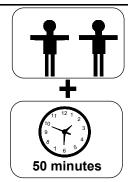

Tool Included

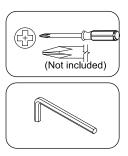

Part List- Bath Deluxe Storage Cabinet

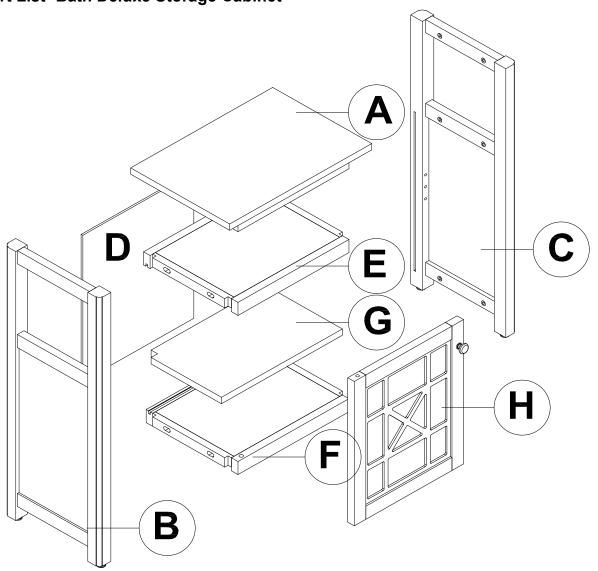

Identifying the hardware-Identify the hardware using the illustrations below.

