
# WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small
  parts and hardware that may present a choking hazard to small children.
  Bob's furniture should be assembled only by responsible adults and children
  should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as
  prescribed in these instructions to anchor furniture to wall. Proper use of the
  wall mounting hardware can significantly reduce the potential for furniture
  tip-over and crushing injuries.


# **ASSEMBLY INSTRUCTIONS**

# **Over Toilet Hutch with Mixed Storage**

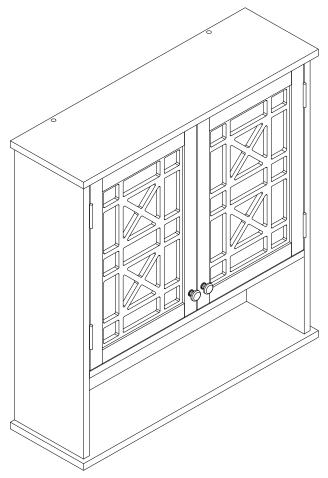





- . Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
- . Please assemble on a clean soft surface to avoid damage.

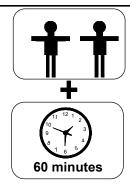


#### **Tool Included**

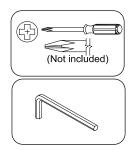

Part List- Over Toilet Hutch with Mixed Storage

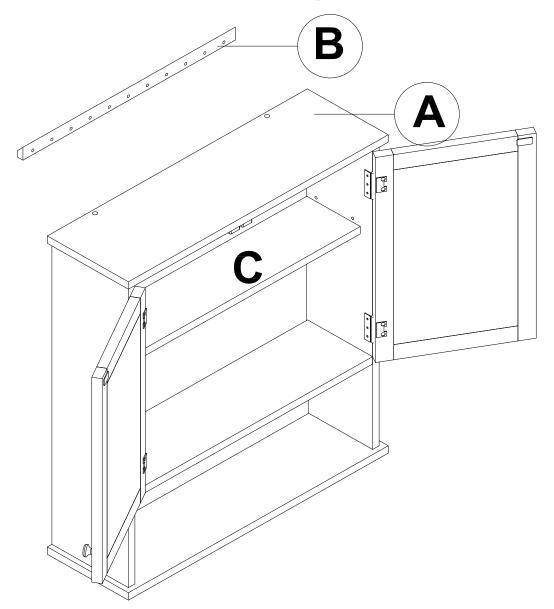


**Identifying the hardware**-Identify the hardware using the illustrations below.

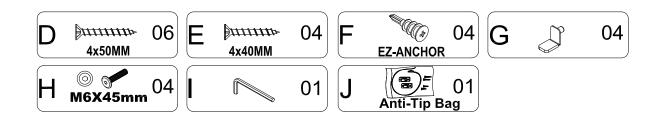


# Step 1

Remove French Cleat(B) from the back of the Over Toilet Hutch with Mixed Storage by unscrewing 2 pre-installed Wood Screw(D)from the top of the hutch.

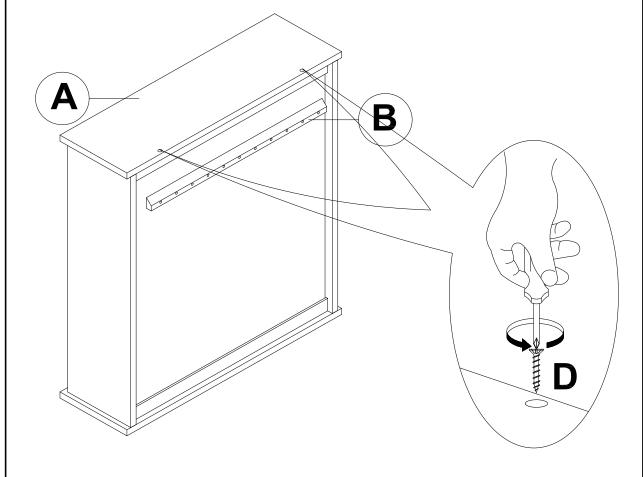

## Step 2

Open the doors of the Over Toilet Hutch with Mixed Storage(A), Insert 4 Shelf Clips(G) in Holes on Side Frames at desired location. Place Shelf( C) on

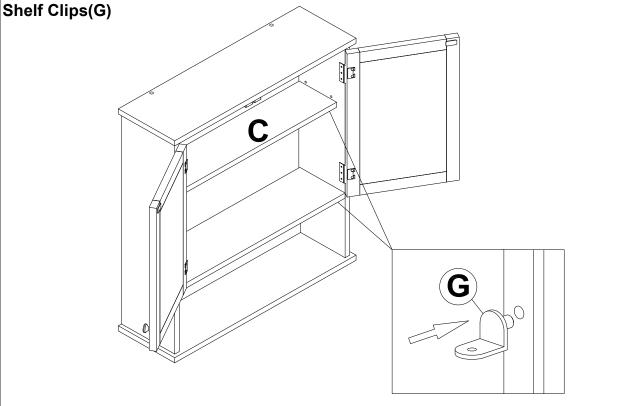

Note: If possible, we recommend that you secure cleat (B) to stud in wall.


#### Step 3

Position Cleat (B) on wall in desired location where shelf will be hung. Make sure cleat is level.

#### Step 4

Using Cleat (B) as template, align holes in cleat to stude in wall. Drill 1/8" pilot holes 3/4" deep.


#### Step 5

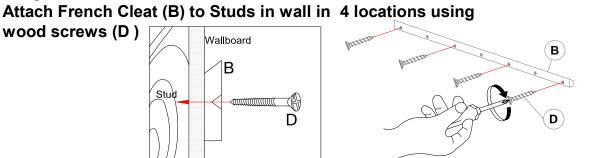

#### Step 6


If hole locations do not align with stud in wall, install the EZ Anchor(F) in to drywall by tapping it in to the predrilled pilot holes up to the thread, and then screwing the EZ Anchor in to the drywall. Attach Cleat (B) using wood screw (E) to EZ Anchors.

NOTE: Cleat could be secured using combination of Studs and EZ Anchors.

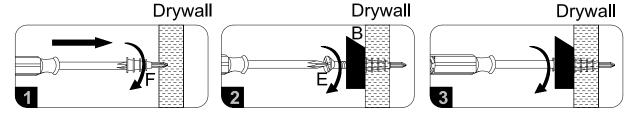

Step 7:


Hang Shelf(A) on cleat. Secure in 2 places using wood screw (D).

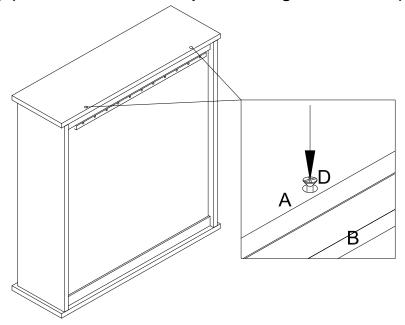

## TO MOUNT ON OPTIONAL OVER TOILET SHELF(ANDE72WH)


## Step1

Remove Table Top of Over Toilet Shelf by unscrewing 4 pre-installed Hex Bolts(H)

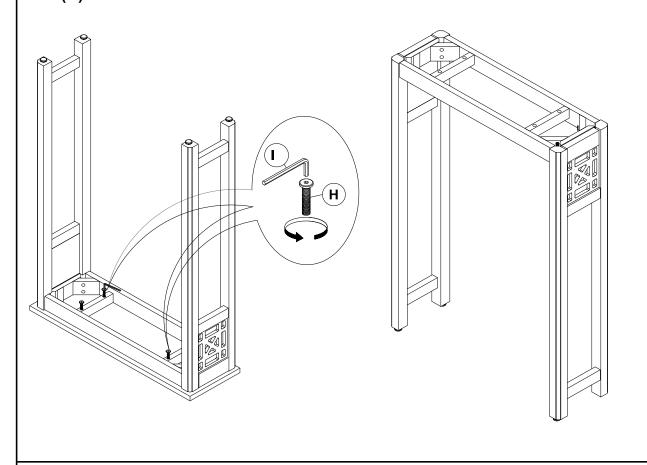


# Step2

Open the doors of Over Toilet Shelf(A).Insert 4-Shelf Clips(G) in holes on Side Frames. Set Shelf (C) on Shelf Clips(G)

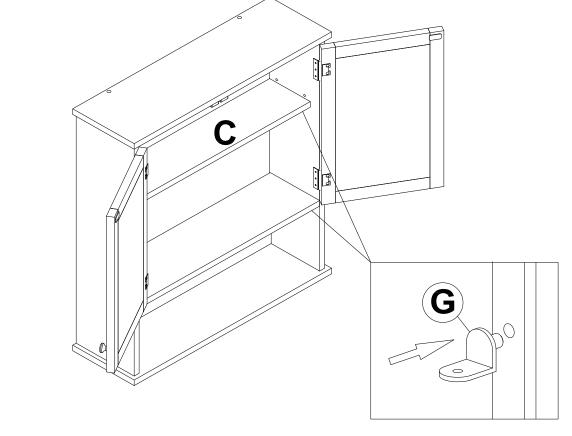

Step3
Attached Over Toilet Hutch with Mixed Storage(A) on Over Toilet Shelf using 4-M6x45mm Hex Bolts(H).

Note: Tighten all bolts at this time!

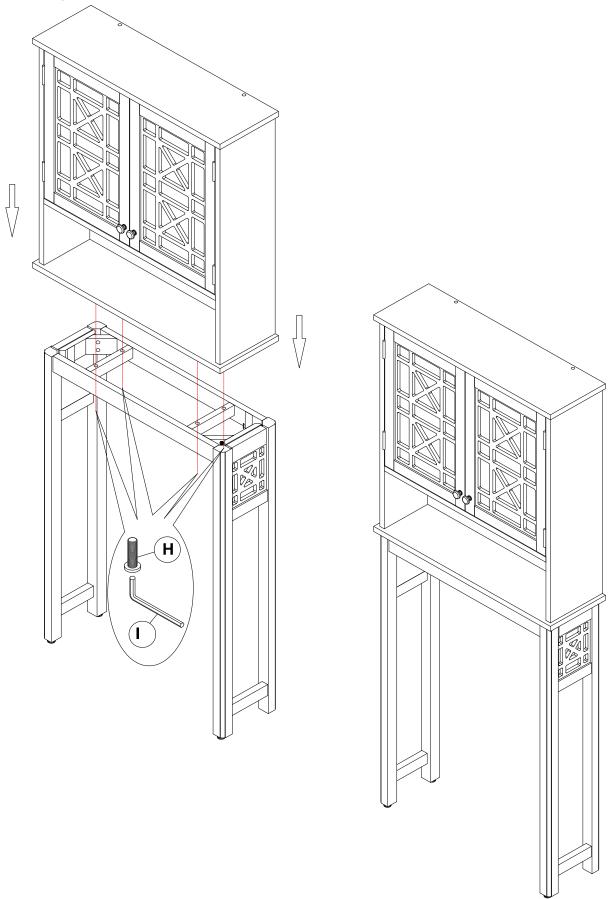

# "J" Anti-Tip Bag

Α	4x14 Screw	02	C	Plastic wall bracket	02
В	4x35 Screw	02	D	Nylon strap 1 40mm	01

