
## WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small
  parts and hardware that may present a choking hazard to small children.
  Bob's furniture should be assembled only by responsible adults and children
  should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as
  prescribed in these instructions to anchor furniture to wall. Proper use of the
  wall mounting hardware can significantly reduce the potential for furniture
  tip-over and crushing injuries.

# Bathroom 20x48" Wall Storage

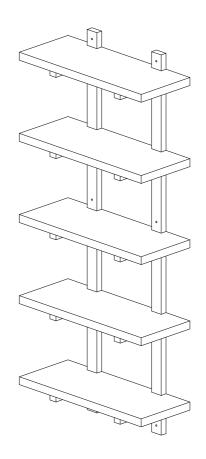

Thank you for purchasing the Bathroom 20x48" Wall Storage. We have found it helpful to have a second person present during the assembly process.

## **Wall Storage Assembly Instructions**

### **Parts**

NO.	DRAWING	DESCRIPTION	QTY
A		METAL FRAME	2
В		SHELF	5

NO.	DRAWING	DESCRIPTION	QTY
С	<u> </u>	M6x35MM BOLT	20
D	<del>hiiiii</del>	4x60MM SCREW	6
E		ALLEN KEY	1
F	444444444	DRYWALL EZ ANCHOR	6

#### Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

#### Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish


#### Step 3

Lay Metal Frame Assembly (A) on a non abrasive surface. Attach Shelf (B) to Metal Frame (A) using 20-M6x35MM Hex Bolts (C). NOTE: TIGHTEN ALL BOLTS AT THIS TIME!

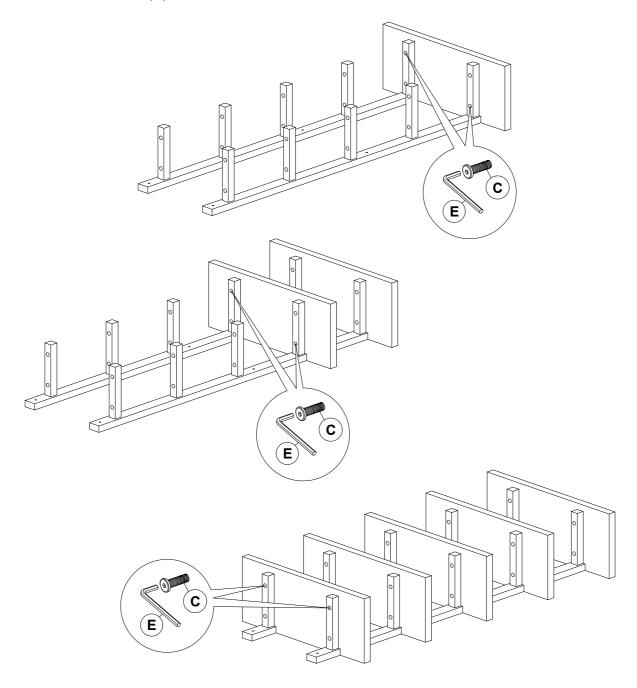

#### Step 4

Position Wall Storage in desired location. Mark holes where metal frame will be attach to wall. If possible, attach the Wall Storage to a stud (when possible) behind drywall using 6-4x60MM Wood Screws (D). NOTE: If hole locations do not align with stud, install the Drywall EZ Anchors (F). Tap the EZ Anchor into the drywall up to the thread. Using a Phillips head screw driver, secure the EZ Anchor in the drywall at the desired locations. Attach the Wall Storage to the EZ Anchors using 6-4x60MM Wood Screws.

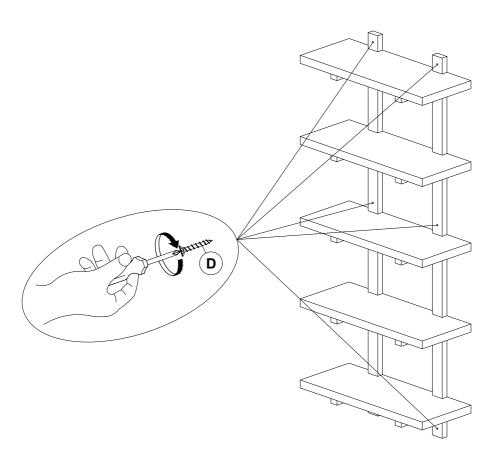

#### **CARE**

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.