





**WARNING: To avoid serious personal injury:**



- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# ASSEMBLY INSTRUCTIONS



## Over Toilet Organizer w/ Side Shelving

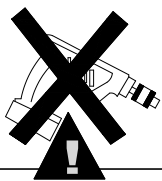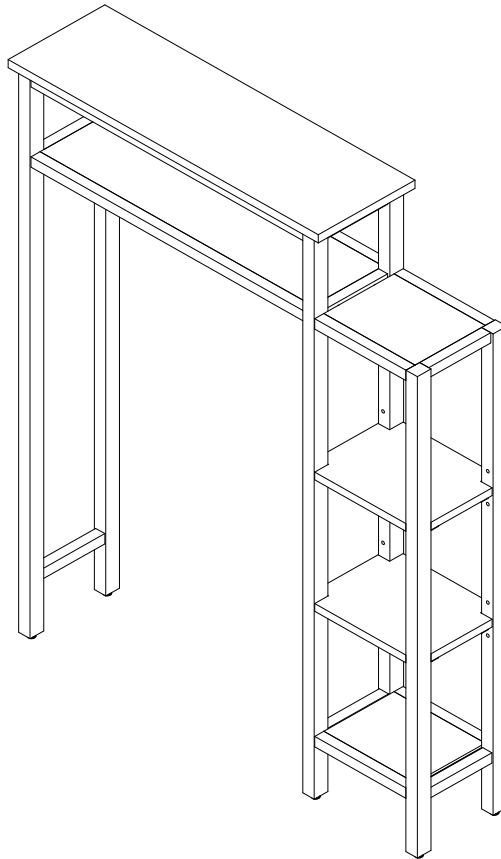


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!  
. Please assemble on a clean soft surface to avoid damage.

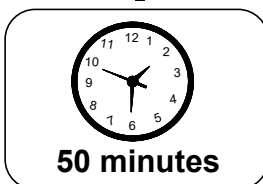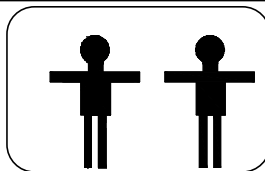





### Tool Included

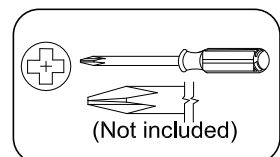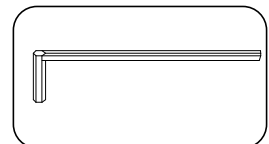




Part List- Over Toilet Organizer w/ Side Shelving

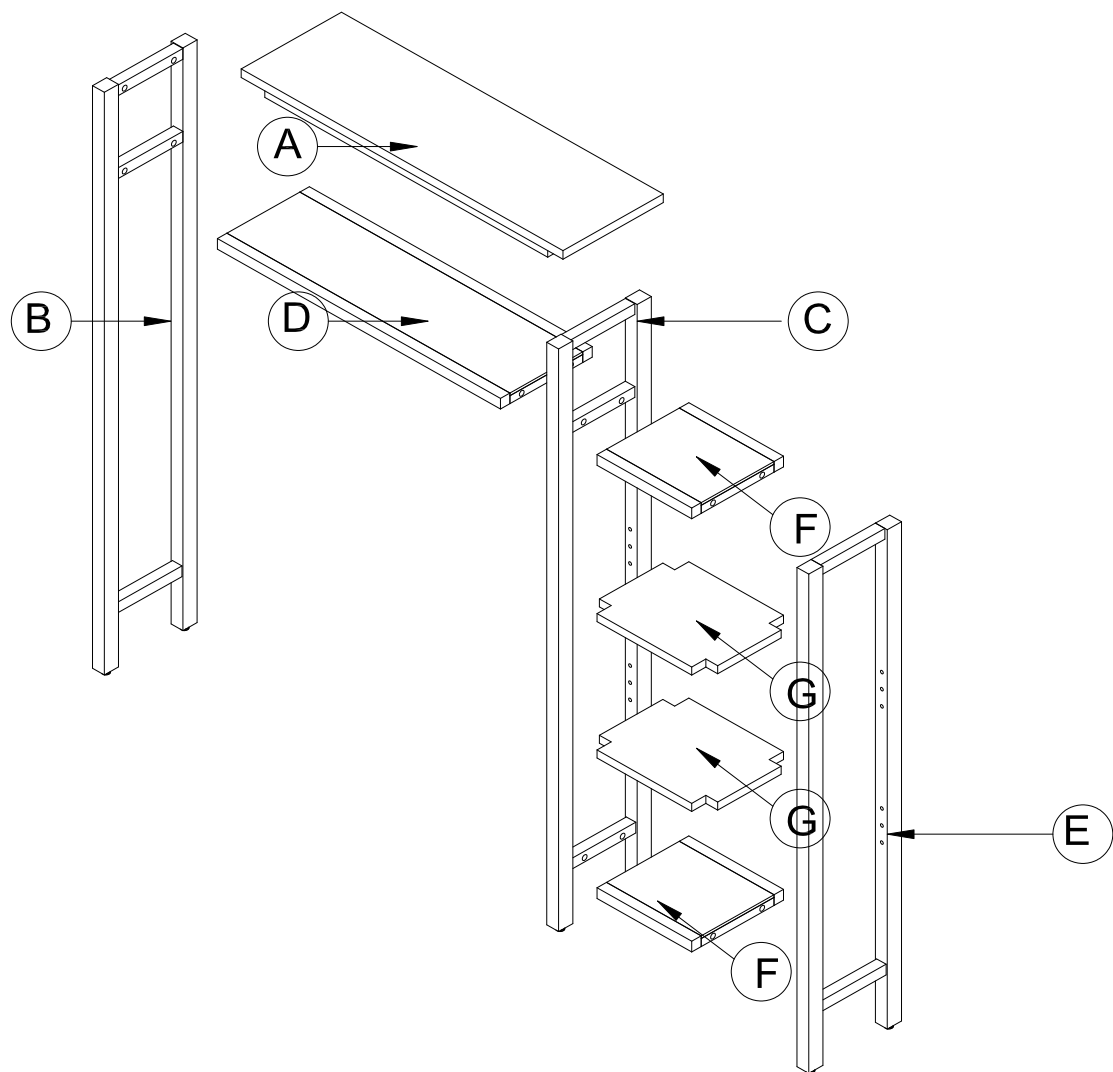




Identifying the hardware-Identify the hardware using the illustrations below.

<b>H</b>		<b>16</b>	<b>I</b>		<b>08</b>
<b>M6X35mm</b>					
<b>J</b>		<b>01</b>	<b>K</b>		<b>01</b>
			<b>Anti-Tip Bag</b>		


## STEP 1

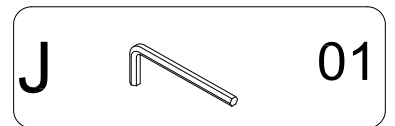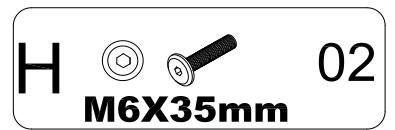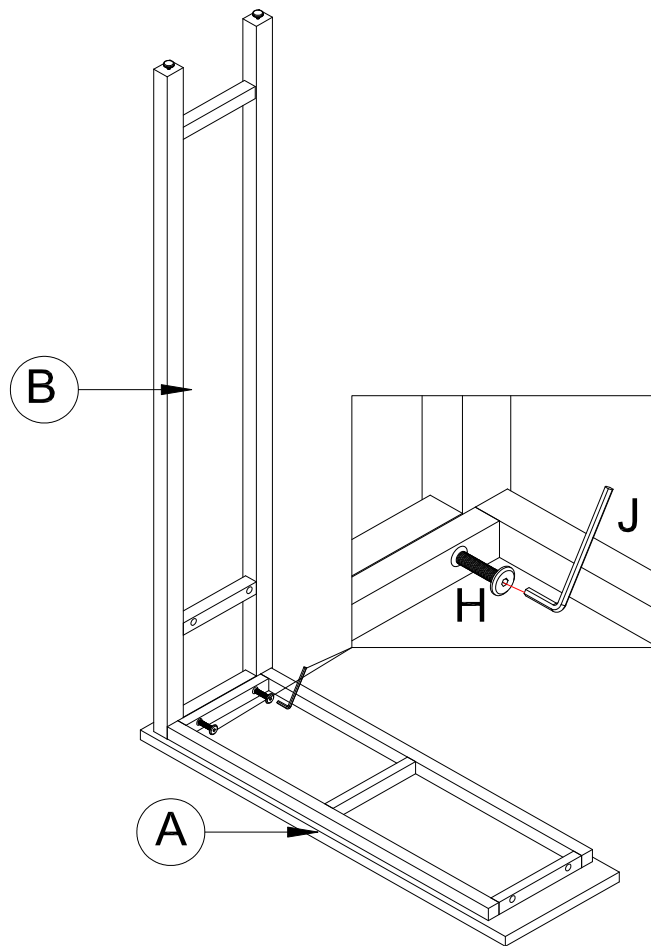


## STEP 2

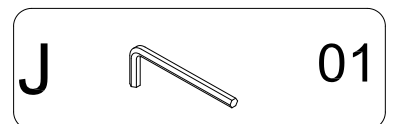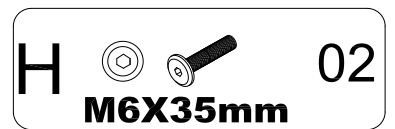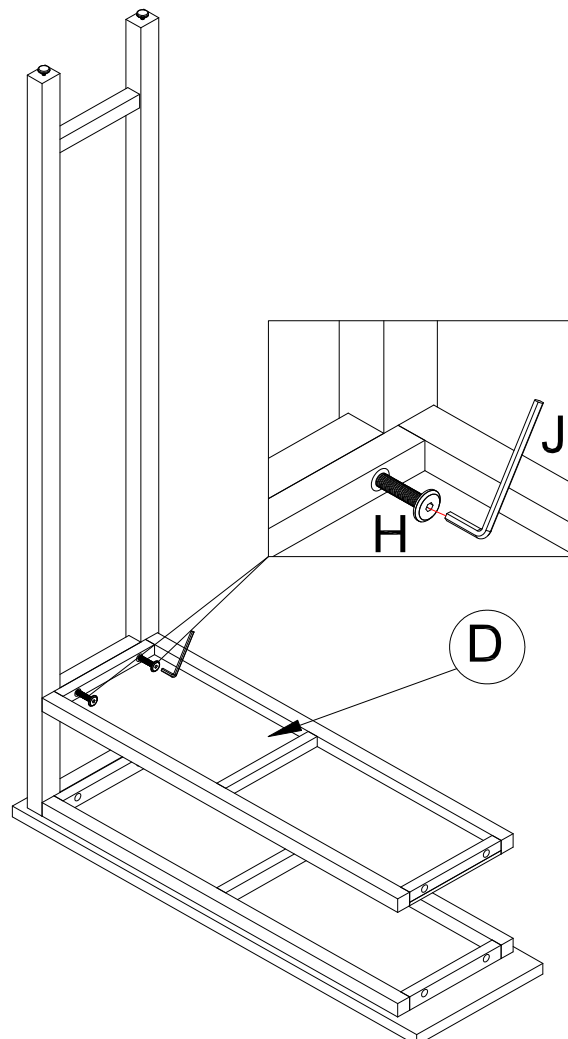


## STEP 3

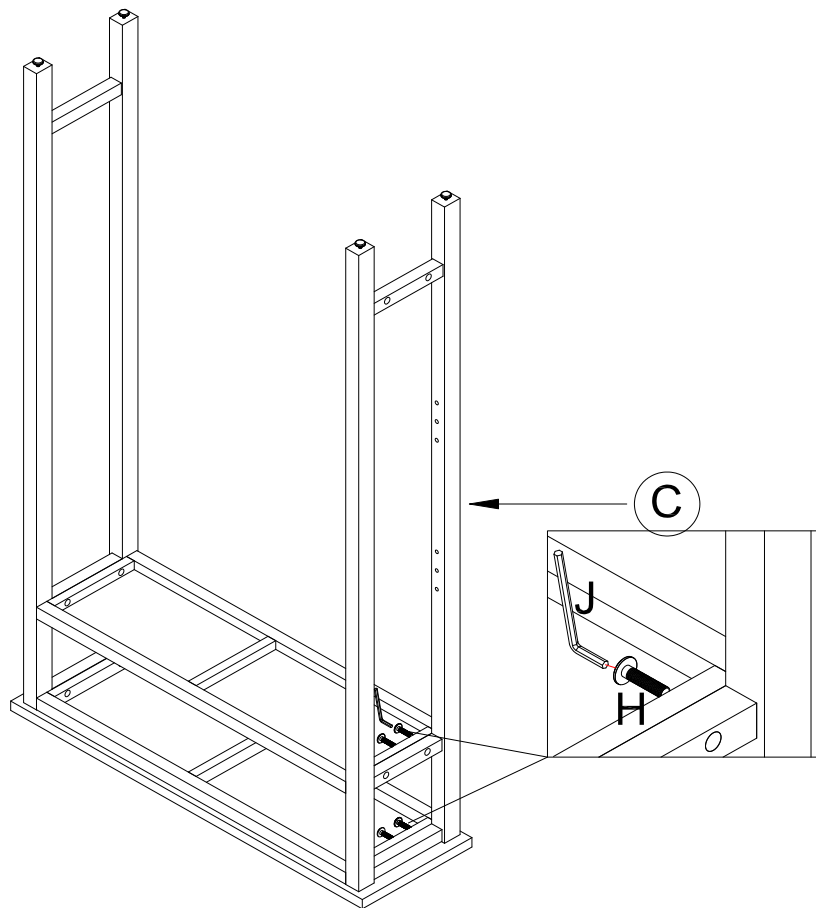


**H**  **04**  
**M6X35mm**

**J**  **01**


## STEP 4

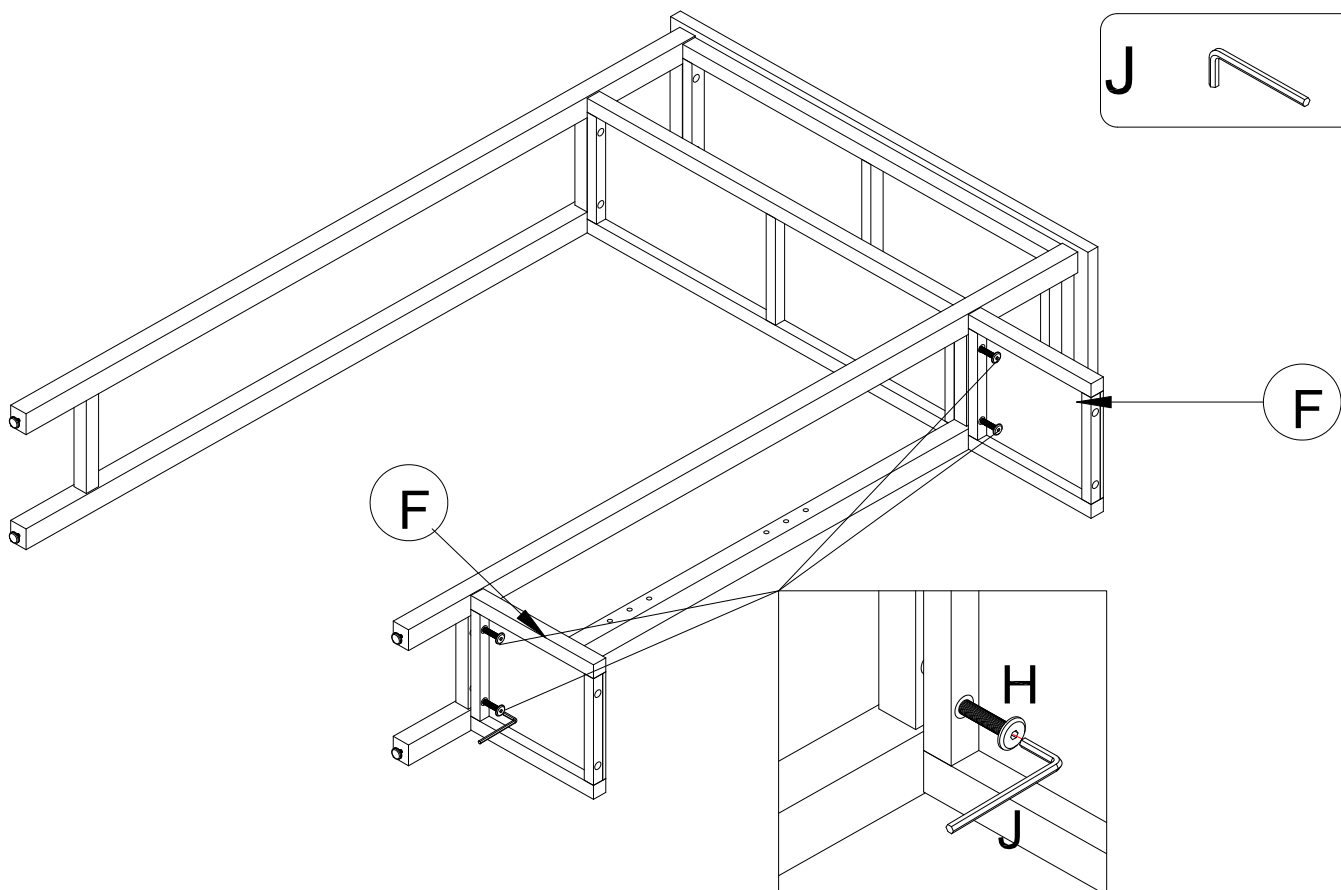



**H**  **04**  
**M6X35mm**

**J**  **01**

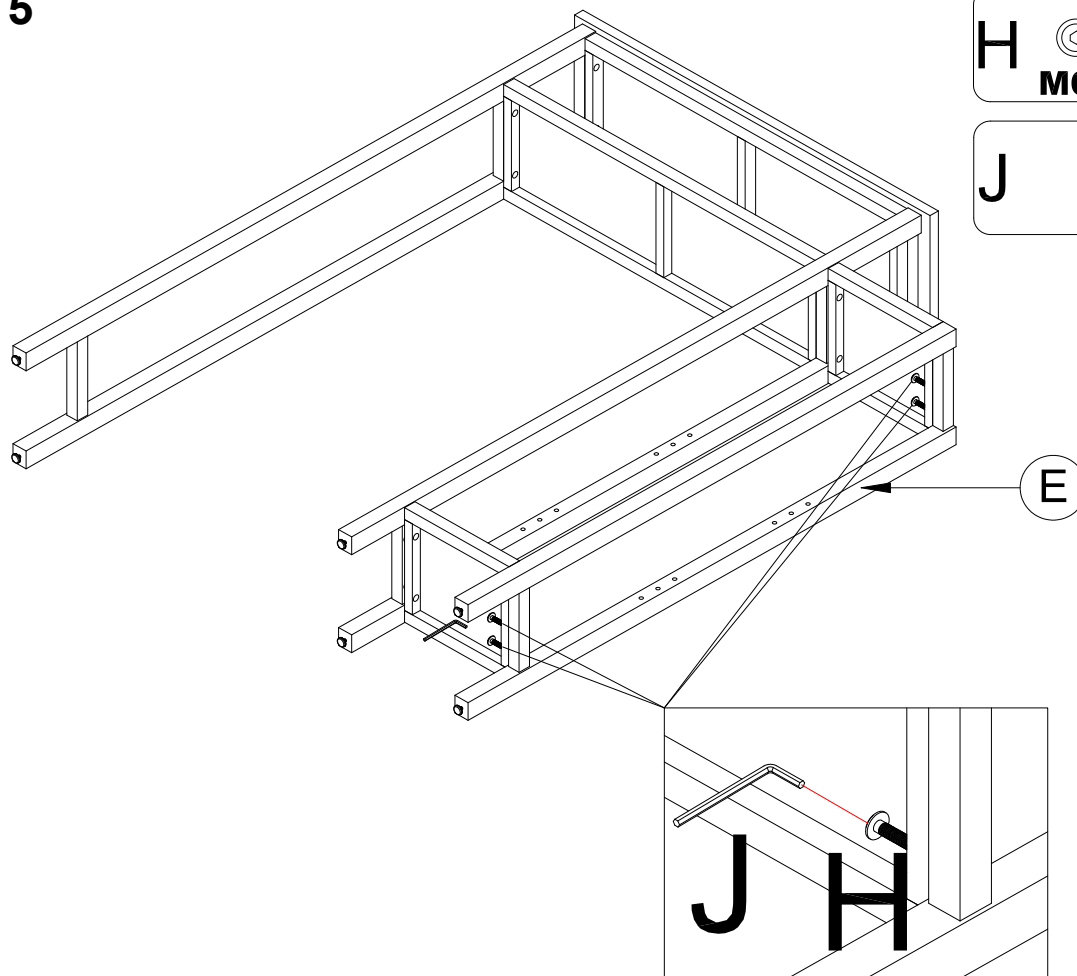
## STEP 5




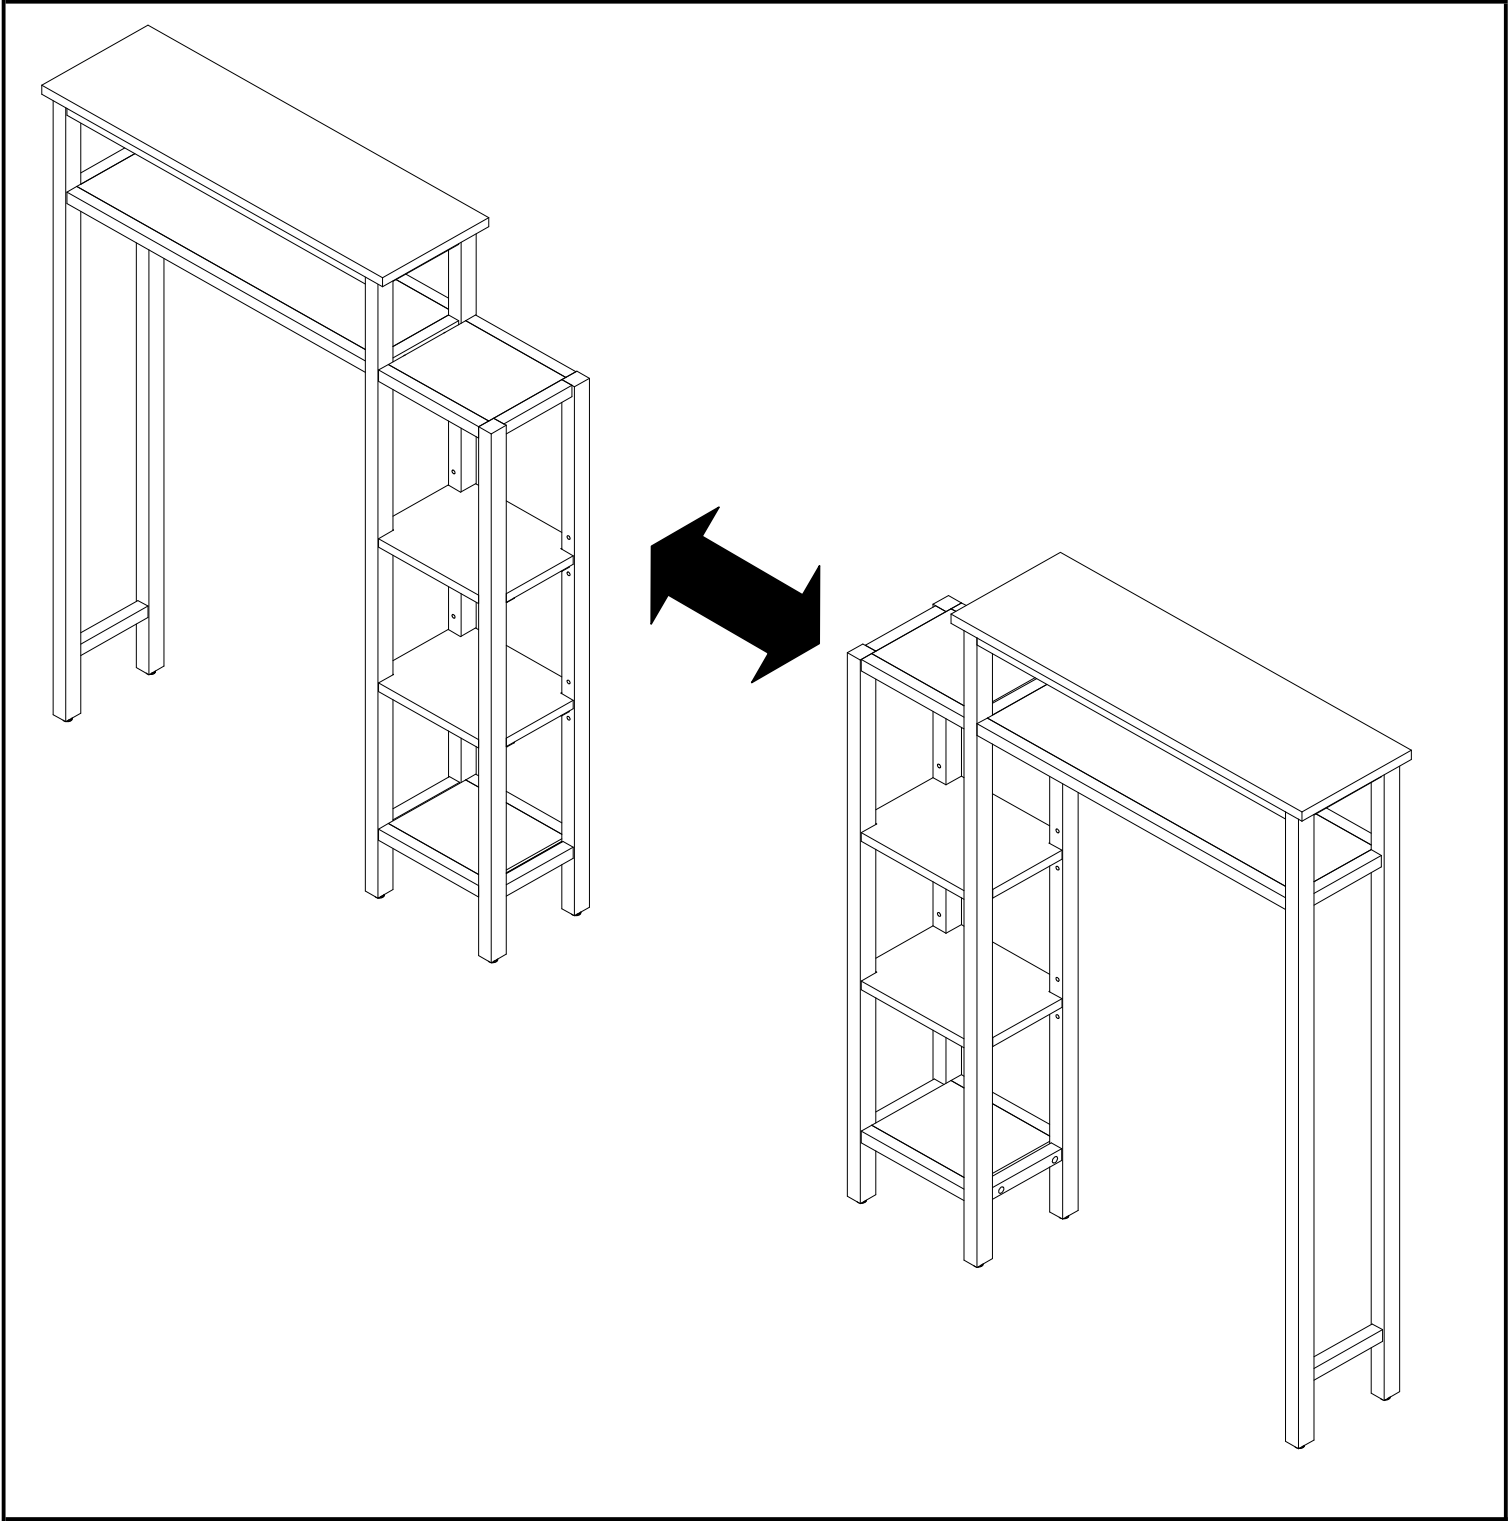
**H**  **04**  
**M6X35mm**

**J**  **01**





## STEP 6

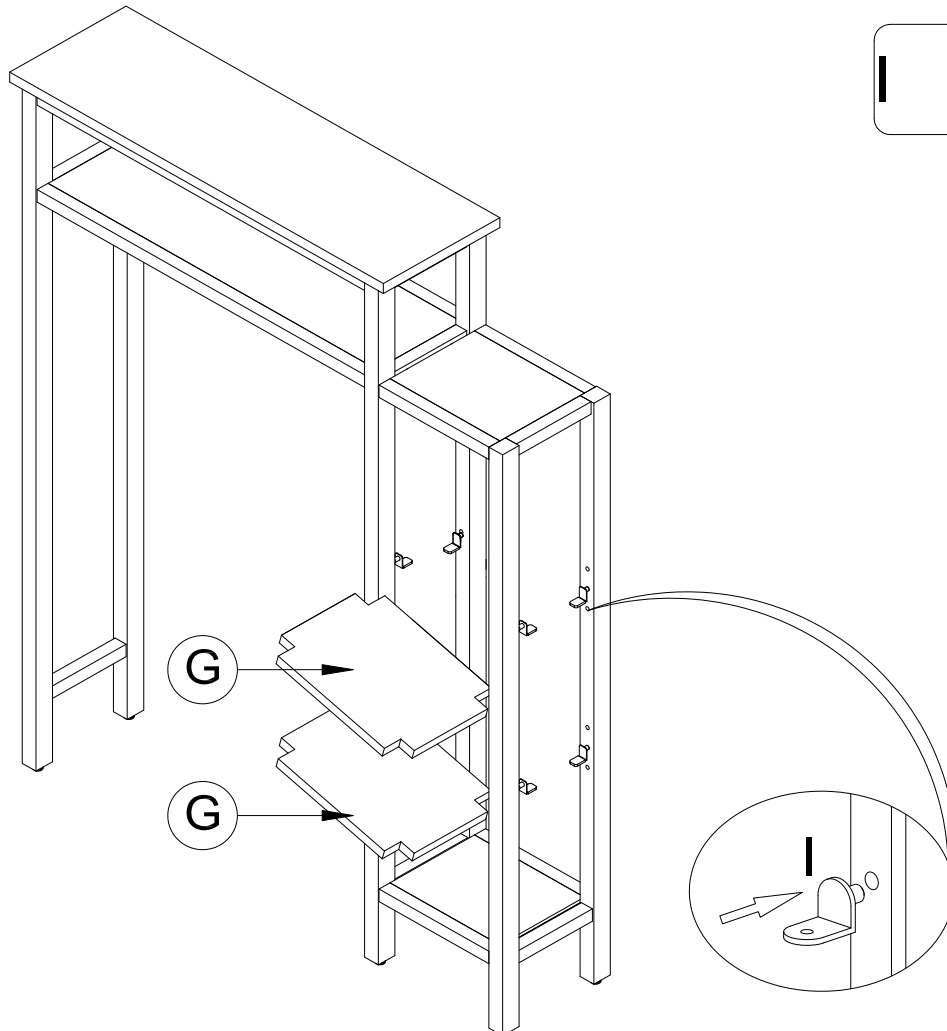






**I**  **08**



"K" ANTI-TIP BAG

A	 4x14 Screw	02	C	 Plastic wall bracket	02
B	 4x35 Screw	02	D	 Nylon strap 1 40mm	01

## Secure to Stud behind Wallboard

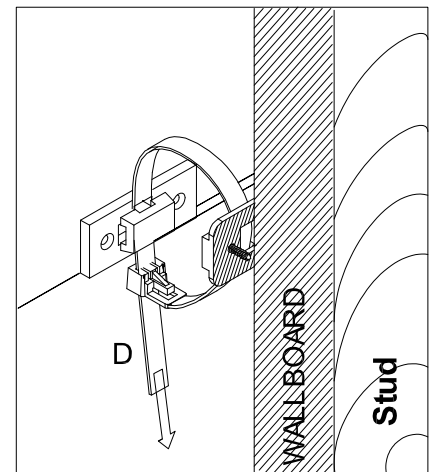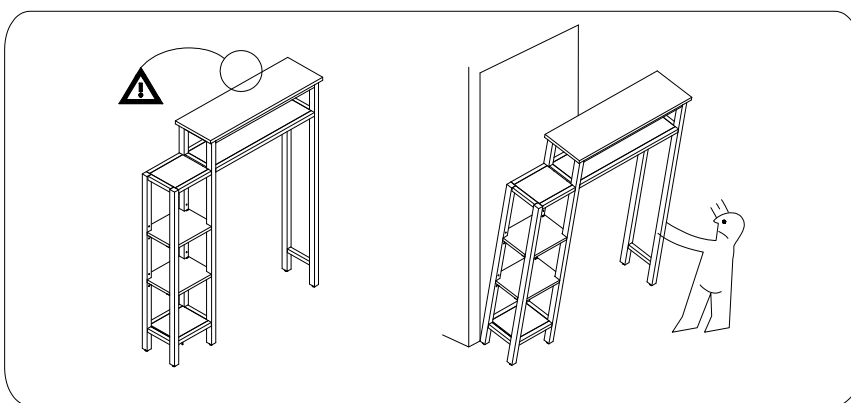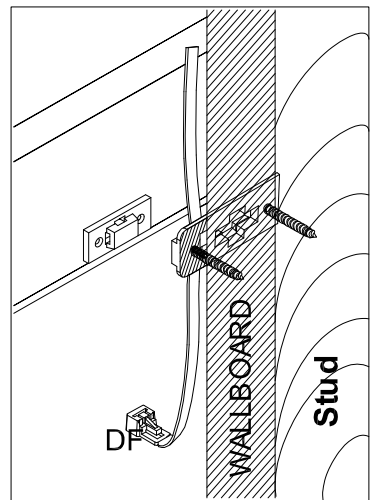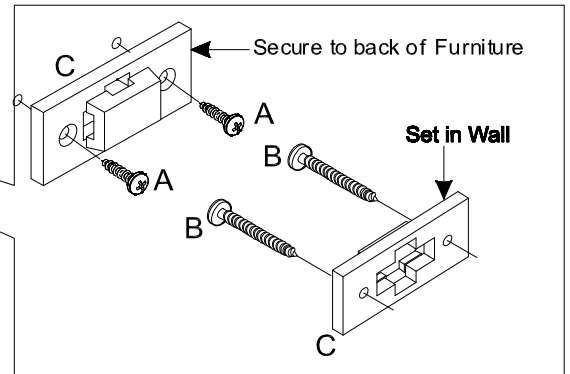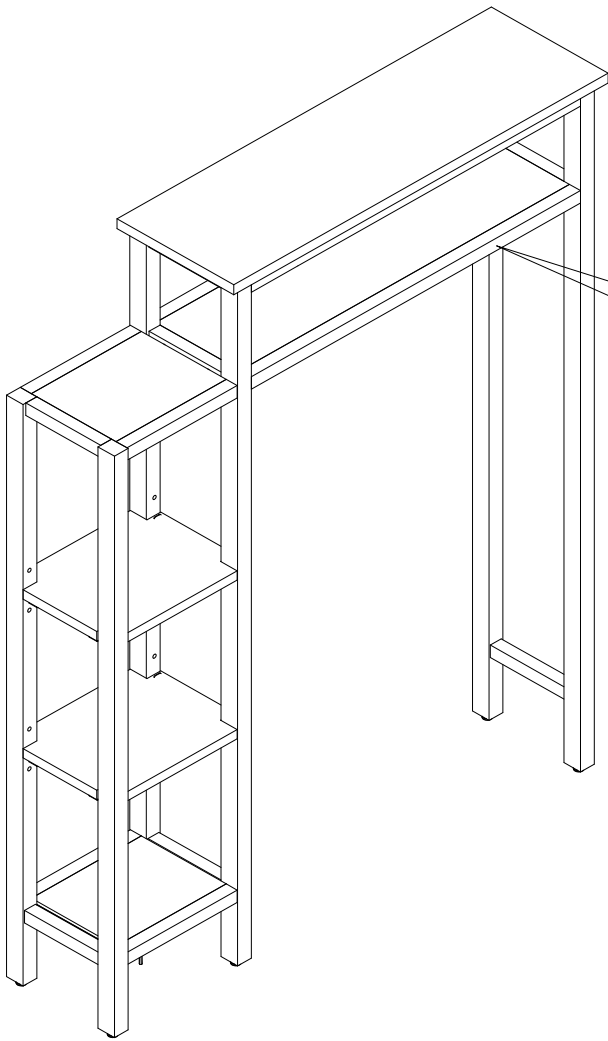


Secure to Stud behind Wallboard!

 **WARNING: To avoid serious personal injury:**


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# ASSEMBLY INSTRUCTIONS

## Bath Shelf w/ 2 Towel Rods

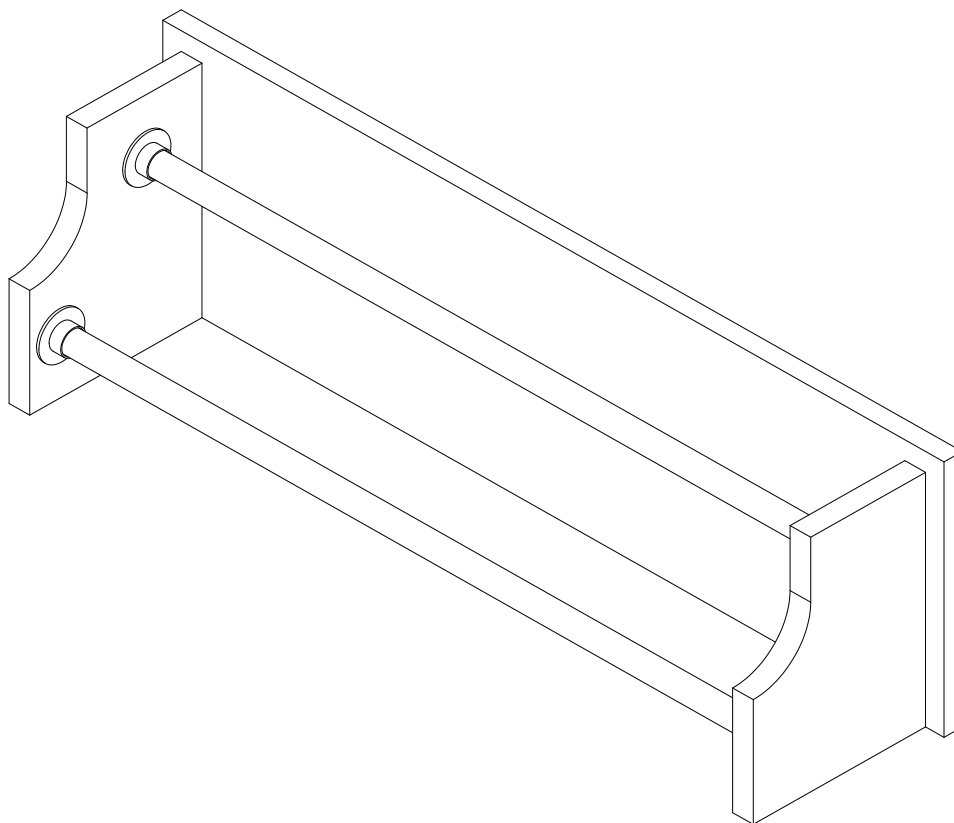


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!  
. Please assemble on a clean soft surface to avoid damage.

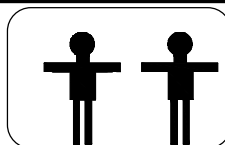


50 minutes

### Tool Included

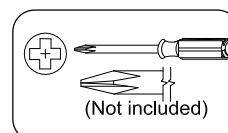


Part List-Bath Shelf W/ 2 Towel Rods

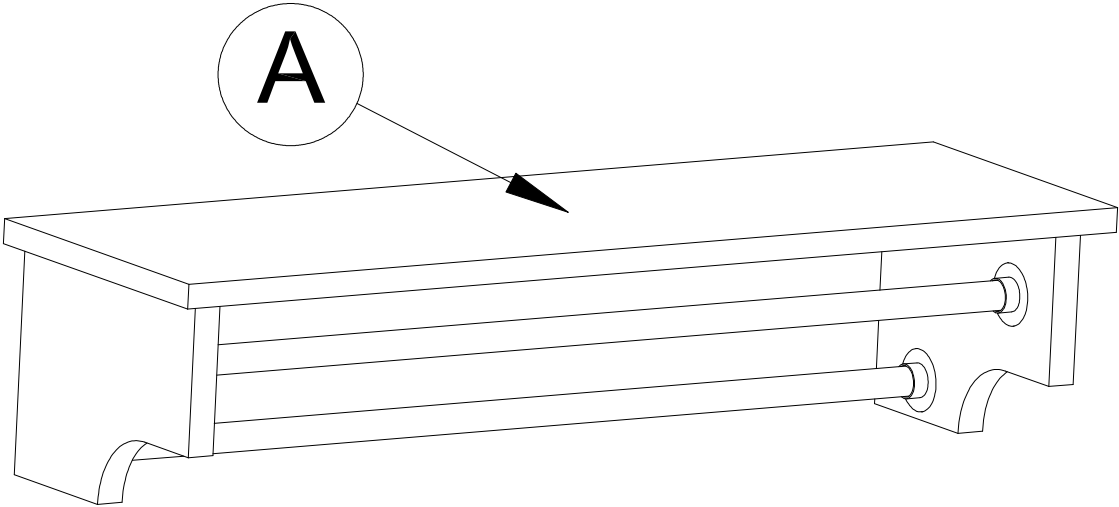

**Identifying the hardware**-Identify the hardware using the illustrations below.


---

**B**

  
**4X60mm**

**02**

**C**


  
**EZ Anchor**

**02**

**Note:** If possible, we recommend that when mounting the coat hook that at least one screw is secured in to a stud.

### Step 1

Measure the distance between the two key holes on back of shelf. Mark the location on the wall where the shelf will be hung.

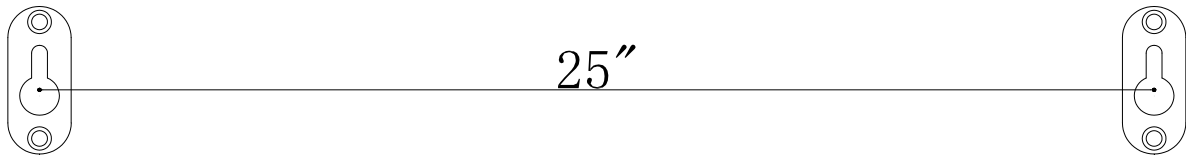


### Step 2

Drill a 1/8" pilot hole 3/4" deep. This will mark the location for the screw that the coat hook will hang from.

### Step 3



If hole location is aligned with a stud in wall, secure screw ( B ) directly in to the stud.

**Note:** Do not drive screw all the way in, keep head of screw out about 3/8".

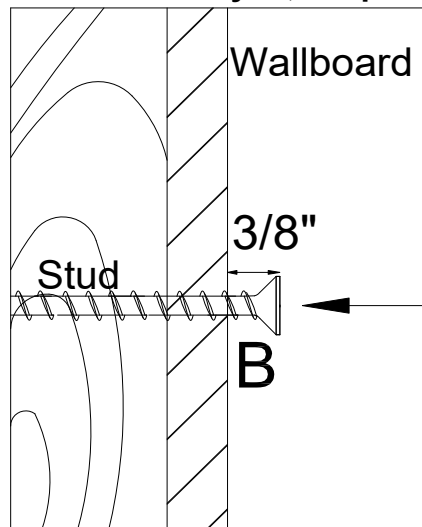

### Step 4

If hole location does not align with the stud in wall, install the EZ Anchor(C) by tapping it in to the predrilled pilot hole in the drywall.

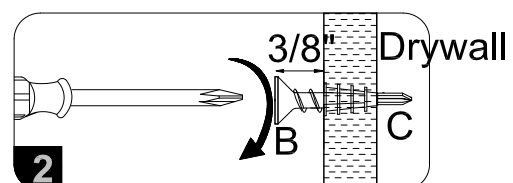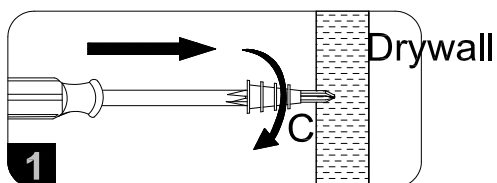

### Step 5

Secure screws into EZ Anchor(C)

**Step 6**  
**Hang Coat Hook.**

