
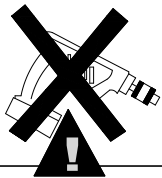


 **WARNING: To avoid serious personal injury:**



- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# ASSEMBLY INSTRUCTIONS



## Over Toilet Shelving w/2 Doors

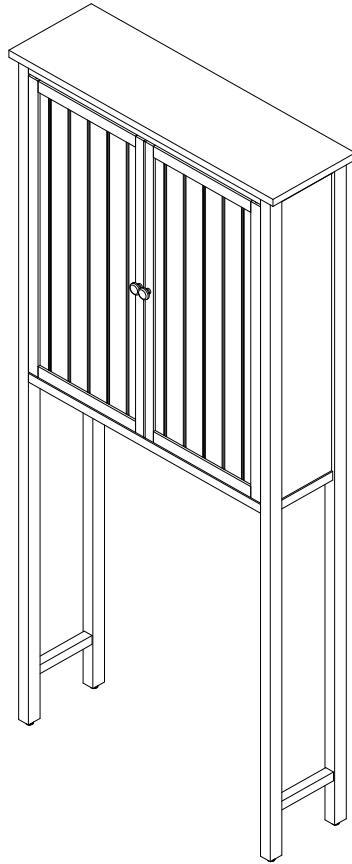


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!  
. Please assemble on a clean soft surface to avoid damage.

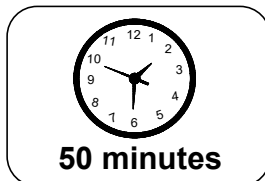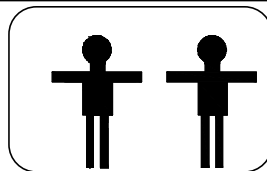



### Tool Included

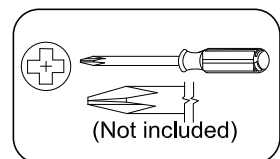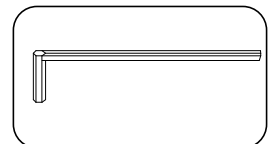



Part List-Over Toilet Shelving w/2 Doors

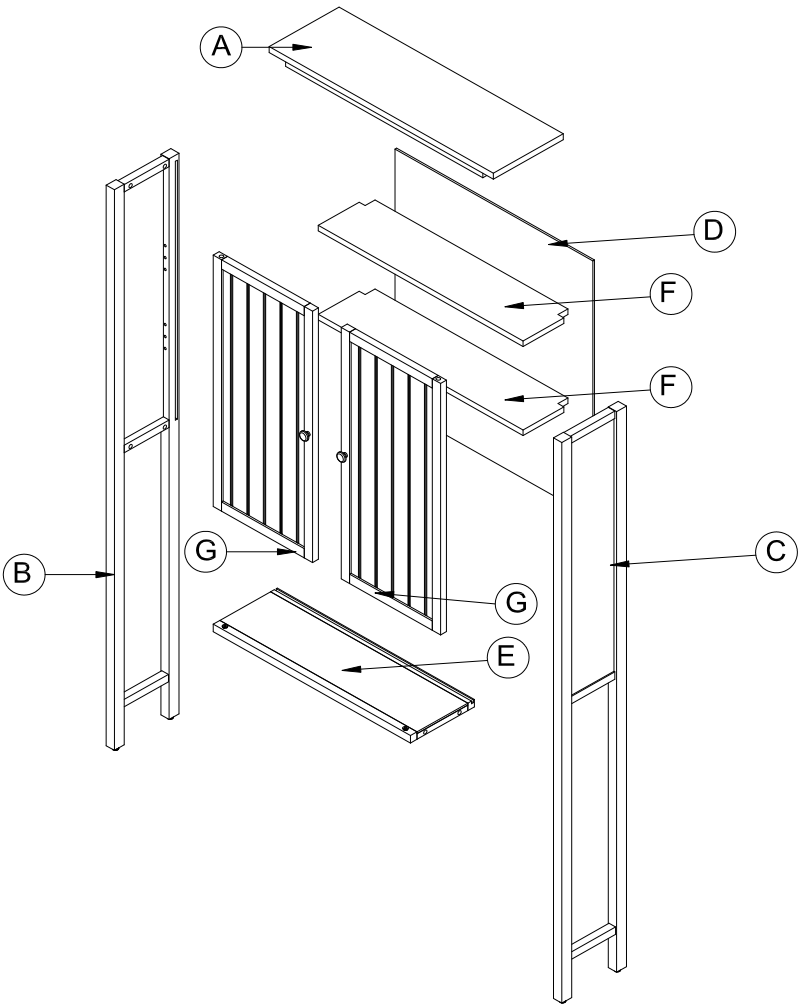


Identifying the hardware-Identify the hardware using the illustrations below.

|                                                                                                          |                                                                                                     |                                                                                           |                                                                                            |
|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| H  08<br>M6X35mm      | I  02<br>M6X45mm | J  02 | K  02 |
| L  08                 | M  02            | N  02 | O  01 |
| P  01<br>Anti-Tip Bag |                                                                                                     |                                                                                           |                                                                                            |


## STEP 1

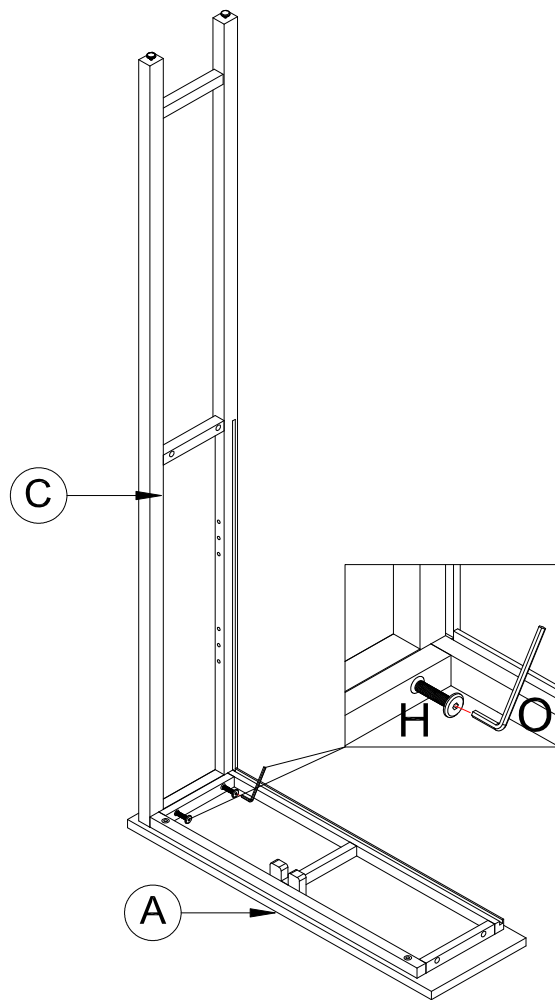


## STEP 2

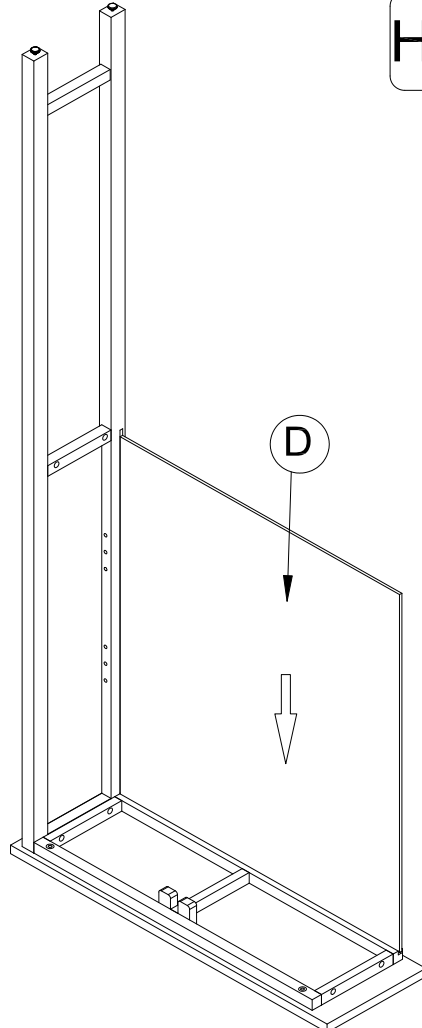

## STEP 3

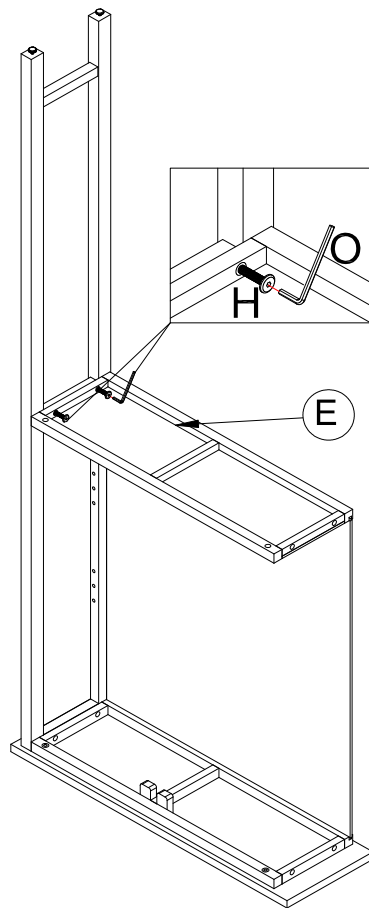

## STEP 4

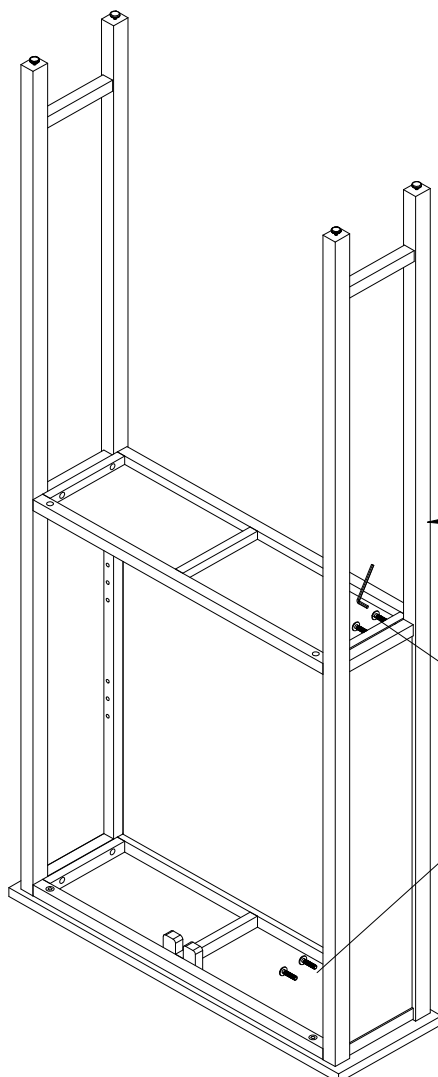


|         |                                                                                       |    |   |                                                                                       |    |
|---------|---------------------------------------------------------------------------------------|----|---|---------------------------------------------------------------------------------------|----|
| H       |  | 04 | O |  | 01 |
| M6X35mm |                                                                                       |    |   |                                                                                       |    |

## STEP 5

L



08

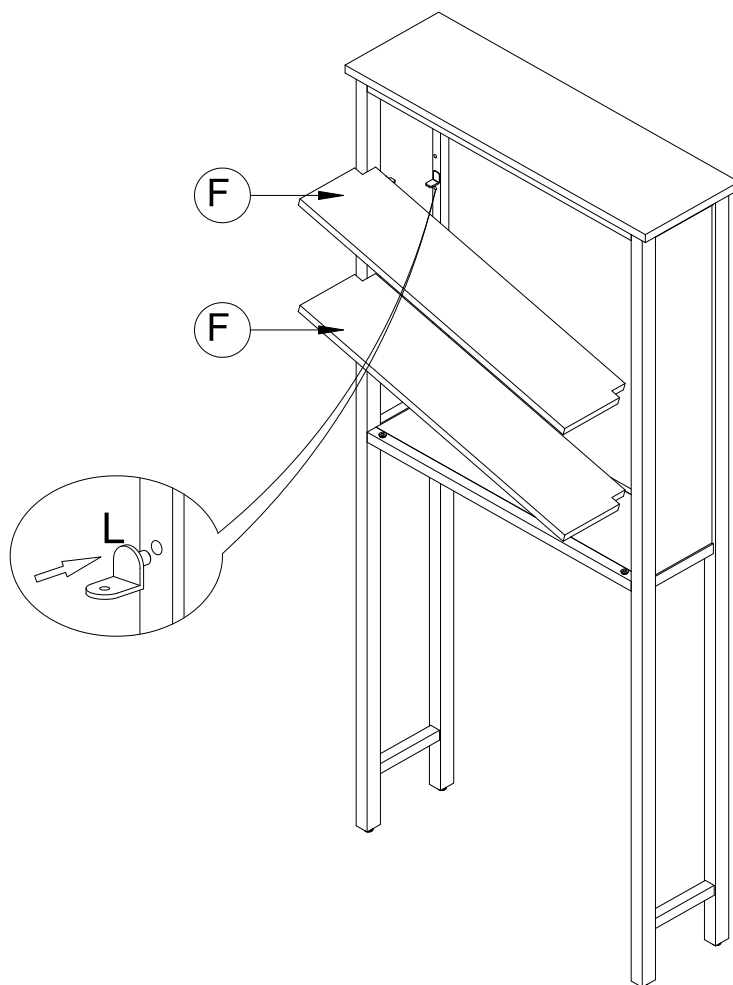


## STEP 6




**M6X45mm**

02




02



02



01

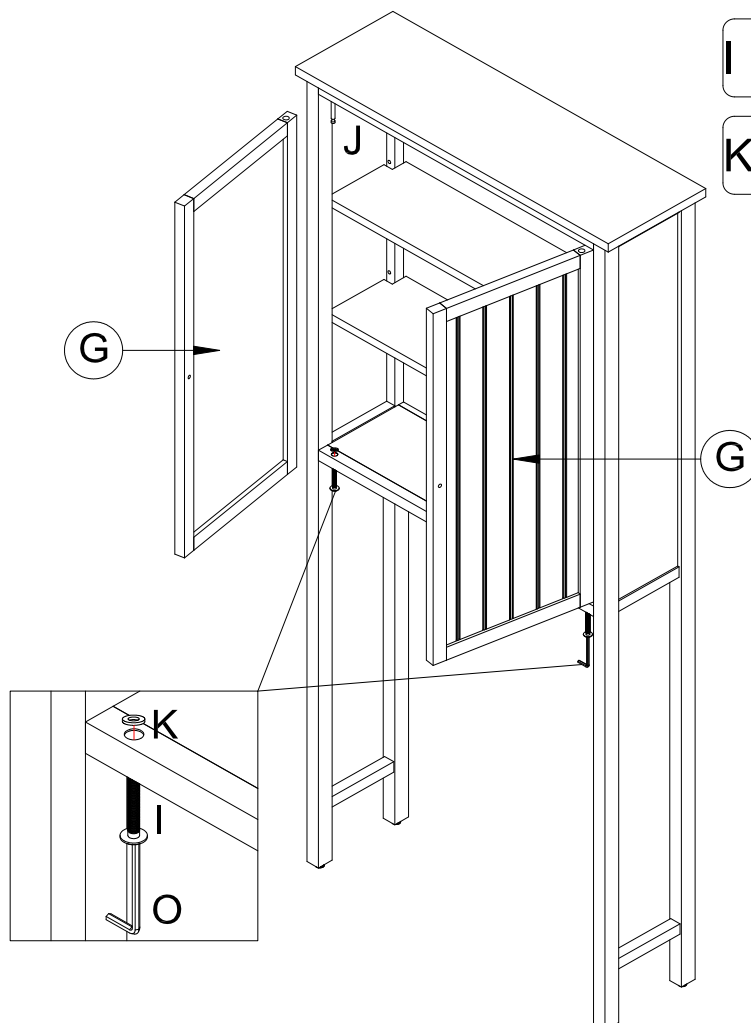

# STEP 7

M



02

N





02






(Not included)





01

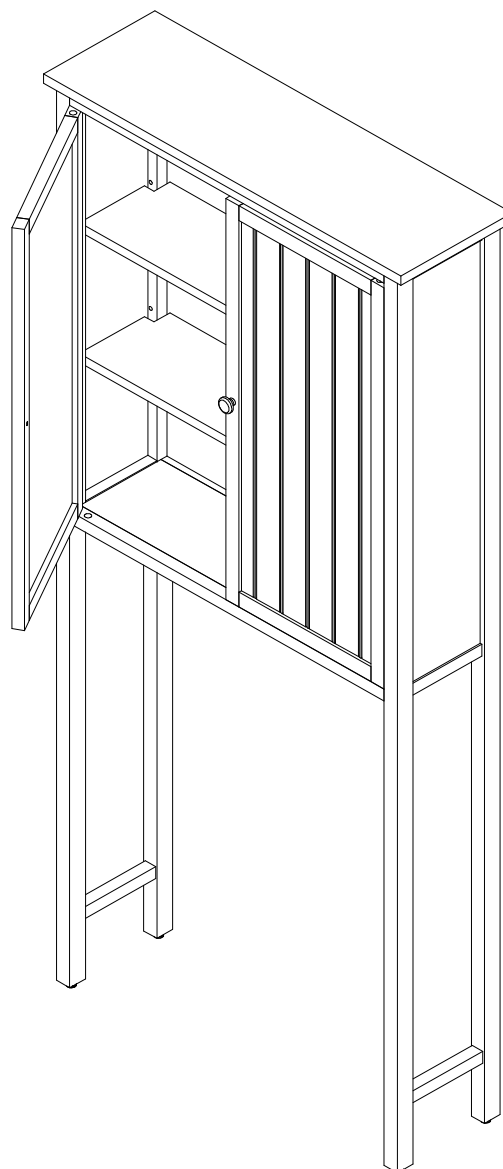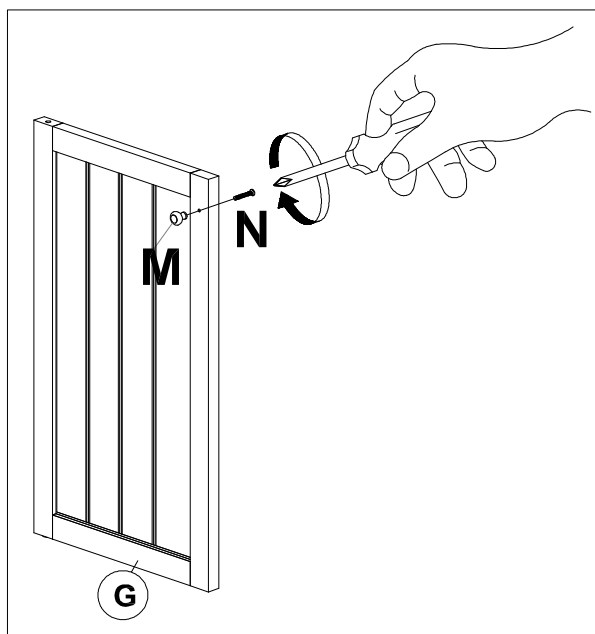


## "P" ANTI-TIP BAG

|          |                                                                                                   |           |          |                                                                                                               |           |
|----------|---------------------------------------------------------------------------------------------------|-----------|----------|---------------------------------------------------------------------------------------------------------------|-----------|
| <b>A</b> | <br>4x14 Screw | <b>02</b> | <b>C</b> | <br>Plastic wall bracket | <b>02</b> |
| <b>B</b> | <br>4x35 Screw | <b>02</b> | <b>D</b> | <br>Nylon strap 140mm     | <b>01</b> |

## Secure to Stud behind Wallboard

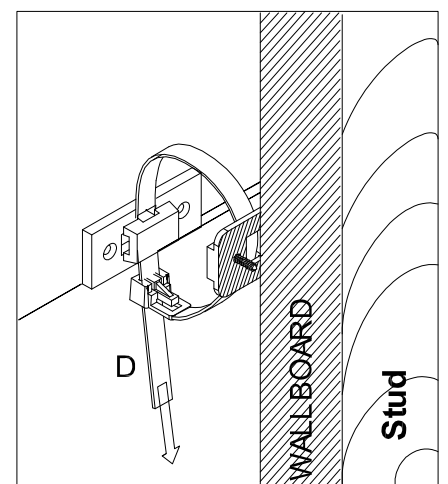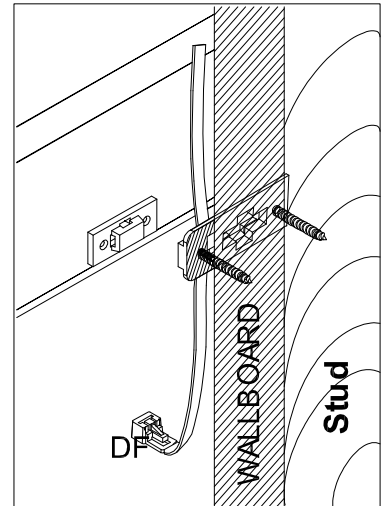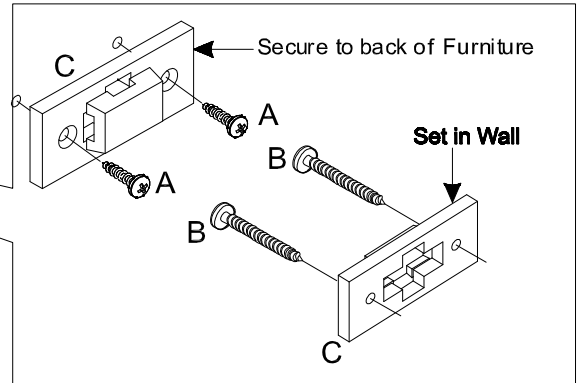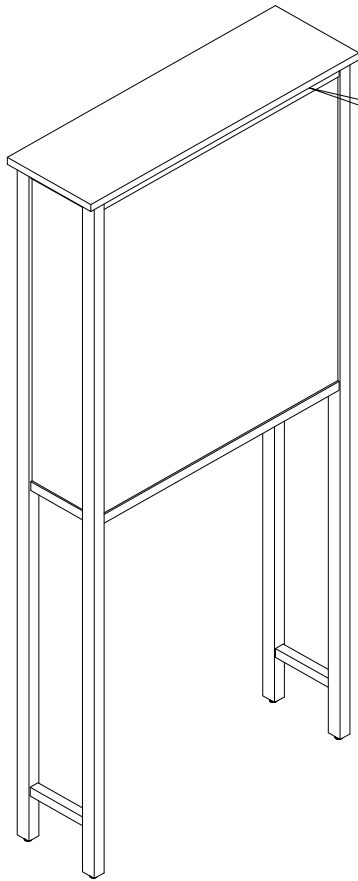

Secure to Stud behind Wallboard!

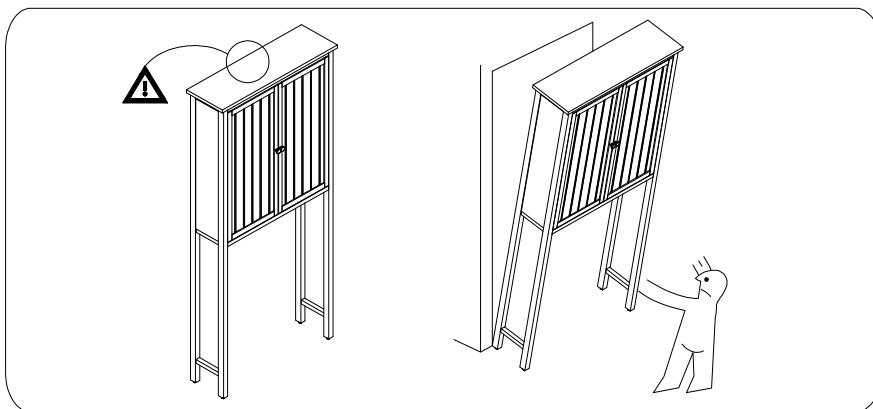


 **WARNING: To avoid serious personal injury:**



- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# ASSEMBLY INSTRUCTIONS


## 27"W x 29"H Wall Mounted Bathroom Storage Cabinet with 2 Doors and Towel Rod

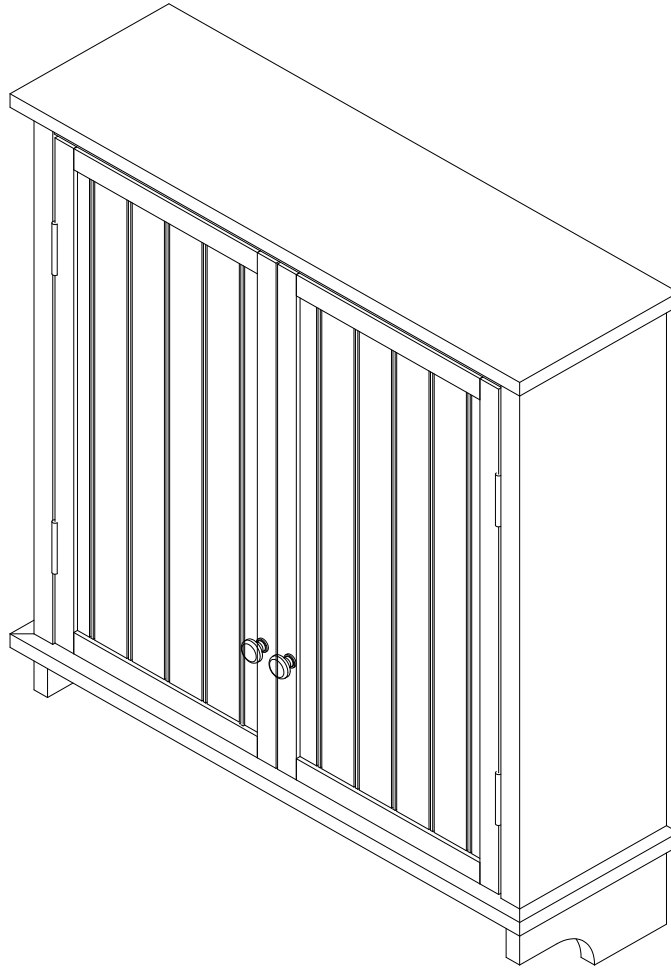


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!  
. Please assemble on a clean soft surface to avoid damage.

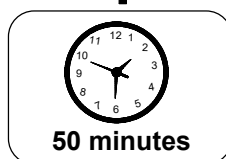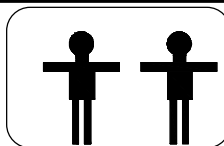

### Tool Included

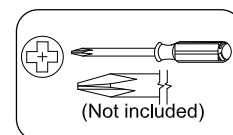

# Part List-27"W x 29"H Wall Mounted Bathroom Storage Cabinet with 2 Doors and Towel Rod

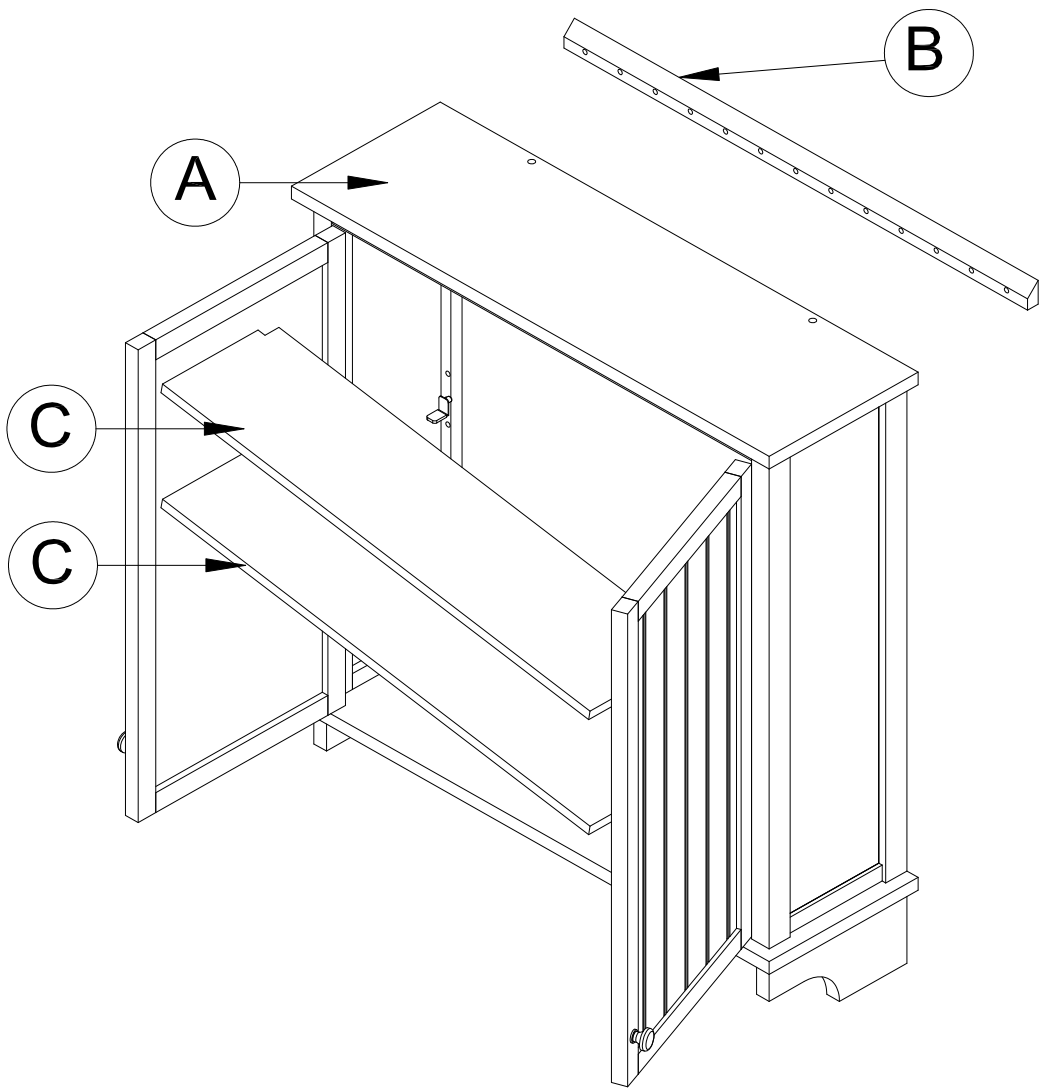


**Identifying the hardware**-Identify the hardware using the illustrations below.

|   |  |    |   |               |    |   |                  |    |
|---|--|----|---|---------------|----|---|------------------|----|
| D |  | 08 | E |               | 04 | F |                  | 02 |
|   |  |    |   | <b>4X50mm</b> |    |   | <b>EZ Anchor</b> |    |
| G |  | 02 | H |               | 02 |   |                  |    |


## Step 1

Remove the French Cleat (B) from the back of the Bath Storage Cabinet (A) by unscrewing 2 pre-installed Wood Screws (E) from the top of the cabinet. Locate studs behind drywall in desired location. Attach French Cleat (B) to Wall Studs in at least 2 locations with Wood Screws (E)

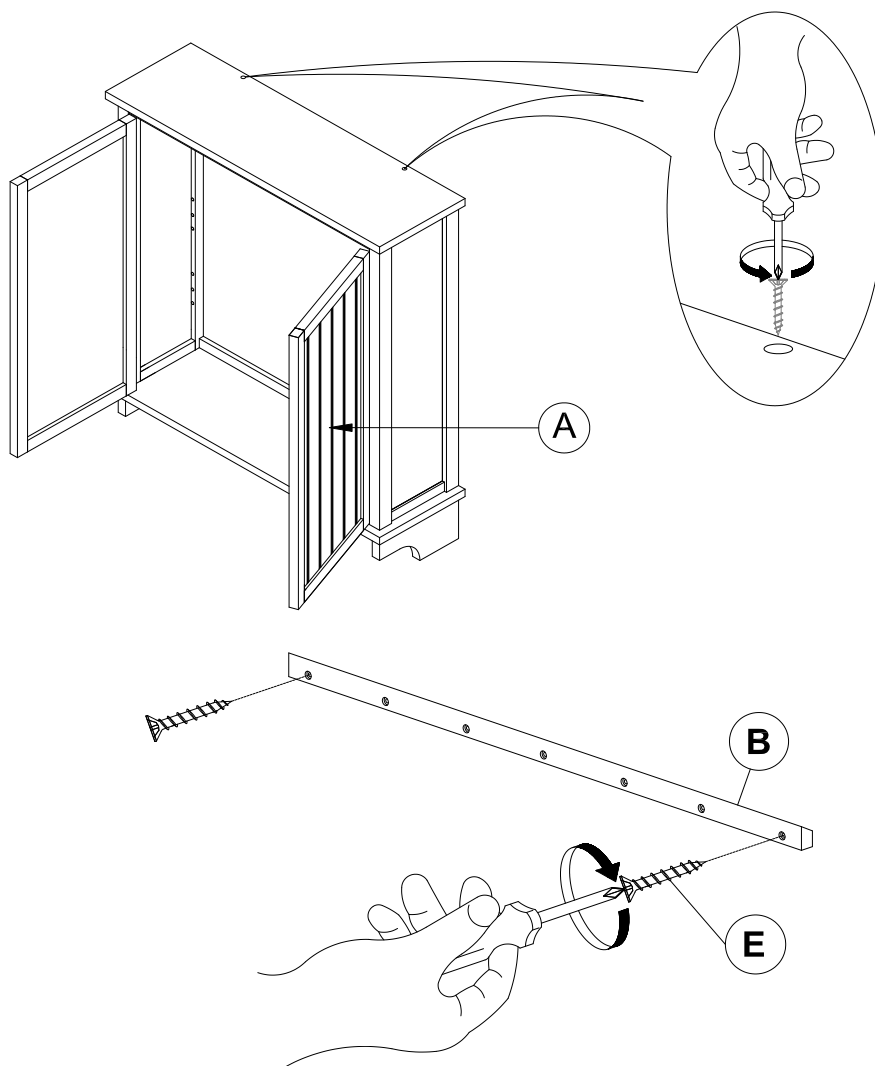


## Step 2

If hole locations do not align with stud in wall, install the EZ Anchor(F) in to drywall by tapping it in to the predrilled pilot holes up to the thread, and then screwing the EZ Anchor in to the drywall. Attach Cleat (B) using wood screw (E ) to EZ Anchors. NOTE: Cleat could be secured using combination of Studs and EZ Anchors.

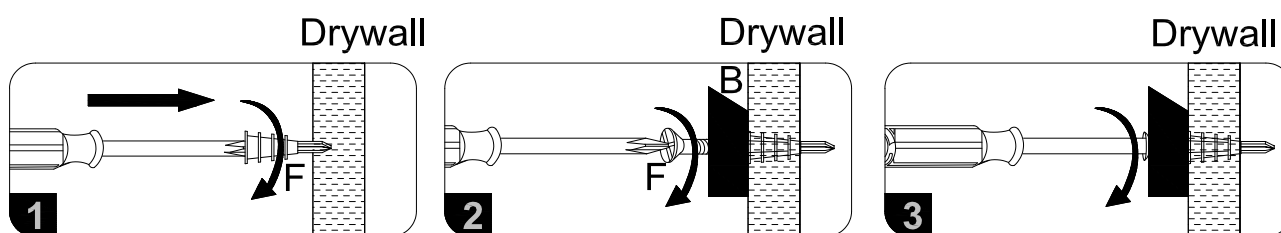

### Step 3

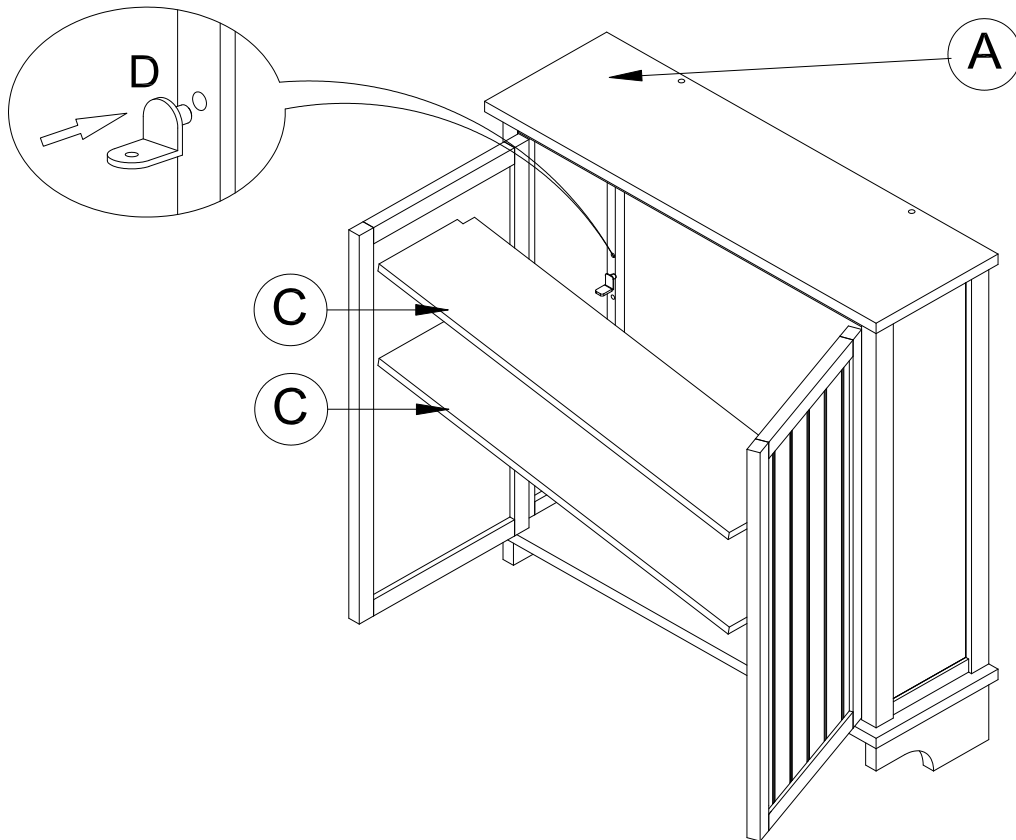

D



08


### Step 4

G



02

H





02



(Not included)

01

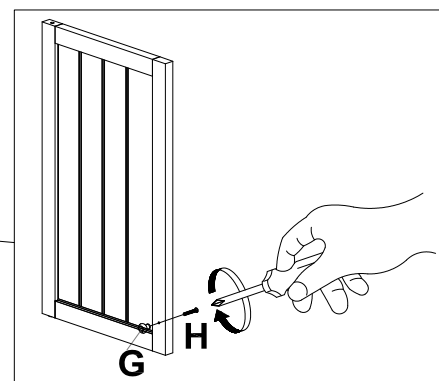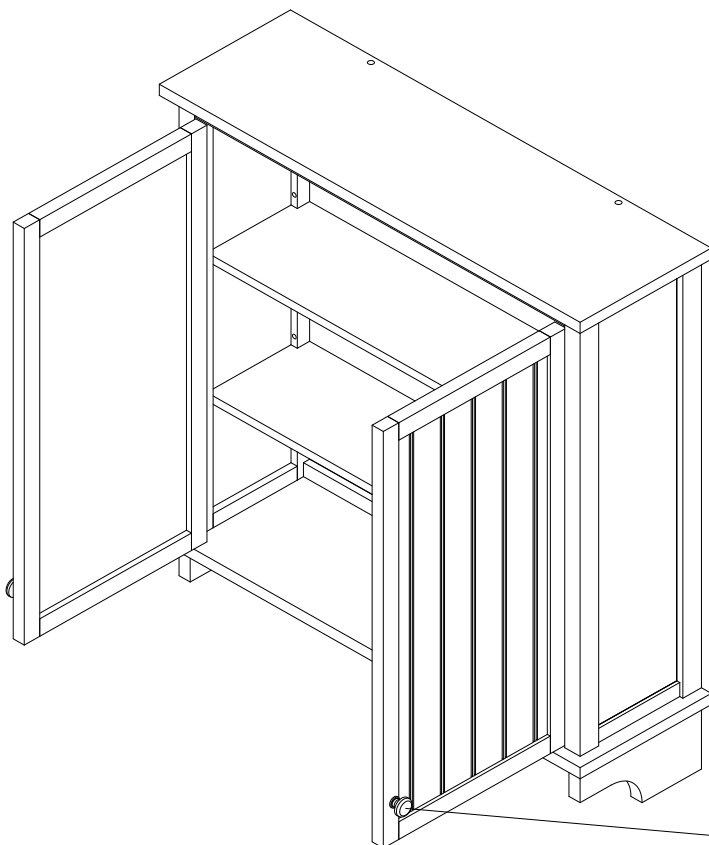

## Step 5

Set Bath Storage Cabinet (A) on French Cleat (B). Secure Bath Storage Cabinet (A) to French Cleat (B) by installing 2 Wood Screws (E).

