


 WARNING: To avoid serious personal injury:


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

ASSEMBLY INSTRUCTIONS

Bath Shelf with 2 Towel Rods

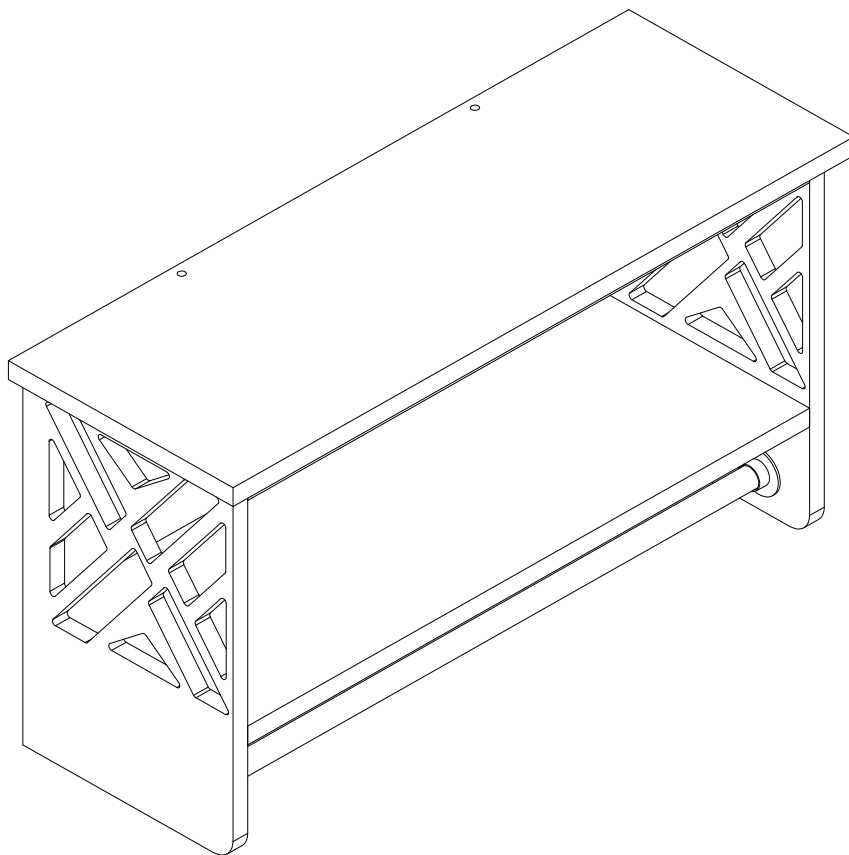


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
. Please assemble on a clean soft surface to avoid damage.

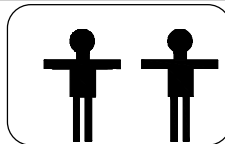


50 minutes

Tool Included

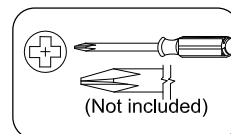


Part List-Bath Shelf with 2 Towel Rods

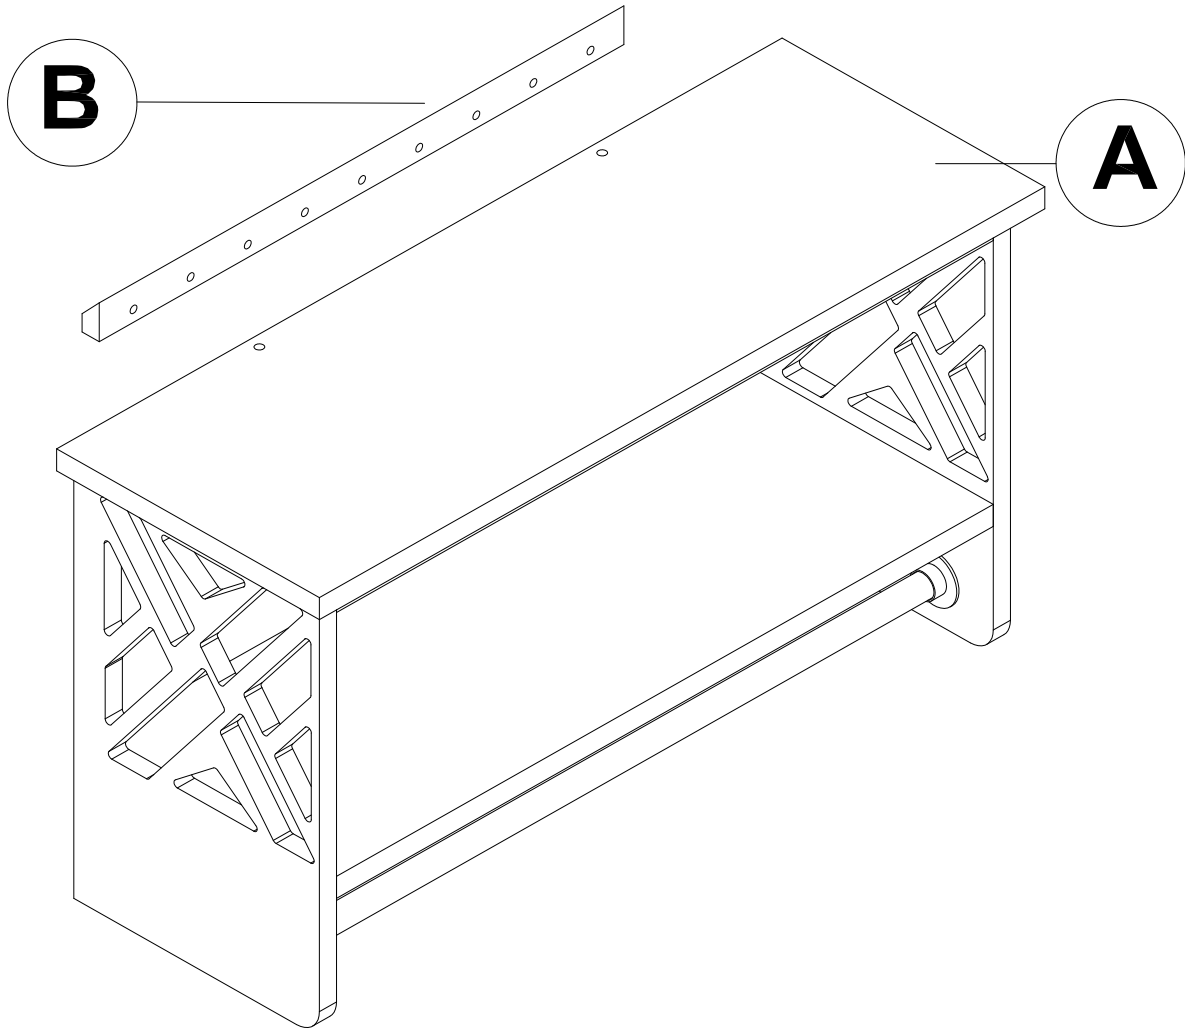

Identifying the hardware-Identify the hardware using the illustrations below.


C



04

4*50mm

D



02

4*40mm

E





02

EZ ANCHOR

Step 1

Remove Cleat(B) by unscrewing 2 wood screw(C)

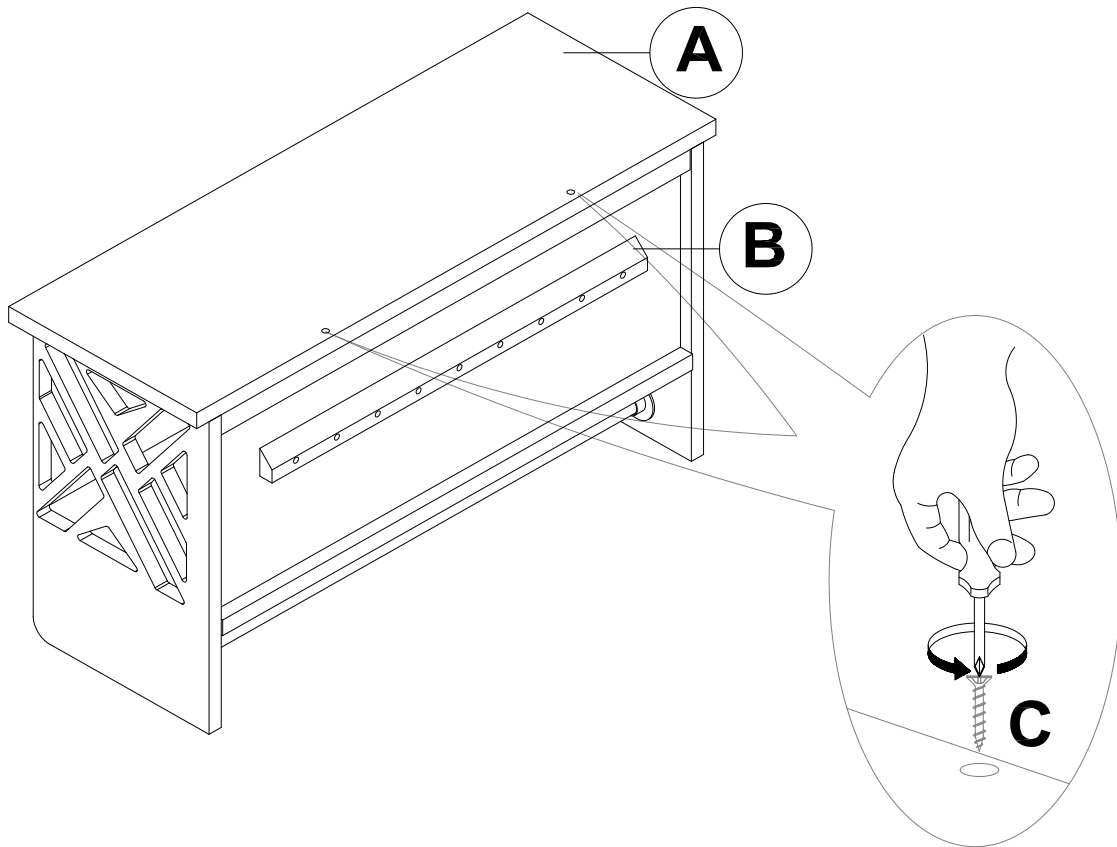

Note: If possible, we recommend that you secure cleat (B) to stud in wall.

Step 2

Position Cleat (B) on wall in desired location where shelf will be hung.



Make sure cleat is level.

Step 3

Using Cleat (B) as template, align holes in cleat to studs in wall. Drill 1/8" pilot holes 3/4" deep.

Step 4


Attach French Cleat (B) to Studs in wall in at least 2 locations using wood screws (C)

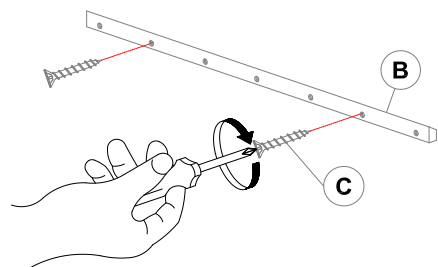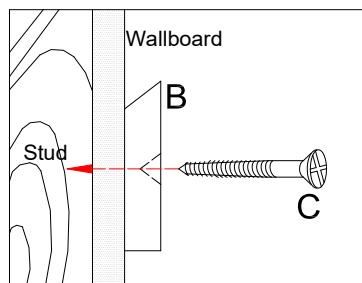

Step 5

If hole locations do not align with stud in wall, install the EZ Anchor(E) in to drywall by tapping it in to the predrilled pilot holes up to the thread, and then screwing the EZ Anchor in to the drywall. Attach Cleat (B) using wood screw (D) to EZ Anchors.

NOTE: Cleat could be secured using combination of Studs and EZ Anchors.

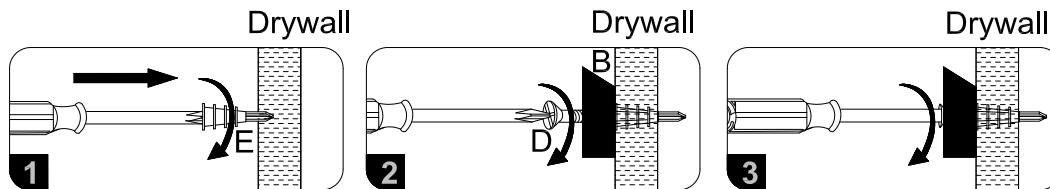

Step 6:

Hang Bath Shelf(A) on cleat. Secure in 2 places using wood screw (C).

