




ASSEMBLY INSTRUCTION

36" Vanity

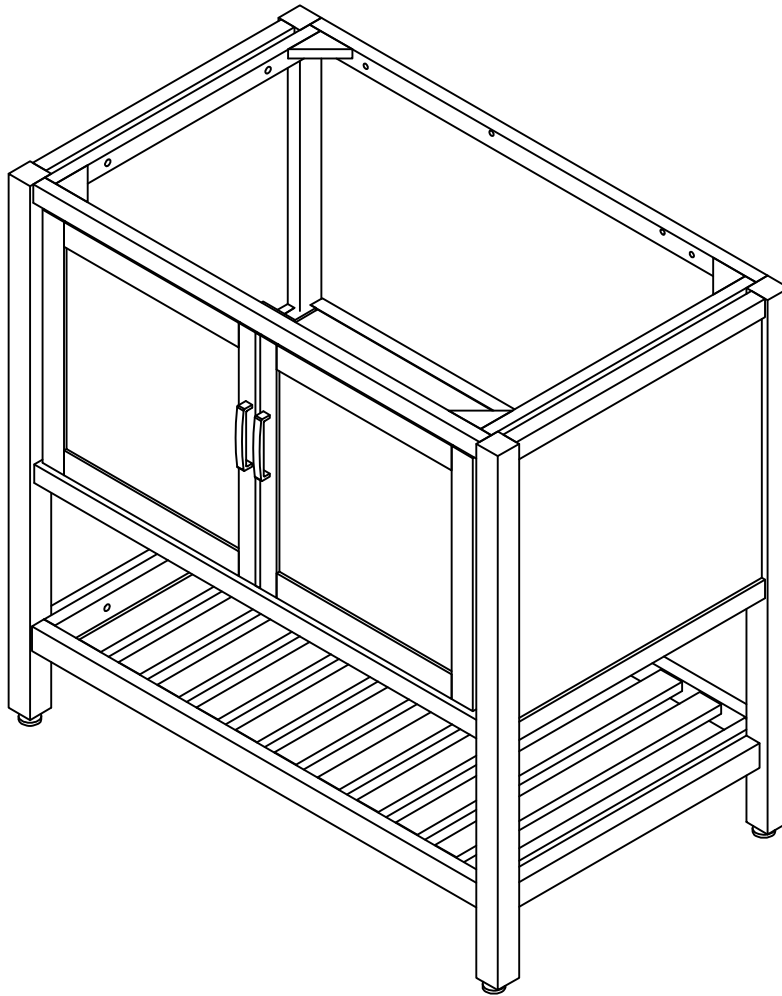

⚠ WARNING: To avoid serious personal injury:


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

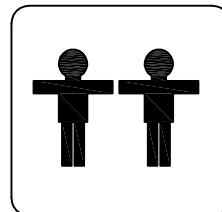

Tools Required



(Included)




(Not Included)








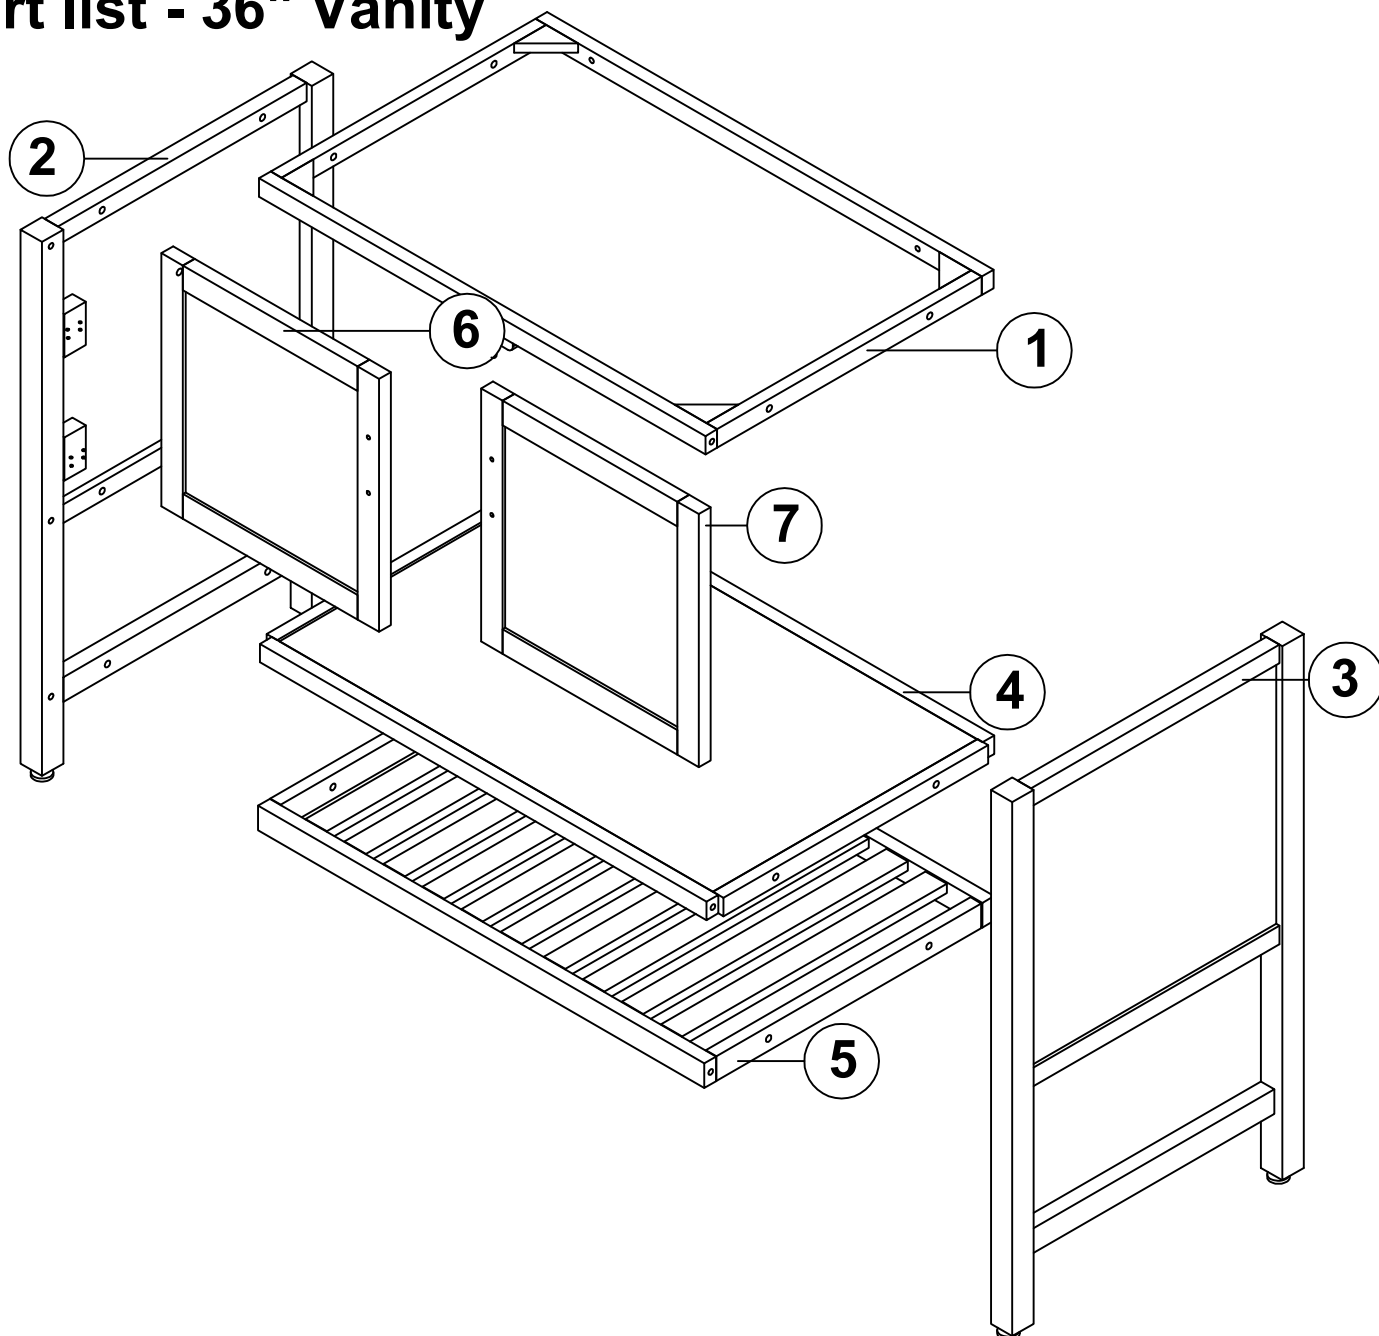





(Not Included)



Part list - 36" Vanity




Identifying the hardware-Identify the hardware using the illustrations below





A  06 Ø8*30mm Wood Dowel	B  12 M6*45mm Bolt	C  12 Ø6*16mm Washer
D  04 Hinge	F  24 3.5*15mm Screw	I  04 Leveler
J  02 4*50mm Screw	K  01 Hex Wrench	O  02 4*40mm Anchor
Q  04 M4*25mm Bolt	R  02 Handle	

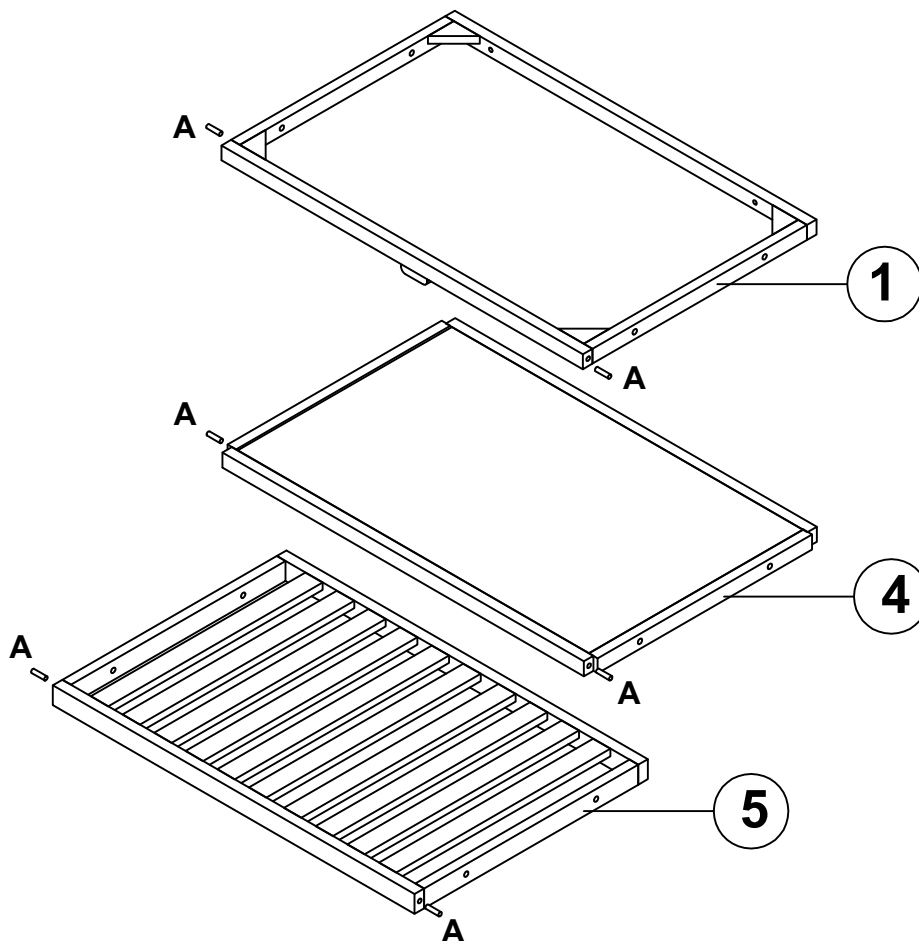
Step 01

- A**

06
 Ø8*30mm Wood Dowel
- 
01
 (Not Included)




Step 02

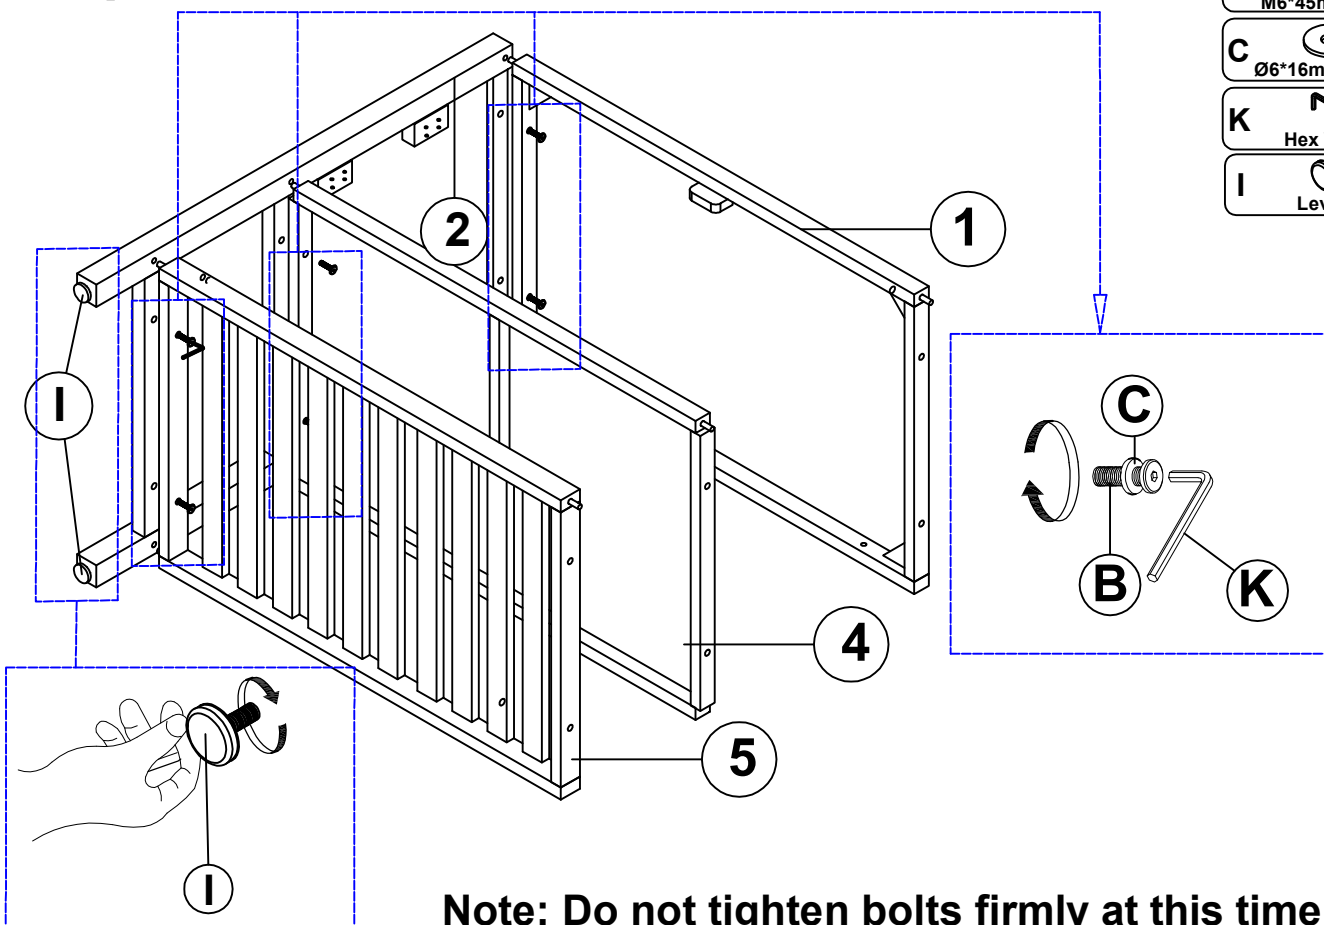- B**

06
 M6*45mm Bolt
- C**

06
 Ø6*16mm Washer
- K**

01
 Hex Wrench
- I**

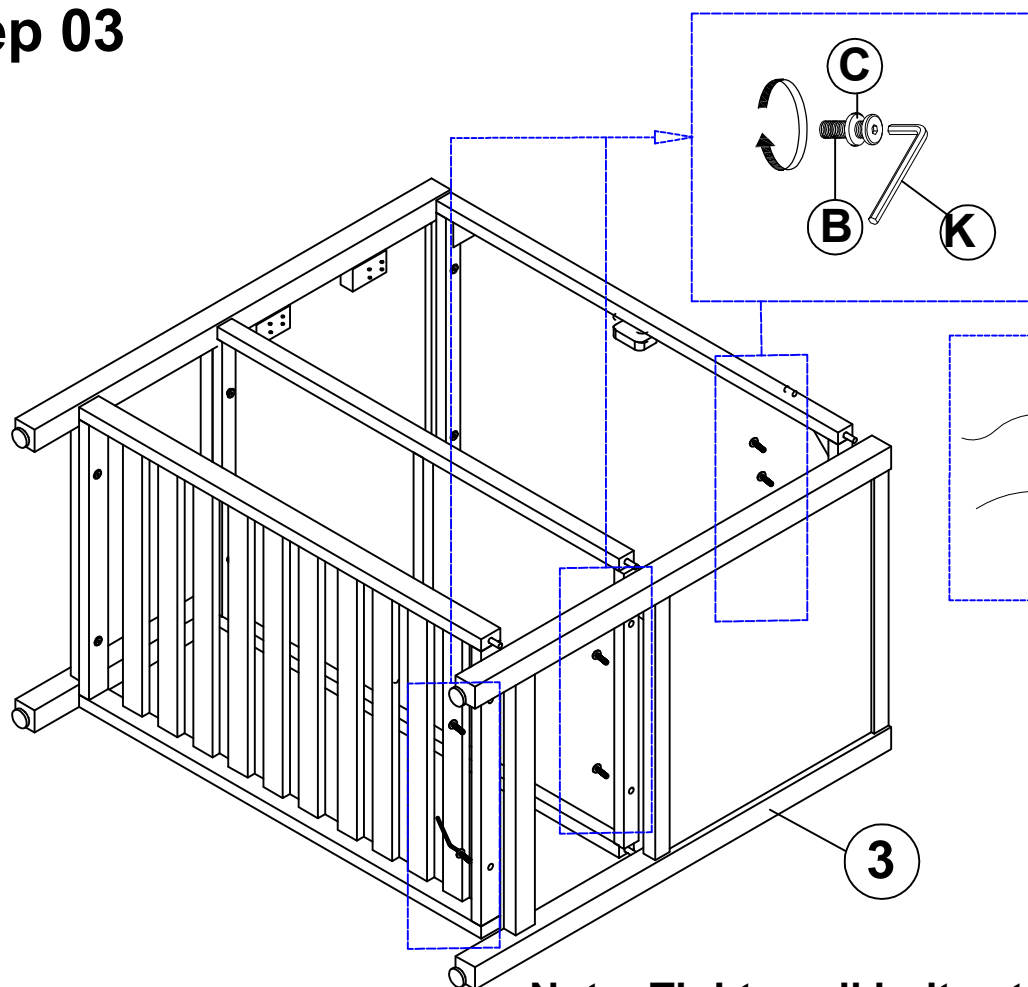02
 Leveler



Note: Do not tighten bolts firmly at this time


Step 03



B		06
M6*45mm Bolt		
C		06
Ø6*16mm Washer		
K		01
Hex Wrench		
I		02
Leveler		




Note: Tighten all bolts at this time


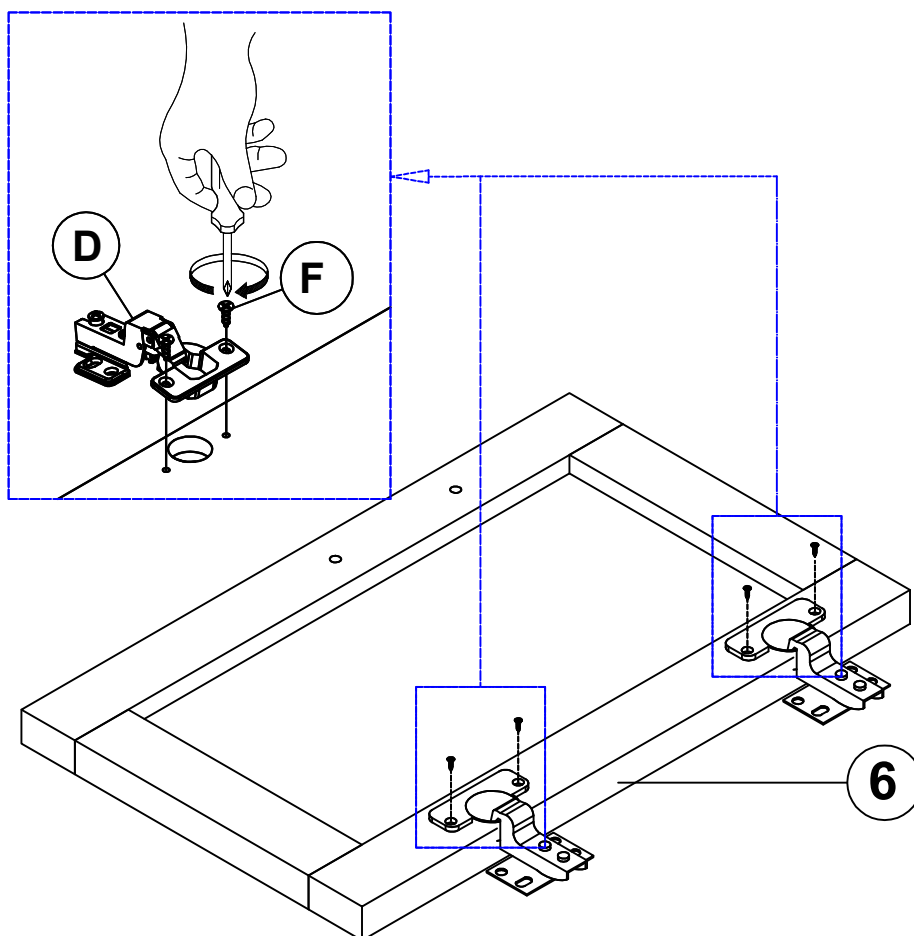
Step 04



D		02
Hinge		
F		04
3.5*15mm Screw		
		01

Step 05


- D  02
- F  04
3.5*15mm Screw
-  01

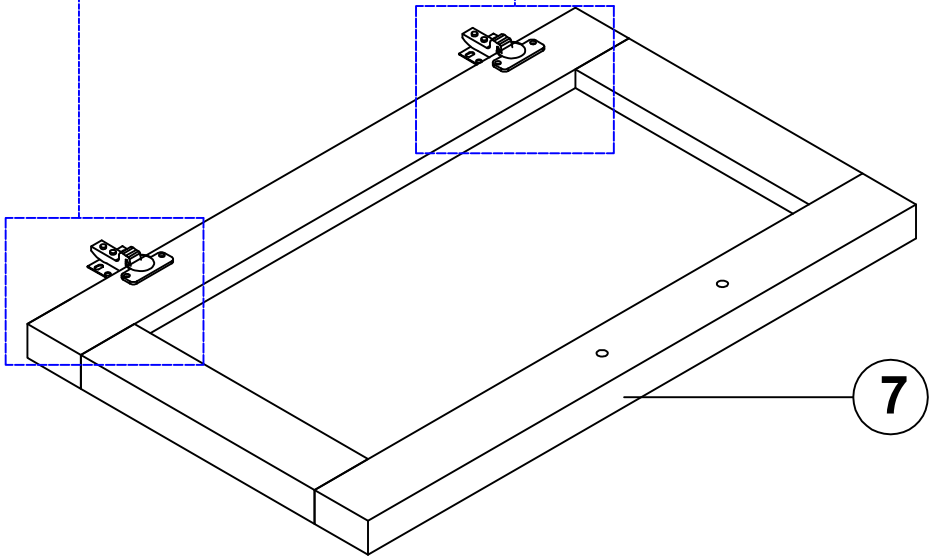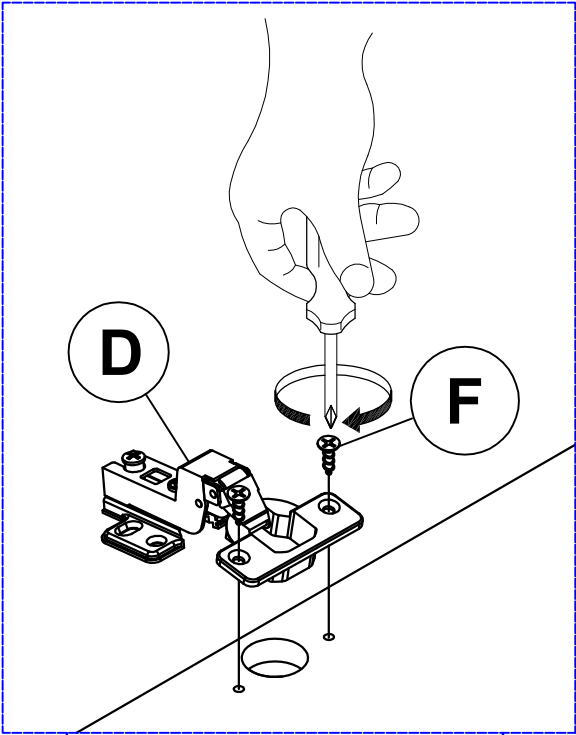

Step 06

F 3.5*15mm Screw 08

01

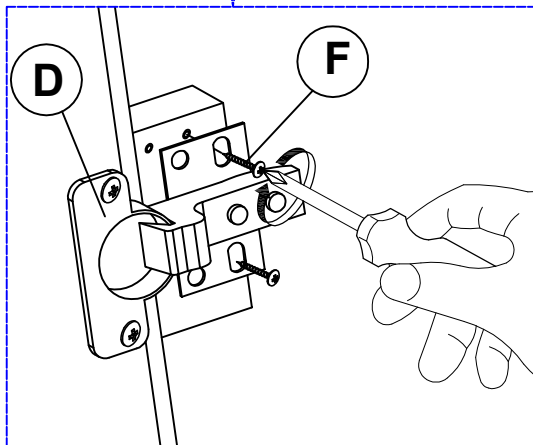


Align slotted holes in Hinge Mounting plate on 2 doors with pilot holes on Side Panel(2) & (3) . Attached 2 Doors using Screw F - 8 places.Screw F should be centered vertically in the slotted holes.

Note: Final adjustments may be required. To adjust up or down, loosen Screw F,Adjust as necessary and re-tighten Screw F .

Step 07

F 3.5*15mm Screw 08

01

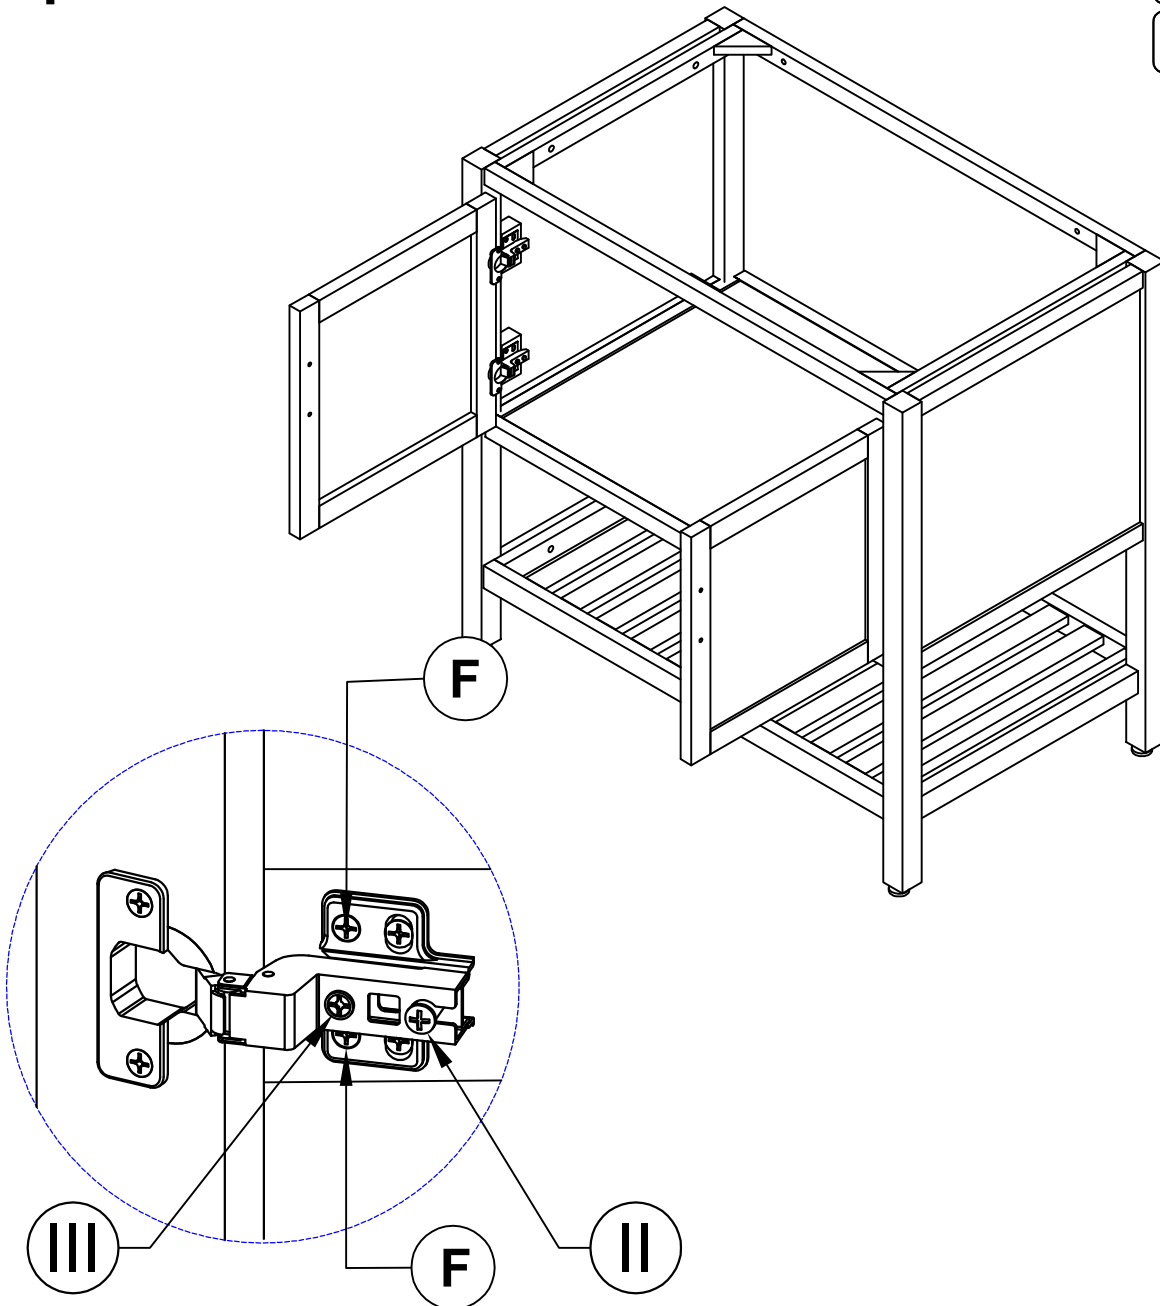

If any hinge requires slight adjustment out, loosen Bolt II and adjust out as necessary.

To adjust the Left Hand Doors: Adjust door to Right by turning Bolt III clockwise. Adjust door to Left by turning Bolt III counterclockwise.


To adjust the Right Hand Doors: Adjust door to Left by turning screw III clockwise. Adjust door to Right by turning screw III counterclockwise.



Once all adjustments are made and doors are aligned, install set screw F in the last 2 holes in the mounting plate, on 2 doors, 8 places.

Step 08

R  02

Q  04
M4*25mm Bolt

 01

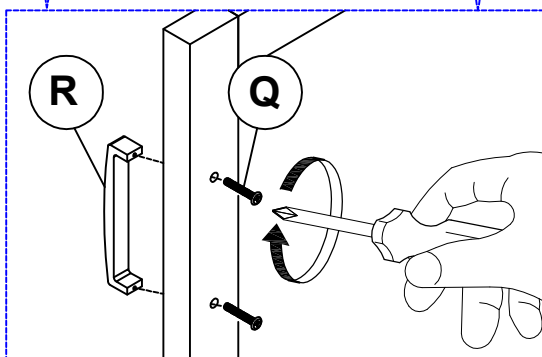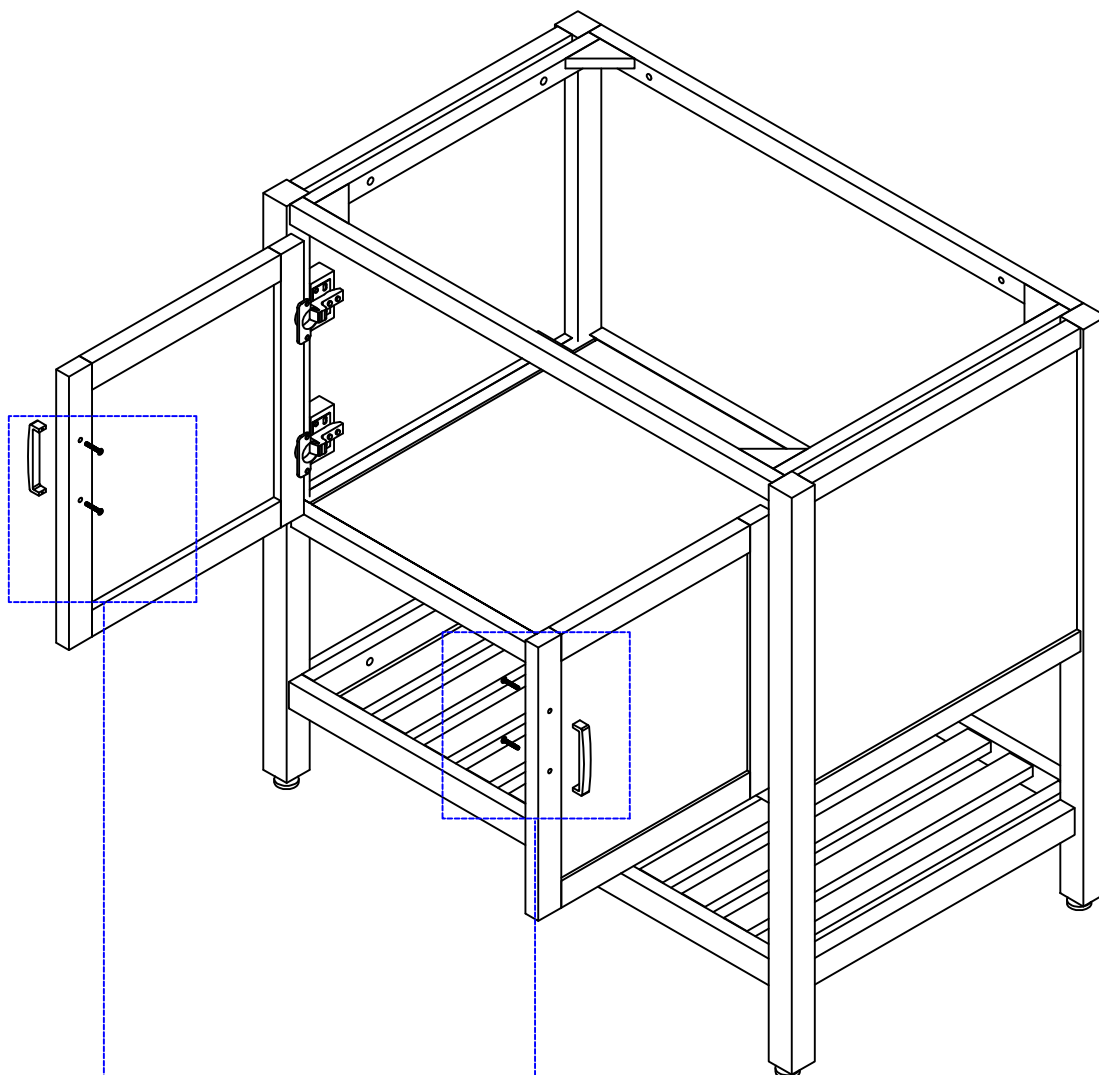

Step 9

.For best results, we suggest securing your Vanity to a stud in at least two locations.

. Mark the location of the Studs in the wall on the stretcher rail.

. Drill a 1/16" thru hole in the center of the Stretcher Rail at the location of the studs in the wall.

. Secure the Vanity to the wall using screws (J)

Make sure the screws align with the Stud in the wall.

. If hole locations do not align with stud in wall, install the EZ Anchor(O) in to drywall and then screwing the EZ Anchor in to the drywall.

J  **02**
4*50mm Screw

O  **02**
4*40mm Anchor

 **01**

