

# Assembly Instructions

6518-22HF/6518-21R 6/6 UHP Bed

## **⚠ WARNING: To avoid serious personal injury:**

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

\*\*Assemble the product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.


Code	Hardware List	Q'ty
1	5/16" x 2 1/2" Allen Head Bolt	2PCS
2	5/16" L89mm Full thread screw	8PCS
3	5/16" Flat Washer	10PCS
4	5/16" Spring Washer	10PCS
5	5/16" Hex Nut	8PCS
6	4mm Allen Wrench	1PC
7	Wrench #13	1PC
8	M4 x 1 1/4" Screw	10PCS

Code	Part List	Q'ty
A	Headboard Cushion	1 PC
B	Headboard	1 PC
C	Footboard	1 PC
D	Rails	2 PCS
E	Headboard Leg	2 PCS
F	Headboard Support Leg	3 PCS
G	Slat Support Leg	10 PCS
H	Slat	5 PCS


### **Step 1.1**

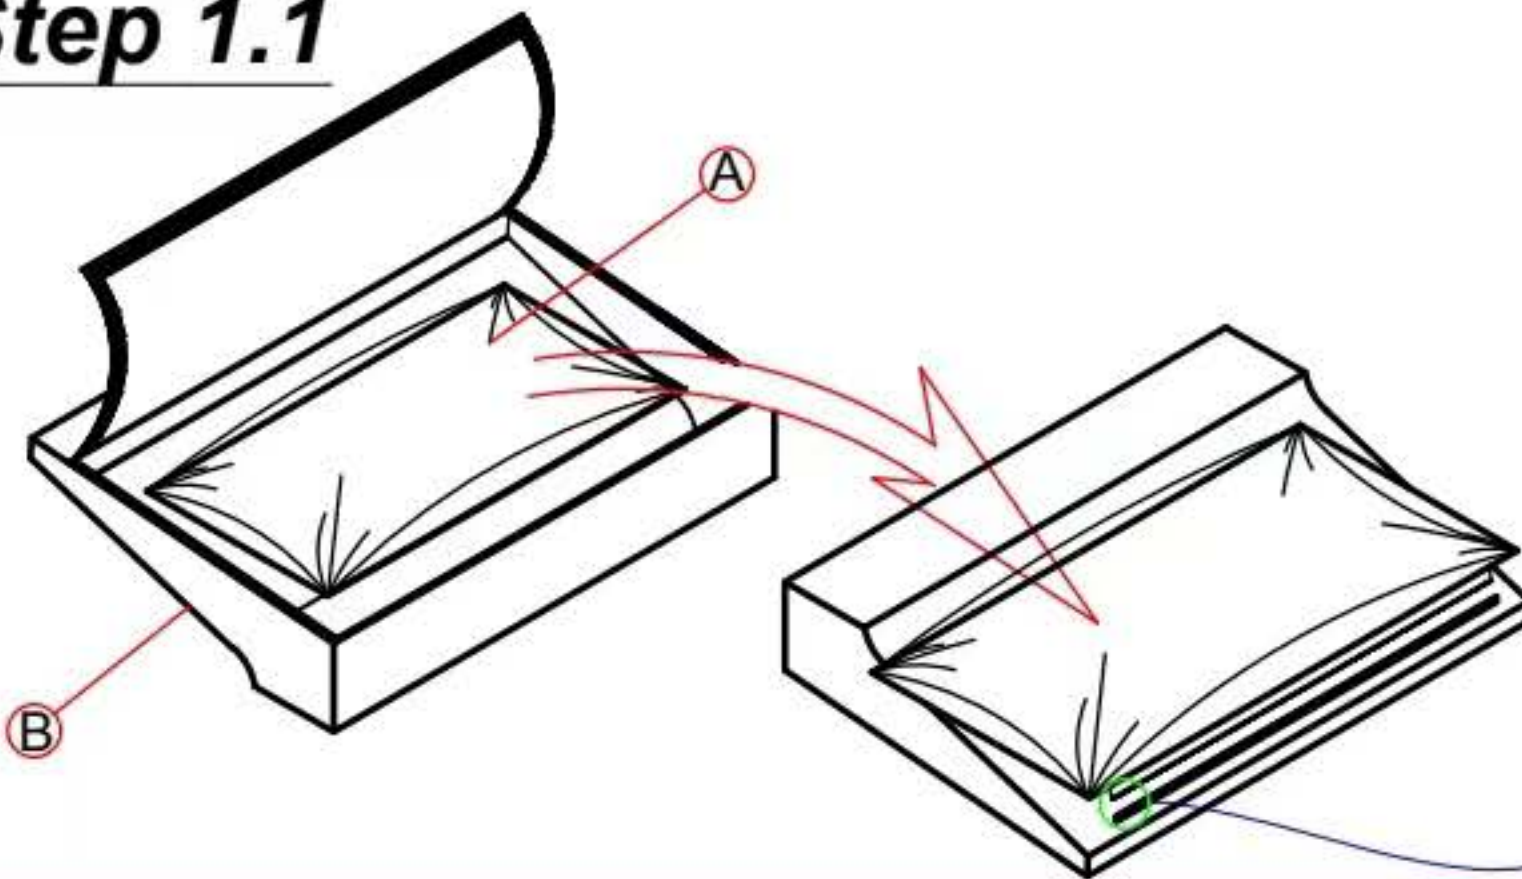


### **Step 1.2**

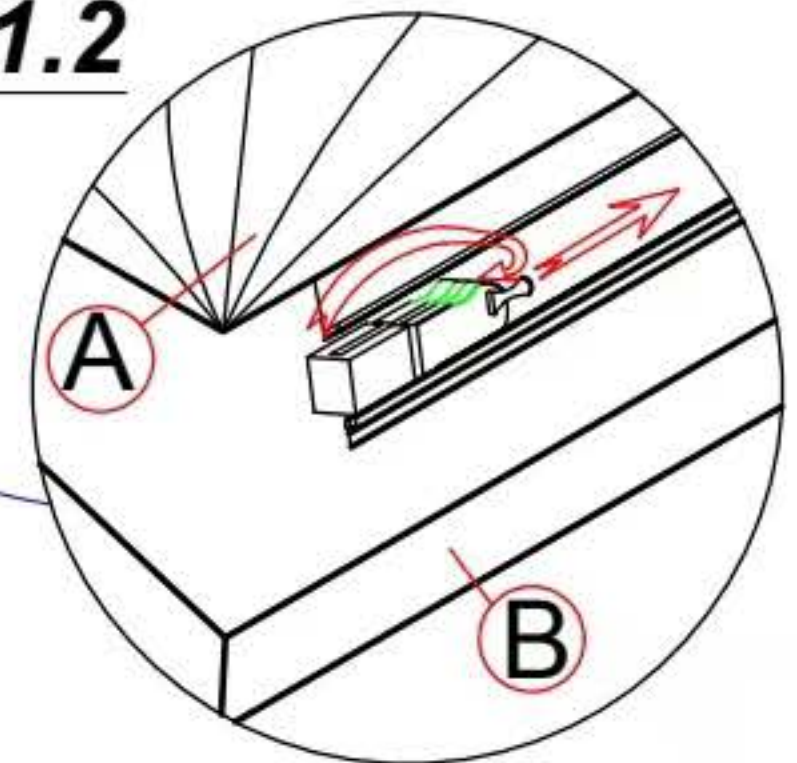

### **Step 2.1**

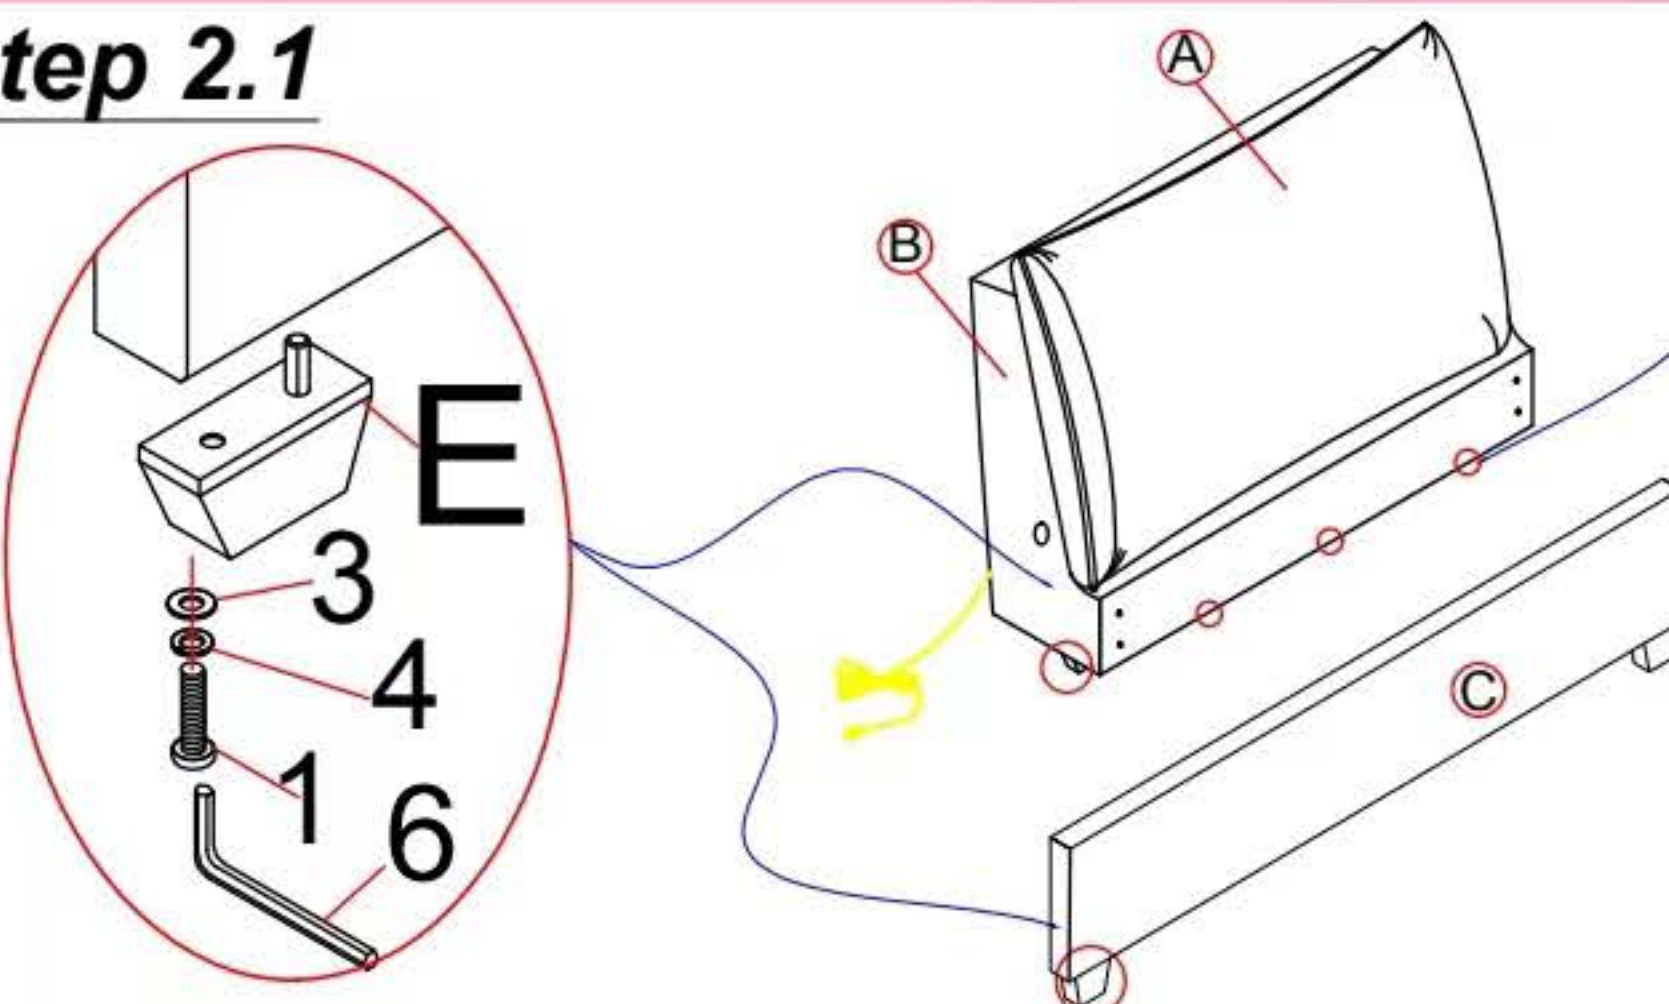


### **STEP 2.2**

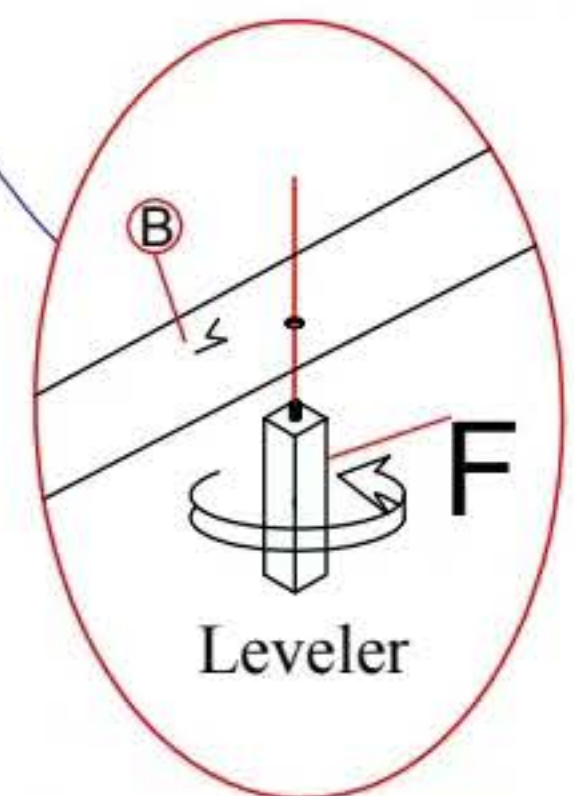


**Cleaning Instruction:** Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.





### Step 3

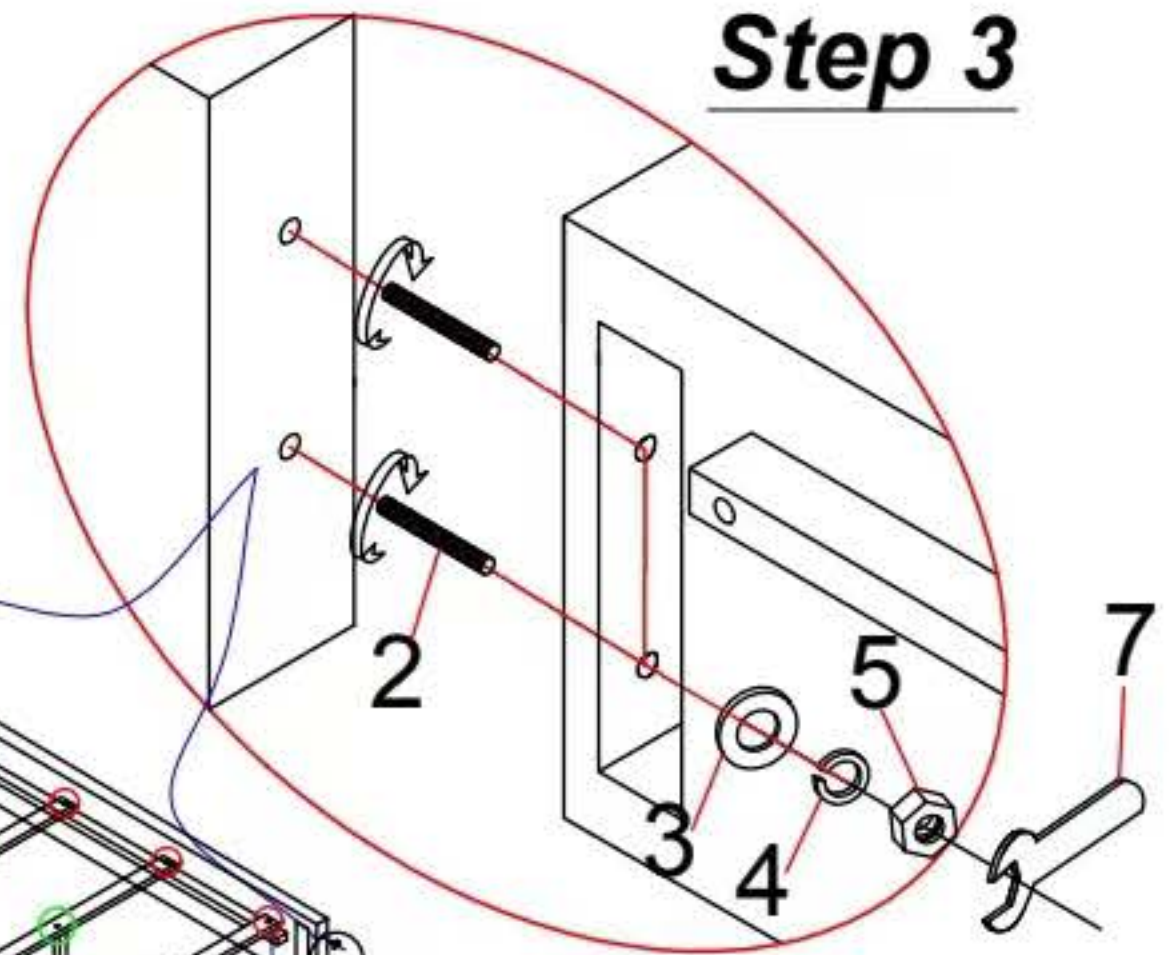

### Step 4

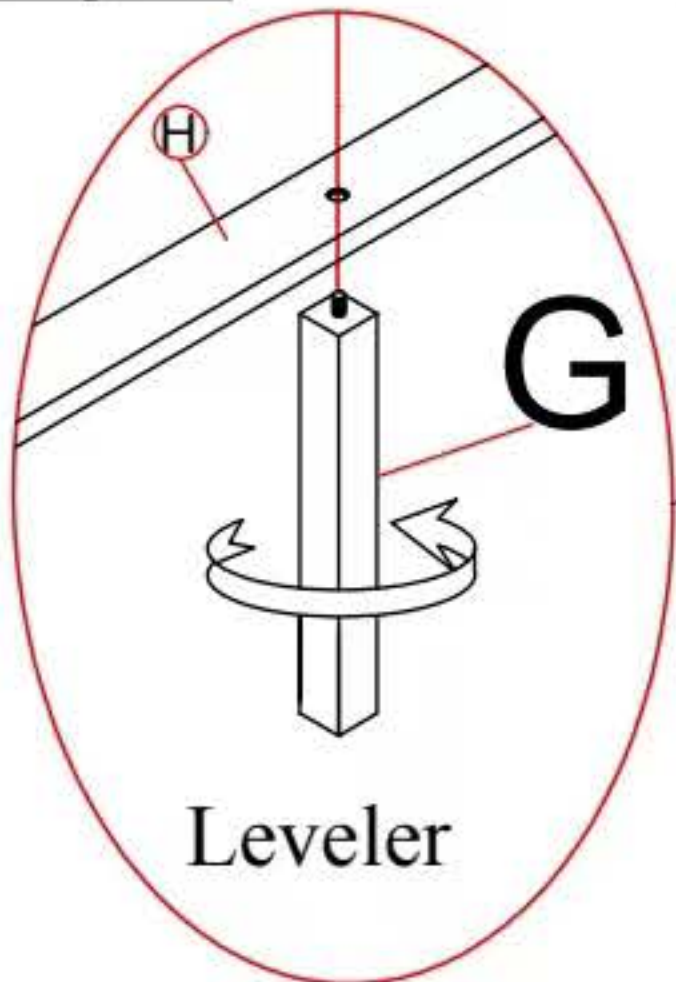

### Step 5

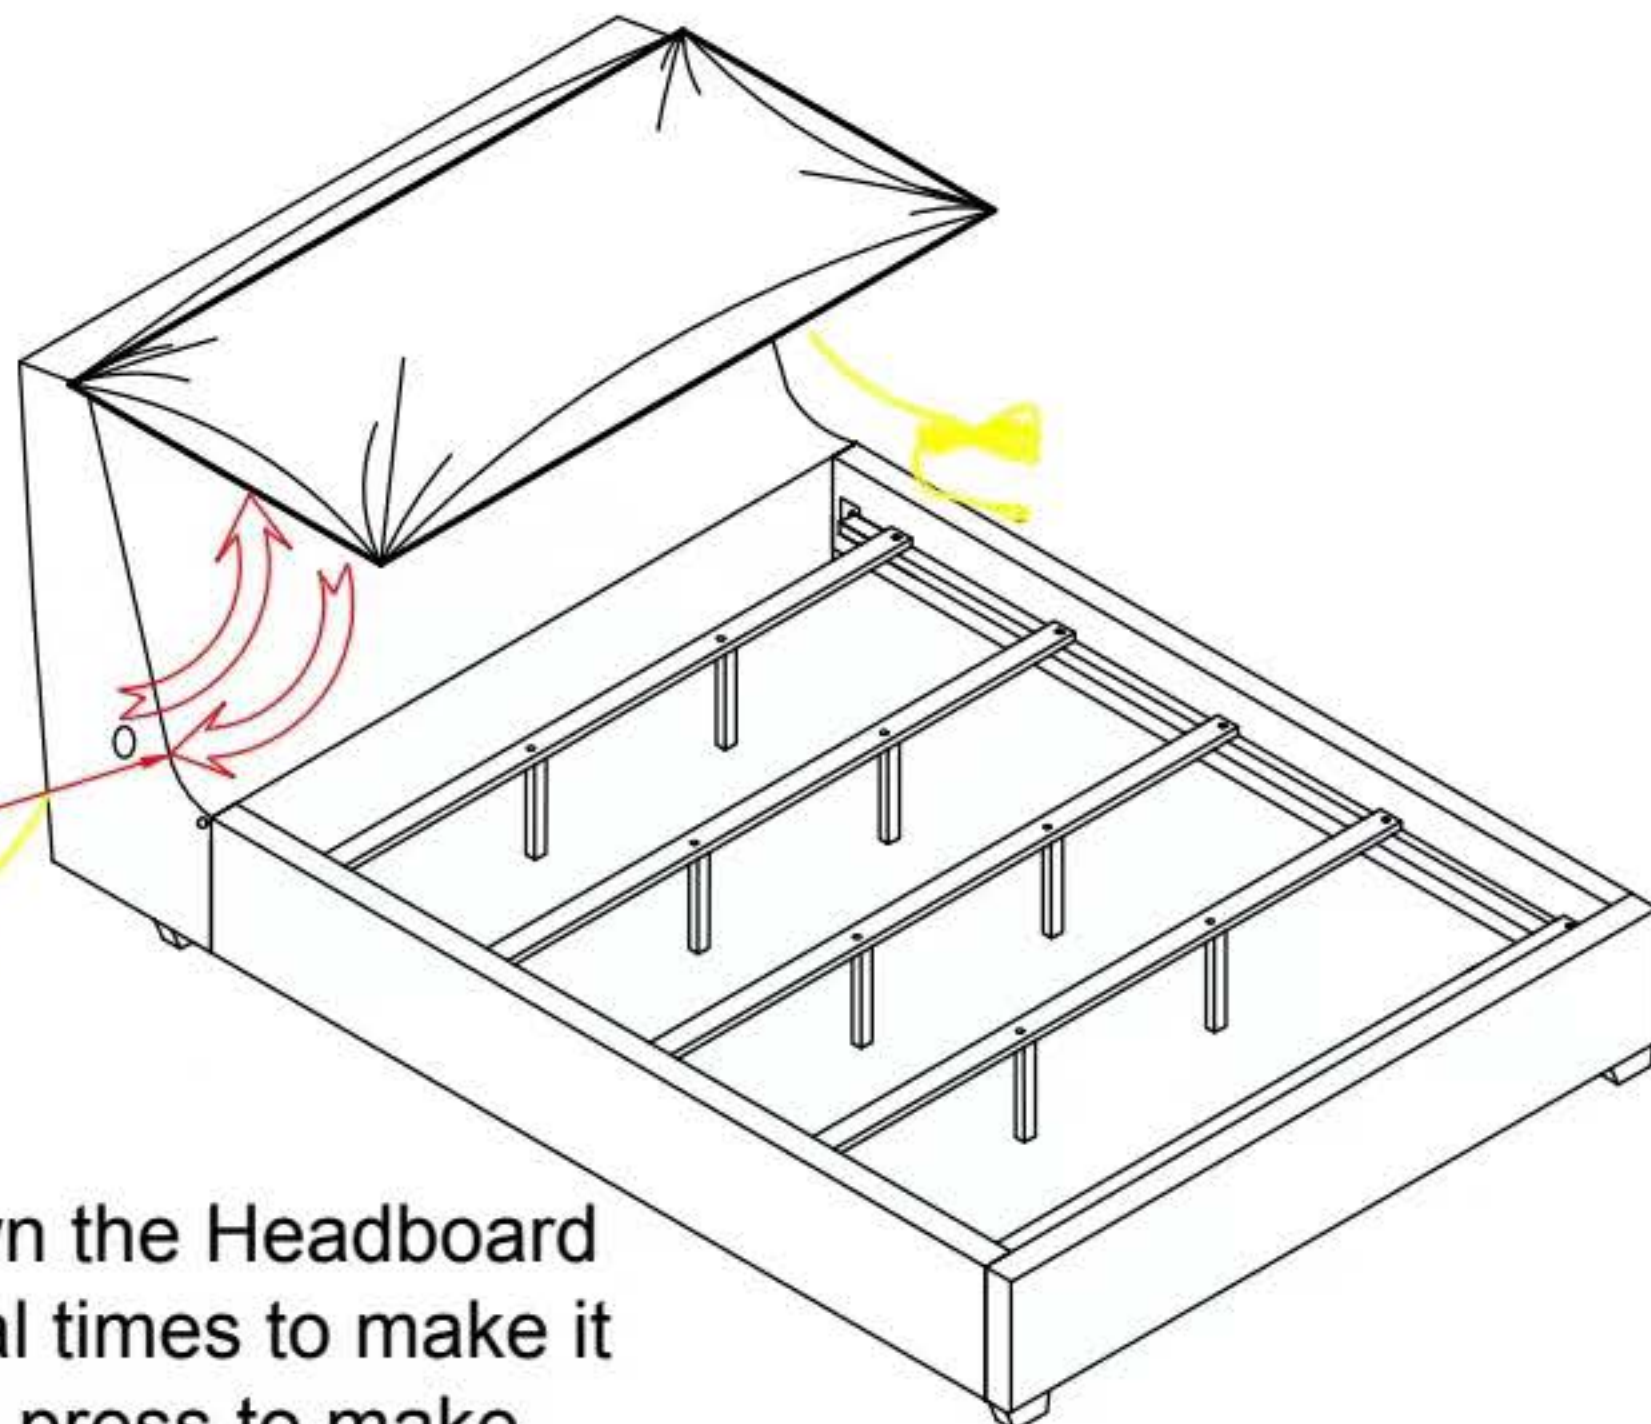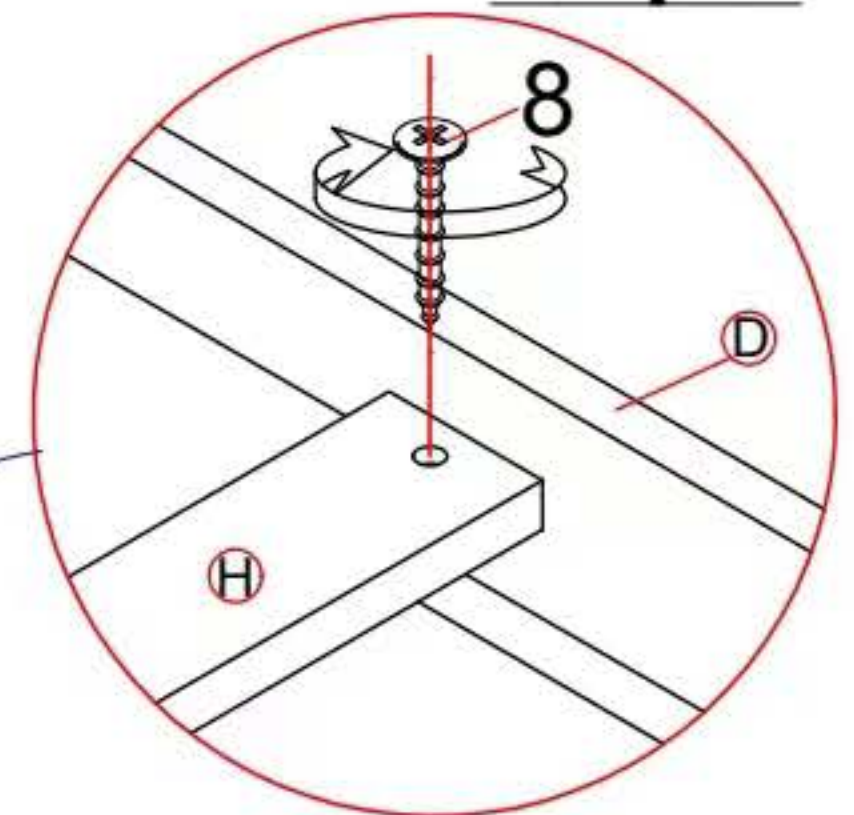

Shake up and down the Headboard Cushion for several times to make it sag naturally, then press to make the Velcro on the back fit properly