

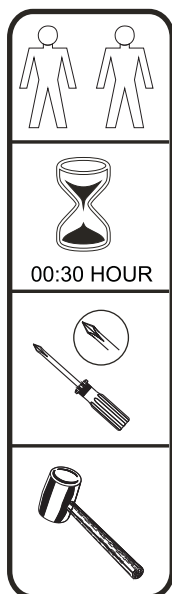





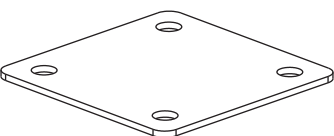

FULL CONVERSION KIT

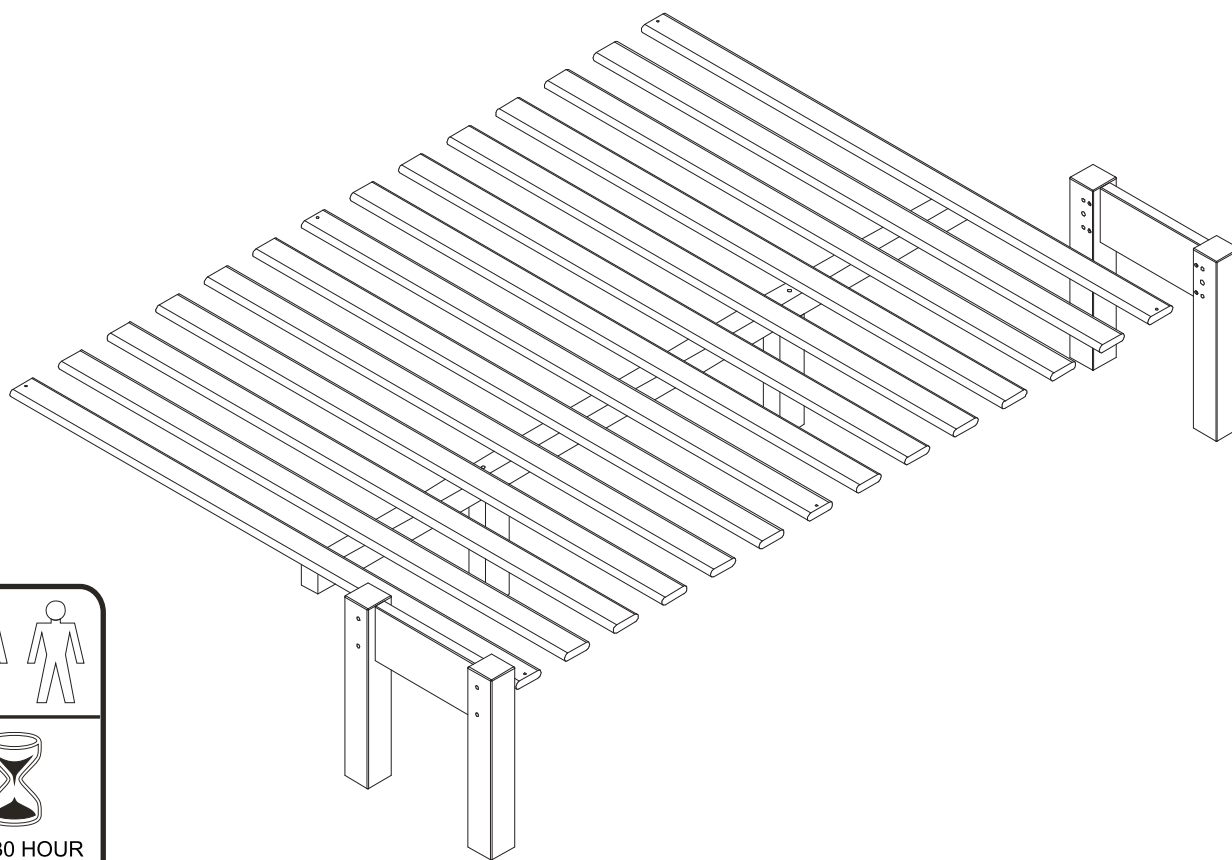

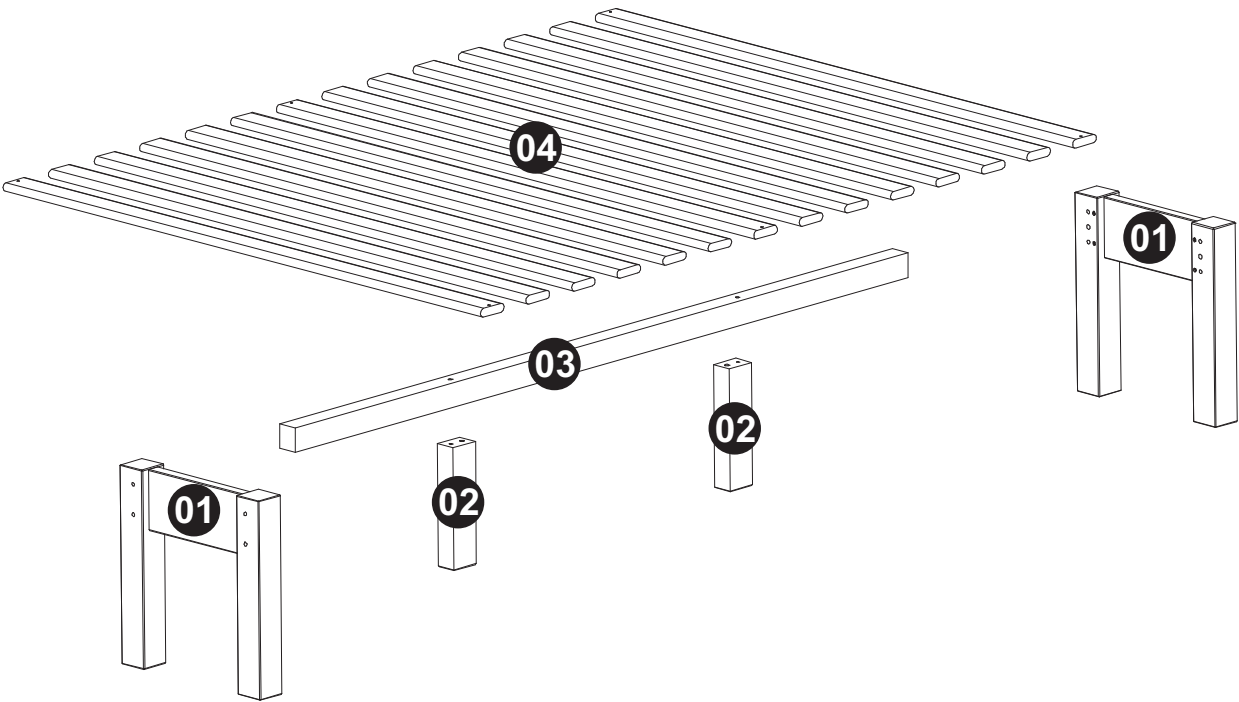



SIZE OF MATTRESS:


THE LOWER BED IS DESIGNED TO USE A MATTRESS (74" TO 75") LONG AND (52-1/2" TO 53-1/2") IN WIDTH AND THE ENCLOSED SLAT SYSTEM.




A	 17mm Ø7 x 80mm	02
B		16
C	 Ø3/16 x 60mm	08
D		02
E	 Ø4 x 30mm	03




F	 Ø10 x 40mm	02
G		02
H	 17mm Ø1/4 x 110mm	1/4
I		

Step 01

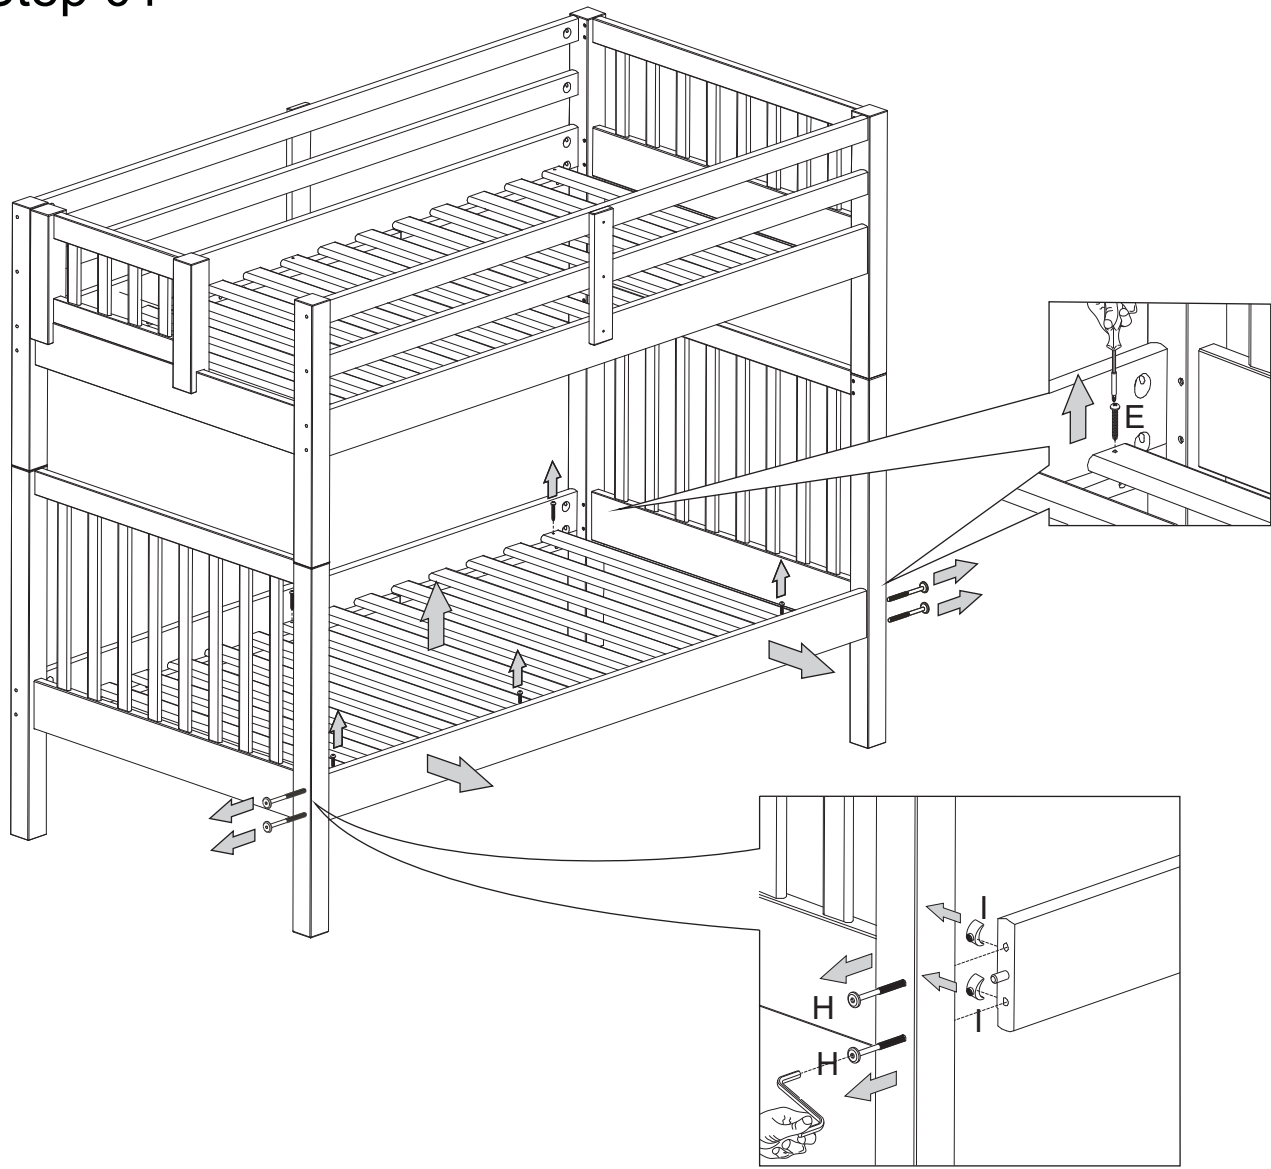





Step 02

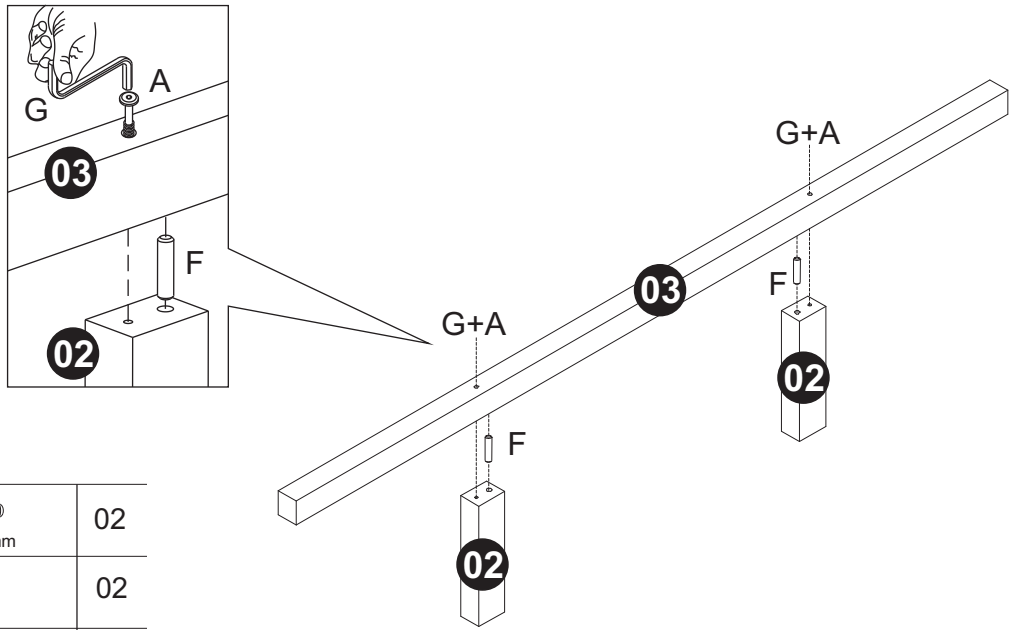




A		02
F		02
G		01

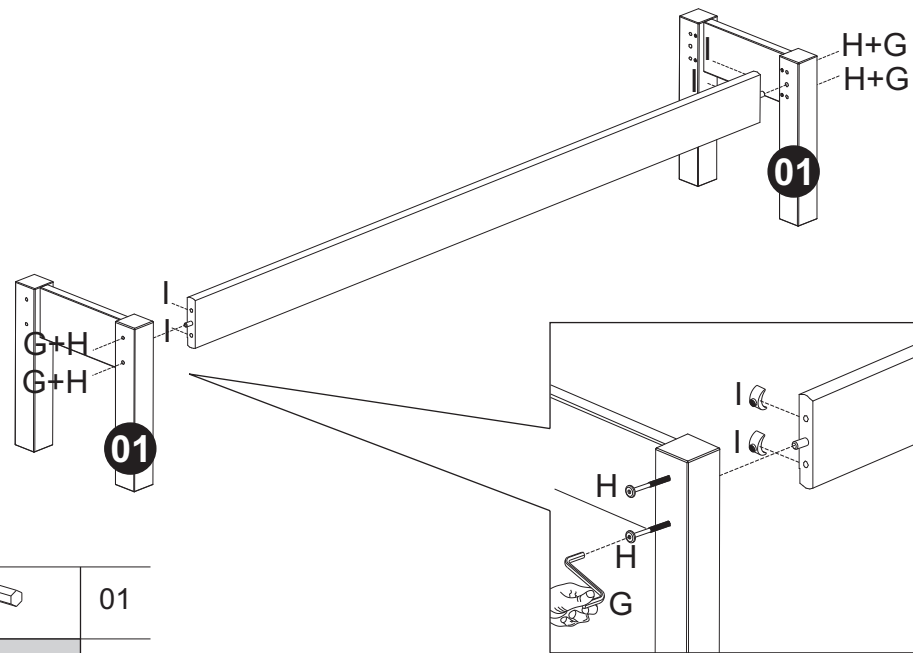

Step 03





G		01
H	 17mm Ø1/4 x 110mm	
I	 1/4	

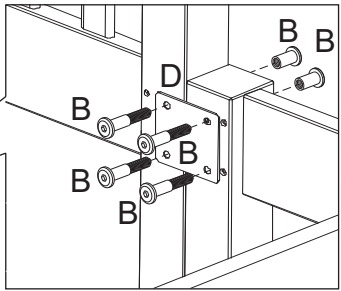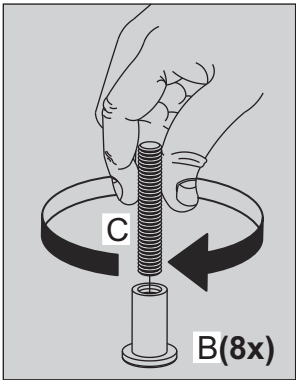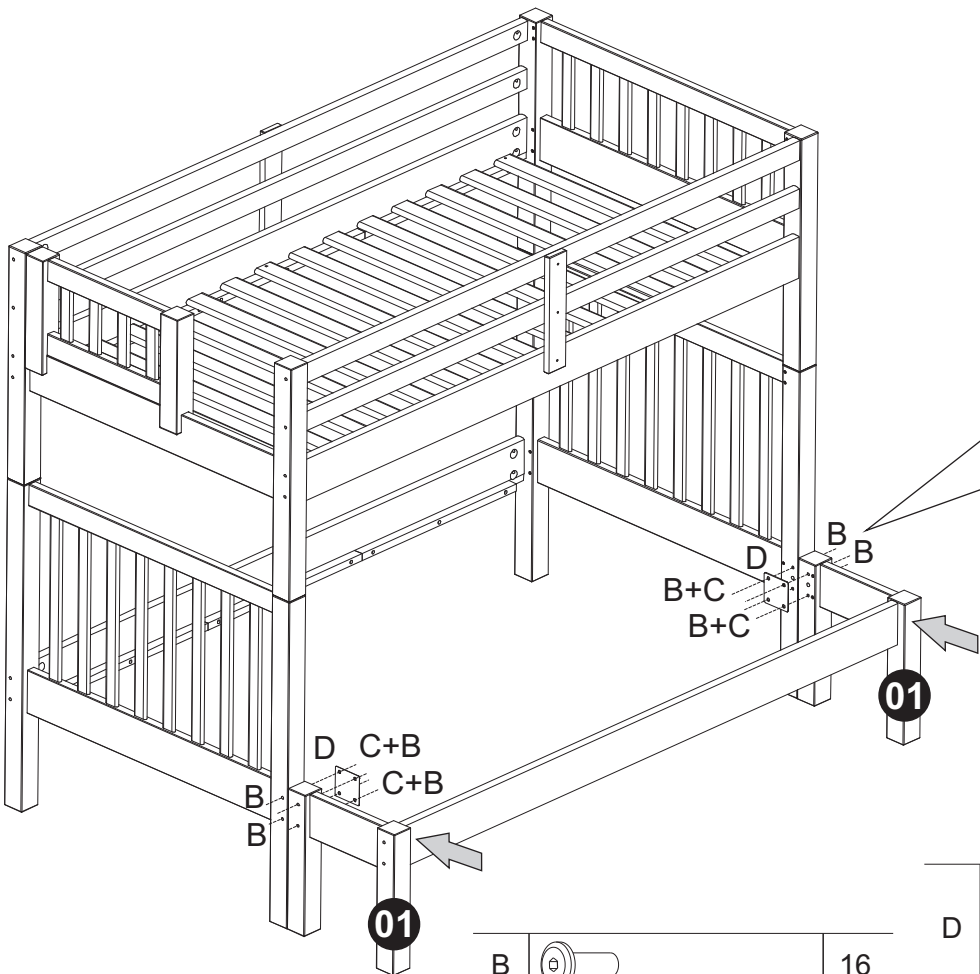
Step 04




B		16
C	 Ø3/16 x 60mm	08



D		02
G		01

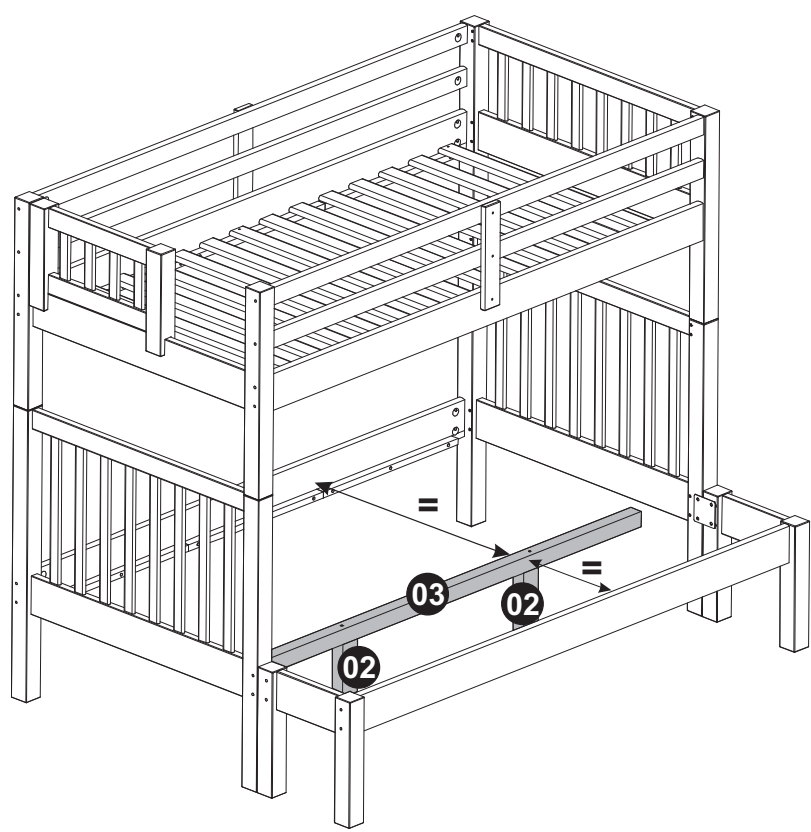Step 05

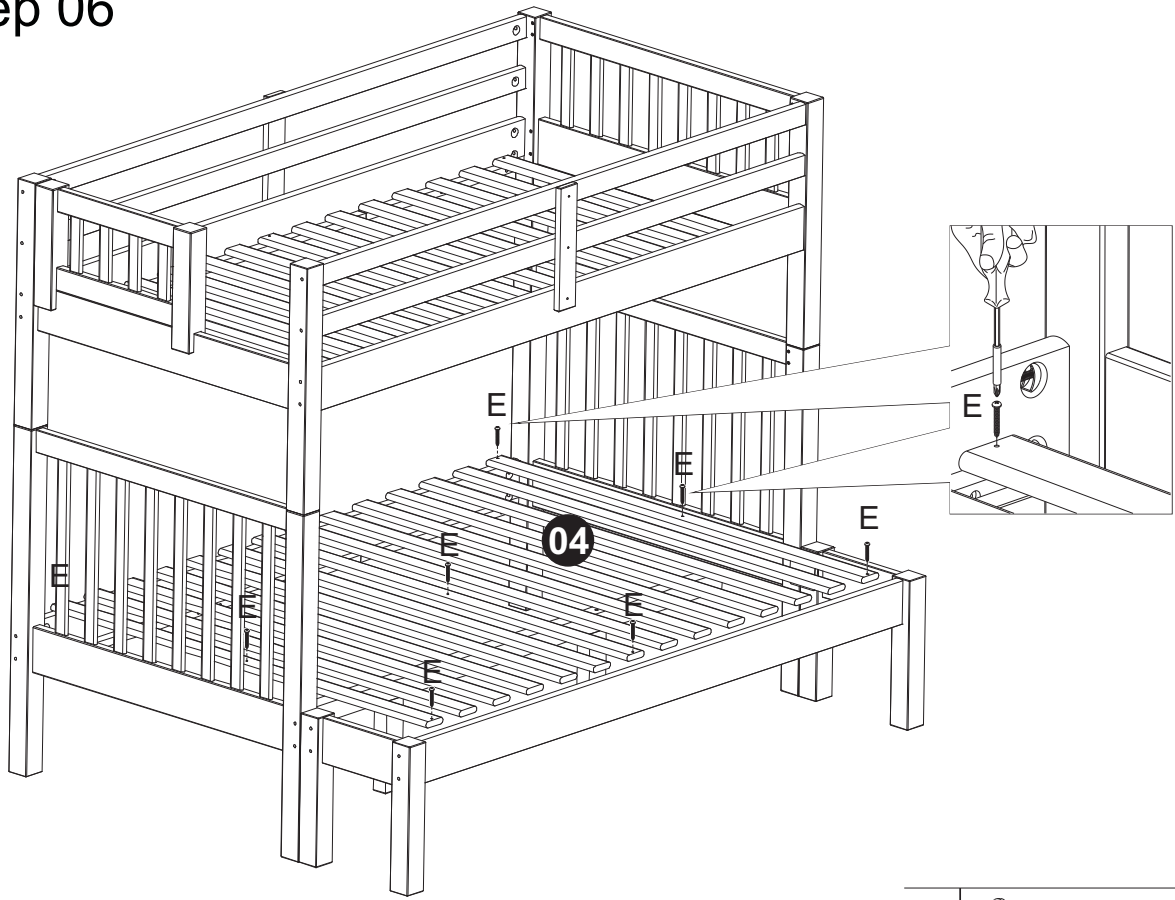

Step 06



E	 Ø4 x 30mm	03
E	 Ø4 x 30mm	



WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.