

# STAIRWAY BUNK BED ASSEMBLY

STEP #1 (SEE #01, 02, 03 ILLUSTRATION)

INSERT DOWEL IN ENDS OF SIDE RAILS, INSERT INTO POST. ATTACH THE TWO SIDE RAILS TO THE HEADBOARD, USING THE BOLTS AND CRESCENT NUTS. TIGHTEN WITH ALLEN WRENCH. ASSEMBLE THE OTHER HEADBOARD TO THE OTHER END OF SIDE RAILS USING THE LONG BOLTS AND CRESCENT NUTS, TIGHTEN WITH ALLEN WRENCH.

# STEP #2 (SEE #03, 04 ILLUSTRATION)

FOR UPPER BED INSTALL GUARD RAILS USING THE BOLTS AND CRESCENT NUTS. INSTALL A GUARD RAIL ON EACH SIDE OF THE UPPER BED. INSERT DOWELS OF SIDE RAILS INTO UPPER BUNK, ATTACH USING BOLTS AND CRESCENT NUTS. TIGHTEN ALL BOLTS FOR SIDE RAILS AND GUARD RAILS. FOR UPPER BED INSTALL THE TWO CENTER GUARD RAIL BOARDS (PART 06) WITH PHILLIPS SCREWS AT THE CENTER POINT OF THE GUARD RAILS.

#### STEP #3 (SEE #05 ILLUSTRATION)

DECIDE WHICH SIDE OF THE BUNK BED WILL GET THE STAIRWAY AND PLACE THE OPEN SIDE OF THE UPPER SECTION ON THAT SIDE. INSERT THE FOUR BIG DOWELS INTO THE FOUR HOLES IN THE HEADBOARD POSTS. USING TWO PEOPLE, LIFT THE UPPER BED SECTION AND PLACE IT ON TOP OF THE HEADBOARD SECTION.

# STEP #4 (SEE #06 ILLUSTRATION)

LAY OUT THE SLAT KIT ON TOP OF THE CLEATS ON BOTH SIDE RAILS, WITH CLOTH SIDE DOWN. PLACE BOTH END SLATS AT THE BEGINNING OF THE CLEAT. SPACE REMAINING SLATS EVENLY WITH NO MORE THAN 3.25" SPACE AT ANY POINT.
ATTACH THE FIRST, LAST AND MIDDLE SLATS WITH THREE SCREWS ON EACH SIDE. REPEAT ABOVE STEP FOR THE OTHER BED.

### STEP #5 (SEE #07 ILLUSTRATION)

LOCATE THE SMALL GUARD RAIL TO THE FRONT OF THE BED. BE SURE IT TOUCHES THE FRONT POST. THE SIDE OF THE SMALL GUARD RAIL WITH THE SCREWS GOES ON THE INSIDE SURFACE OF THE BED. SECURE WITH FOUR PHILLIPS SCREWS.

# STEP #6 (SEE #08 ILLUSTRATION)

FOLLOW THE INSTRUCTIONS IN THE STAIRWAY UNIT ASSEMBLY INSTRUCTIONS TO ATTACH BUNK TO STAIRWAY WITH THE TWO L BRACKETS PROVIDED WITH THE STAIRWAY UNIT HARDWARE.

#### **SIZE OF MATTRESS**

THIS BED IS DESIGNED TO USE A MATTRESS (74" TO 75") LONG, AND (37-1/2" TO 38-1/2") IN WIDTH AND THE ENCLOSED SLAT KIT SYSTEM. THE TOTAL THICKNESS OF MATTRESS AND FOUNDATION MUST NOT EXCEED 9 1/8". NOTE: THERE MUST BE AT LEAST 5" FROM MATTRESS SLEEPING SURFACE TO TOP EDGE OF GUARDRAIL.

#### REPLACEMENT PARTS

REPLACEMENT PARTS, INCLUDING ADDITIONAL GUARDRAILS, MAY BE OBTAINED FROM BOB'S DISCOUNT FURNITURE.

# **SAFETY WARNINGS**

- 1. FOLLOW THE INFORMATION ON THE WARNINGS APPEARING ON THE UPPER BUNK END STRUCTURE AND ON THE CARTON. DO NOT REMOVE WARNING LABEL FROM BED.
- 2. ALWAYS USE THE RECOMMENDED SIZE MATTRESS OR MATTRESS SUPPORT, OR BOTH, TO HELP PREVENT THE LIKELIHOOD OF ENTRAPMENT OR FALLS.
- 3. SURFACE OF MATTRESS MUST BE AT LEAST 5 INCHES BELLOW THE UPPER EDGE OF GUARDRAILS.
- 4. DO NOT ALLOW CHILDREN UNDER 6 YEARS OF AGE TO USE THE UPPER BUNK.
- 5. PERIODICALLY CHECK AND ENSURE THAT THE GUARD RAIL, LADDER, AND OTHER COMPONENTS ARE IN THEIR PROPER POSITION, FREE FROM DAMAGE, AND THAT ALL CONNECTORS ARE TIGHT.
- 6. DO NOT ALLOW HORSEPLAY ON OR UNDER THE BED AND PROHIBIT JUMPING ON THE BED.
- 7. ALWAYS USE THE LADDER FOR ENTERING OR LEAVING THE UPPER BUNK.
- 8. DO NOT USE SUBSTITUTE PARTS. CONTACT MANUFACTURER OR DEALER FOR REPLACEMENT PARTS.
- 9. USE OF A NIGHT LIGHT MAY PROVIDE ADDED SAFETY PRECAUTION FOR A CHILD USING THE UPPER BUNK.


  10. ALWAYS USE GUARD RAILS ON BOTH LONG SIDES OF THE UPPER BUNK.
- 11. IF THE BUNK BED WILL BE PLACED NEXT TO A WALL, THE GUARD RAIL THAT RUNS THE FULL LENGTH OF THE BED SHOULD BE PLACED AGAINST THE WALL TO PREVENT ENTRAPMENT BETWEEN THE BED AND THE WALL.
- 12. PROHIBIT MORE THAN ONE PERSON ON THE UPPER BUNK.
- 13. THE USE OF WATER OR SLEEP FLOTATION MATTRESSES IS PROHIBITED.
- 14. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.


STRANGULATION HAZARD – NEVER ATTACH OR HANG ITEMS TO ANY PART OF THE BUNK BED THAT ARE NOT DESIGNED FOR USE WITH THE BED: FOR EXAMPLE, BUT NOT LIMITED TO HOOKS, BELTS AND JUMP ROPES.

BOB'S DISCOUNT FURNITURE 428 TOLLAND TURNPIKE MANCHESTER, CT 06042



# **STAIRWAY BUNK**

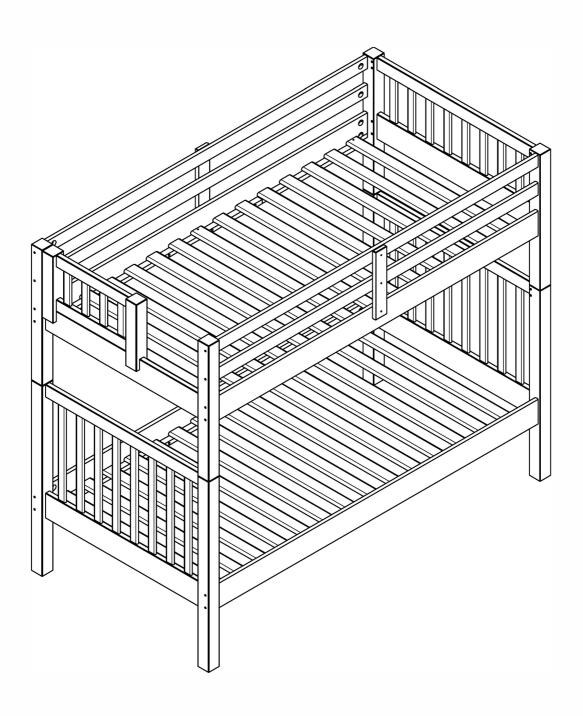

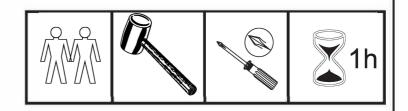



# **HARDWARE**



A - 10x50 Wood Dowel Qty 24



B - 1/4x110 Screw Qty 24



C - Qty 24




D - Wood Dowel Qty 04




E - Screwdriver Z Qty 01





F - 4x30 Screw Qty 06





G - 4x30 Screw Qty 16

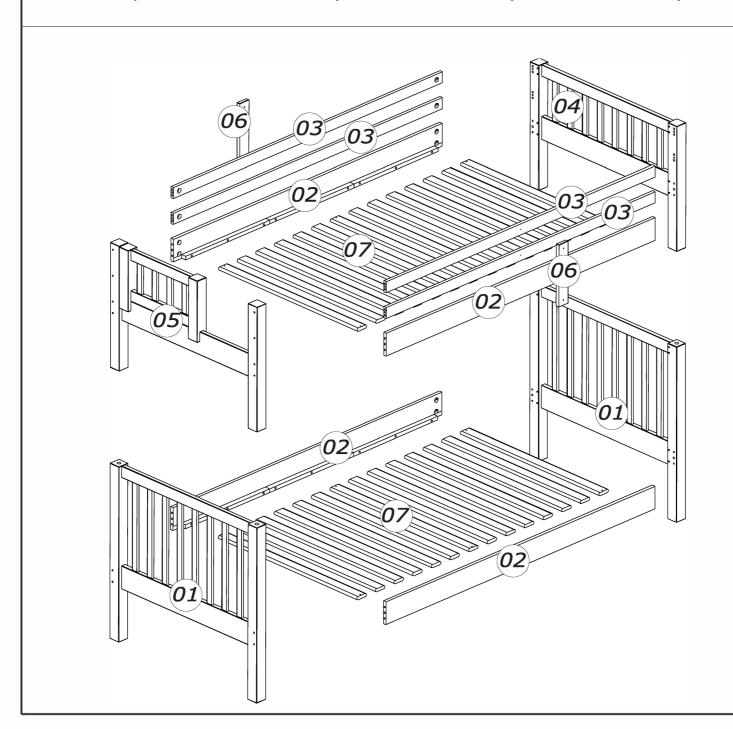


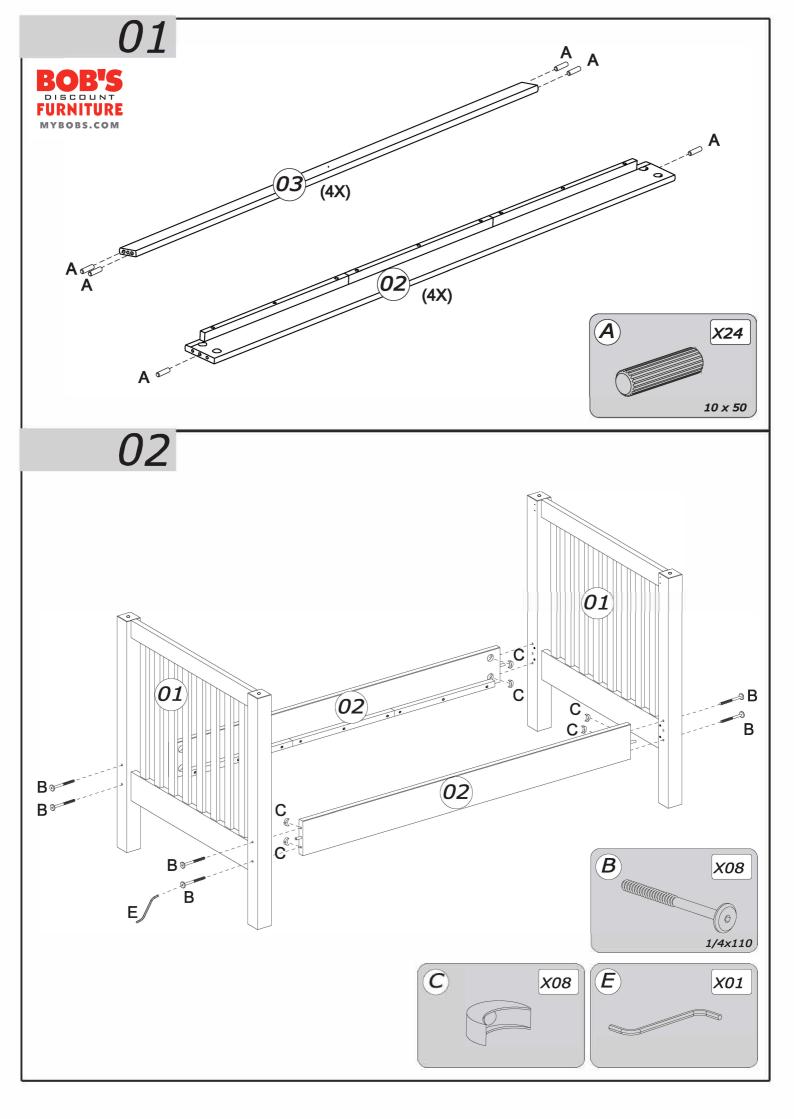

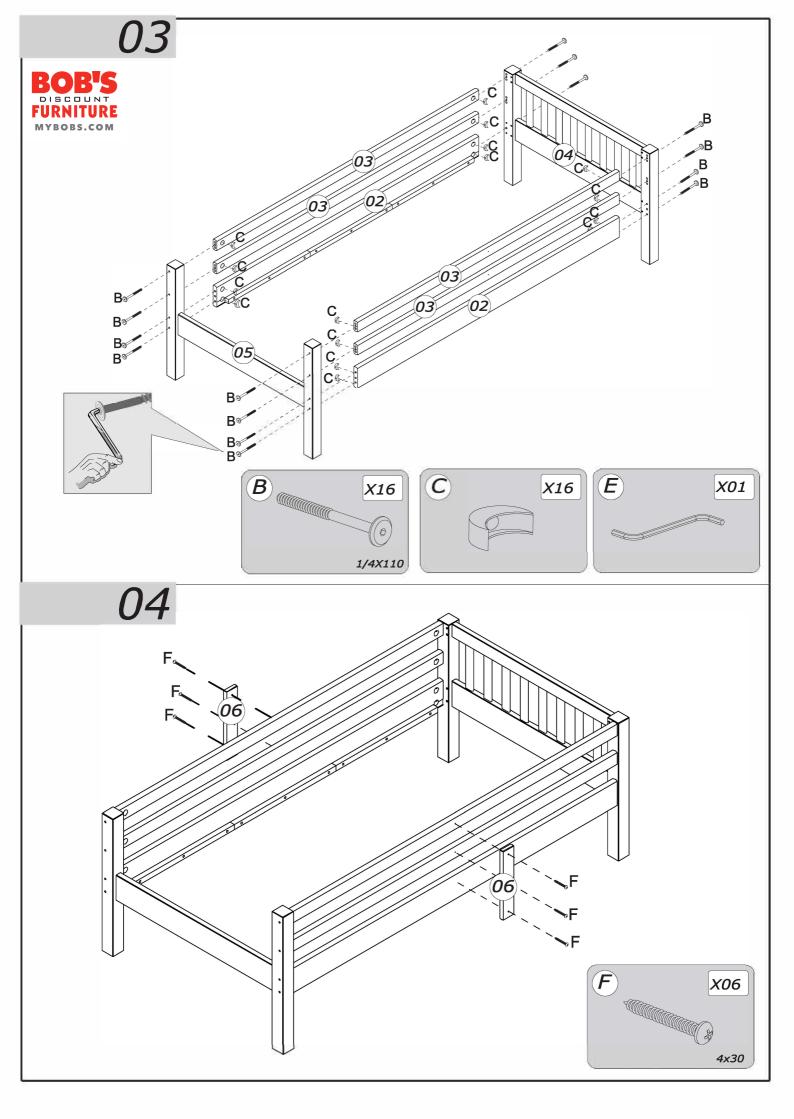

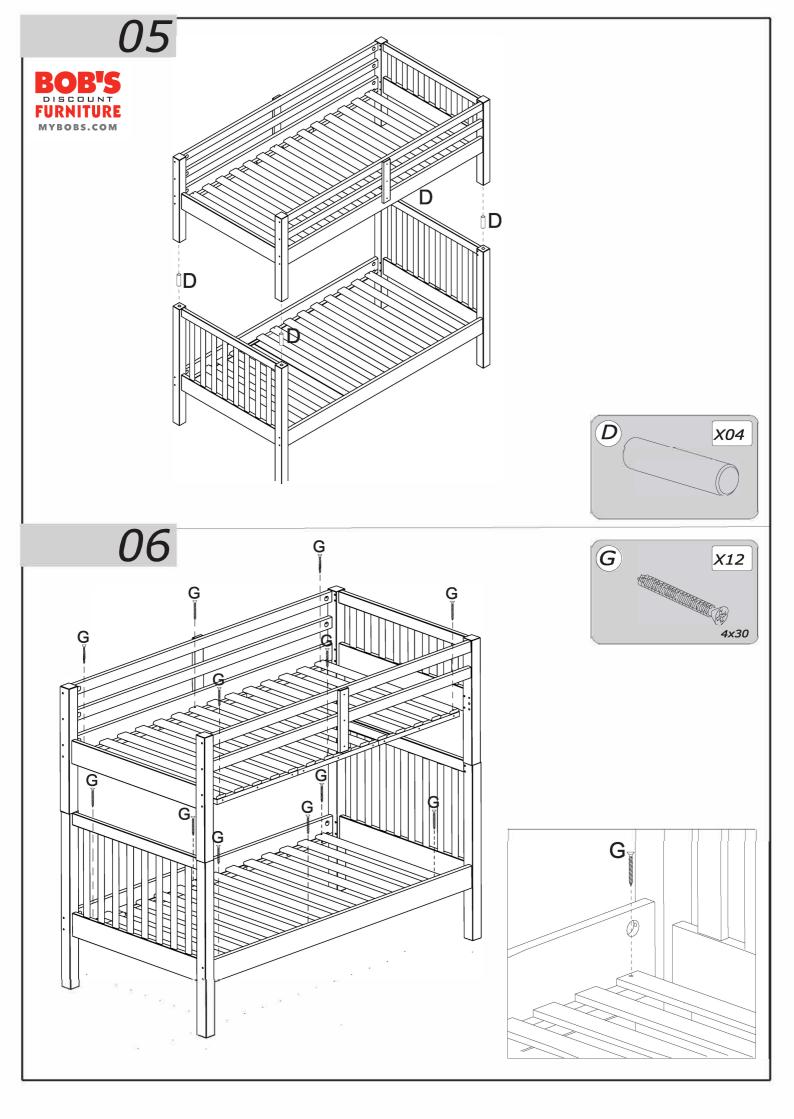

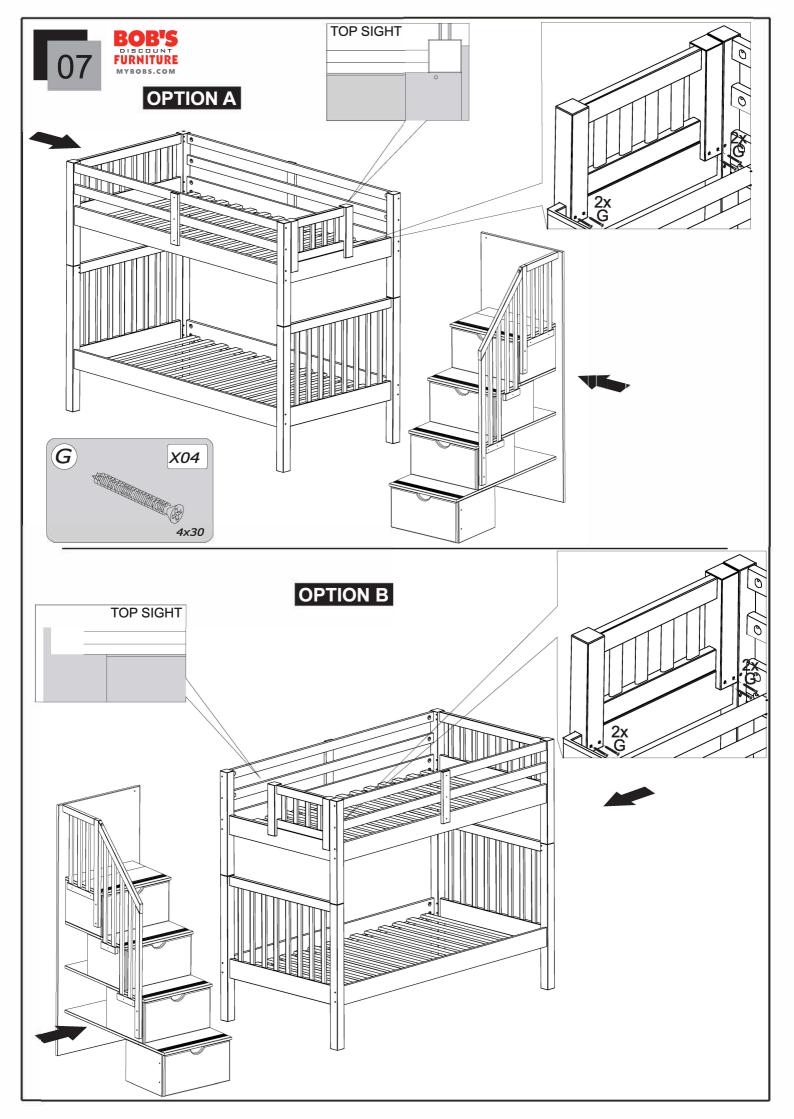

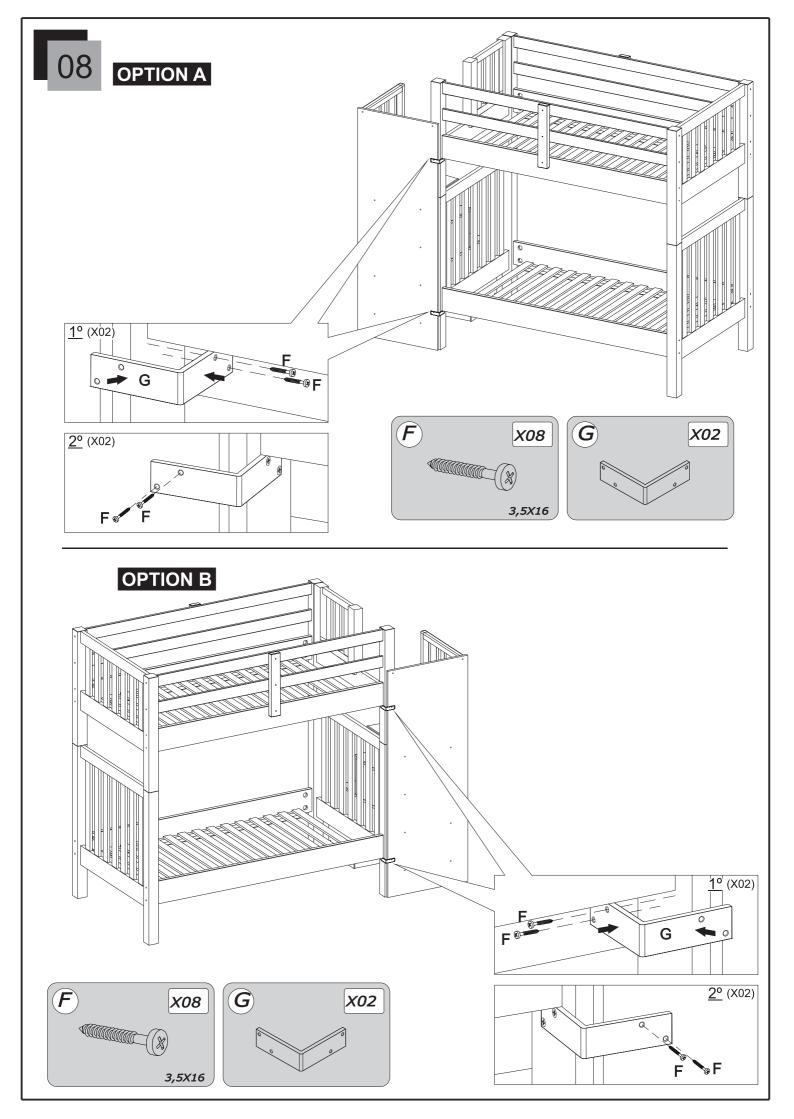



# MARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.