



ASSEMBLY INSTRUCTIONS

CHAIRSIDE TABLE W/PWR


THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.

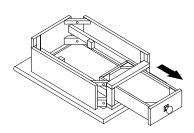

STEP 1

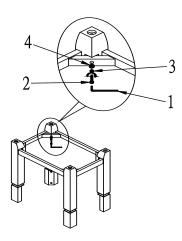

STEP 2

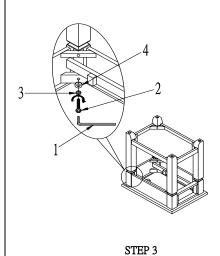

TOOLS REQUIRED (NOT PROVIDED)


PHILLIPS SCREWDRIVER



NO	DESCRIPTION	SKETCH	QTY
A	TOP		1 PC
В	BOTTOM PANEL		
С	LEG	<i>M</i>	4 PCS

HARDWARE LIST:

NO	DESCRIPTION	SKETCH	SIZE	QTY		
1	ALEEN KEY		4 x 74 x 29mm	1 pc		
2	BOLT		§ 1/4"x 15 x 50mm	8 pcs		
3	SPRING WASHER	@	§ 1/4"x § 11x 2mm T	8 pcs		
4	FLAT WASHER	0	§ 1/4"x § 18 x 2mm T	8 pcs		

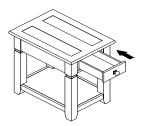

STEP 1: Place the top (A) up side down on the soft surface such as carpet and pull out the drawer.

STEP 2: Attach the legs (A) to the bottm panel (B) by using allen key (1), bolt (2), spring washer (3) and flat washer (4).

STEP 3: Attach the legs (C) to the top (A) by using allen key (1), bolt (2), spring washer (3) and flat washer (4) and attach the drawer back

Page 1 of 1 MADE IN VIETNAM

WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small
 parts and hardware that may present a choking hazard to small children.
 Bob's furniture should be assembled only by responsible adults and children
 should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as
 prescribed in these instructions to anchor furniture to wall. Proper use of the
 wall mounting hardware can significantly reduce the potential for furniture
 tip-over and crushing injuries.