



ASSEMBLY INSTRUCTIONS

GROUP NO.: 900250 PRESTON BED

DESCRIPTION: 900251 900252 5/0 UPH BED.

900261 900262 6/6 UPH BED.

900263 900264 6/0 UPH BED.

DEAR CUSTOMER,


Caution: Please read all instructions before assembly and check the carton for any parts that may have come loose during shipment. It is recommended to use two or more persons during the assembly process.

HARDWARE LIST:

No.	Description	Sketch	Size	Quantity
1	Allen Bolt		$\varnothing 5/16"$ *1-3/4"	22 PCS
2	Spring Washer		$\varnothing 5/16"$	22 PCS
3	Flat Washer		$\varnothing 5/16"$ x 19mm	22 PCS
4	Allen Key		$\varnothing 5/16"$	1 PC
5	Screw		$\varnothing 4$ x 35mm	10 PCS

PARTS LIST:

No.	Description	Sketch	Quantity
A	Headboard		1PC
B	H/B side panel (L & R)		2 PCS
C	Cross Bar		1 PC
D	Bed Side Rail		2PCS
E	Slat		5 PCS
F	Support Leg		10 PCS
G	Footboard		1 PC
H	Footboard Leg		2PCS

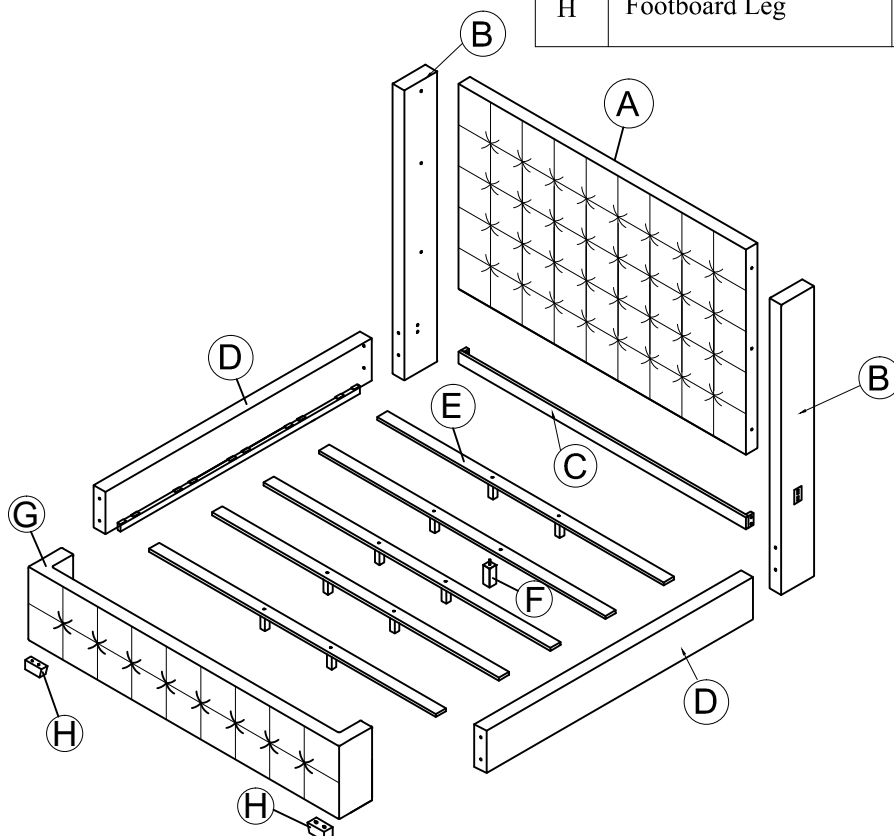



ASSEMBLY INSTRUCTIONS

GROUP NO.: 900250 PRESTON BED

DESCRIPTION: 900251 900252 5/0 UPH BED.


900261 900262 6/6 UPH BED.

900263 900264 6/0 UPH BED.

DEAR CUSTOMER,

Caution: Please read all instructions before assembly and check the carton for any parts that may have come loose during shipment. It is recommended to use two or more persons during the assembly process.


Step 1:

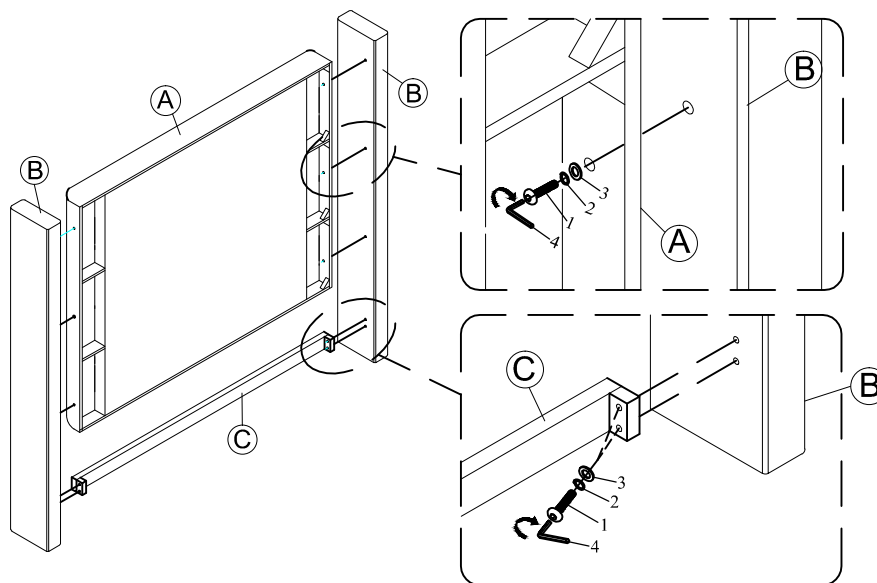

Step 1: Attach H/B side panel (B) to Headboard (A) by using Allen Bolt (1), Spring Washer (2), Flat Washer (3) and Allen Key (4).

Attach Cross Bar (C) to the H/B side panel (B) by using Allen Bolt (1), Spring Washer (2), Flat Washer (3) and Allen Key (4).

Step 2:

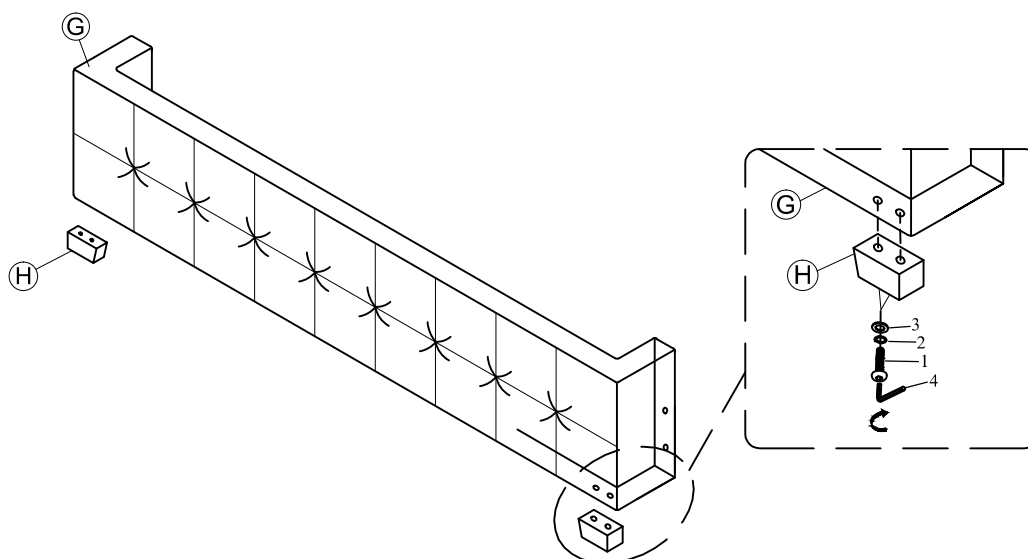

Step 2: Attach Footboard Leg (H) to Footboard (G) by using Allen Bolt (1), Spring Washer (2), Flat Washer (3) and Allen Key (4).



ASSEMBLY INSTRUCTIONS

GROUP NO.: 900250 PRESTON BED

DESCRIPTION: 900251 900252 5/0 UPH BED.


900261 900262 6/6 UPH BED.

900263 900264 6/0 UPH BED.

DEAR CUSTOMER,


Caution: Please read all instructions before assembly and check the carton for any parts that may have come loose during shipment. It is recommended to use two or more persons during the assembly process.

Step 3:

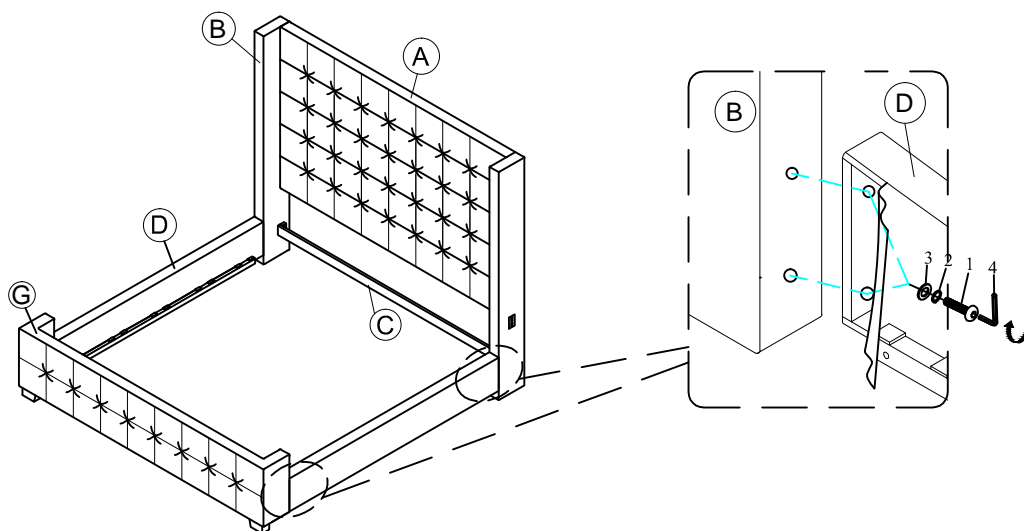


Step 3: Open the black cover, attach Bed side rail (D) to Footboard (G) and H/B side panel (B) by using Allen Bolt (1), Spring Washer (2), Flat Washer (3) and Allen Key (4).

Step 4:

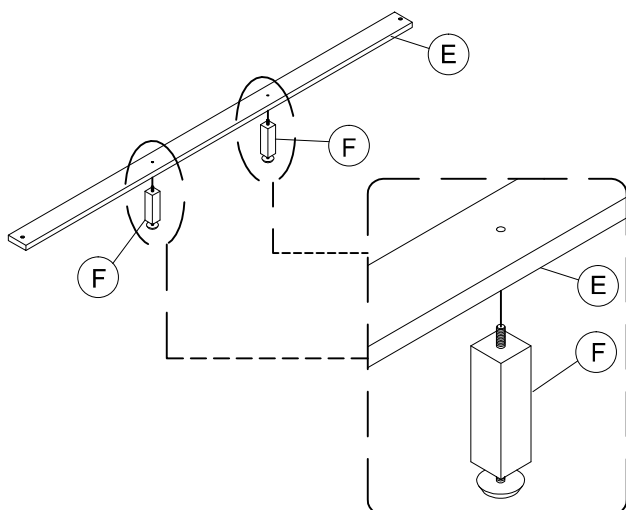

Step 4: Attach Support Legs (F) to Slat (E).

Step 5:

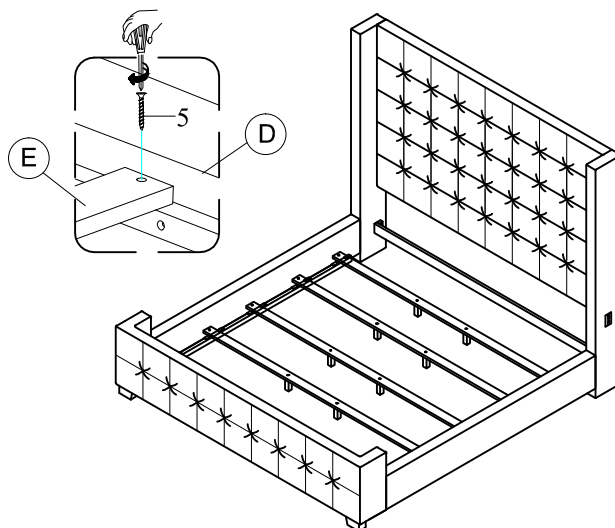

Step 5: Attach Slat (E) to Bed side rail (D) by using Screw (5) and Screw driver (not include).