

Assembly Instructions for / Instruction Dassaemblage pour QUEEN HB / GRAND LIT QUEEN FB - 4 SLATS / QUEEN PIED DE LIT / 4 LATTES QUEEN & KING SIDE RAILS / GRAND LONGERON / TRES.GRAND LONGERON



Caution : Please read instruction thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten the screw or bolts.
4. Please put all parts on a none-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiency.

Attention: Veuillez lire attentivement les instructions avant de déballer les pièces d'assemblage. Les pointes pointues et décontractées peuvent causer des blessures, donc pour votre protection, retirez les agrafes exposées utilisées dans l'emballage.



1. Nous vous recommandons d'assembler ce produit avec l'aide d'une autre personne; cela fera faciliter l'assemblage et aidera à éliminer les dommages causés au produit ou blesser les personnes pendant l'assemblage.
2. Assurez-vous de vérifier attentivement tous les matériaux d'emballage pour les petites pièces qui peuvent se perdre à l'intérieur du carton pendant l'expédition.
3. Ne pas serrer la vis ou les boulons.
4. Partez toutes les pièces sur un plancher non abrasif avant l'assemblage, et suivez les étapes de montage pour assembler votre produit nouvellement acheté correctement et efficacement.

PART LIST

NO	NAME	PART	CODE	QTY
A	Headboard		-	1
B	Footboard		-	1
C	Headboard Leg (L&R)		PTM100HBLEG	2
D	Bed Slats		PTM100QBSLT	4
E	Bed Slat Support with leveler		PTM100BDSPL	4
F	Side Rail		-	2
G	Queen Headboard Bottom Stretcher		PTM100QHSTR	1


HARDWARE LIST

HARDWARE LIST				
NO	NAME	PART	CODE	QTY
1	Screw M4 x 32mm		PTM100 KBHW	12
2	JCBC M6 x 30mm			6
3	M6 Spring Washer			6
4	M6 Flat Washer			6
5	Allen Key M4			1
6	Allen Key M5			1
HARDWARE LOCATED INSIDE HEADBOARD BOX				

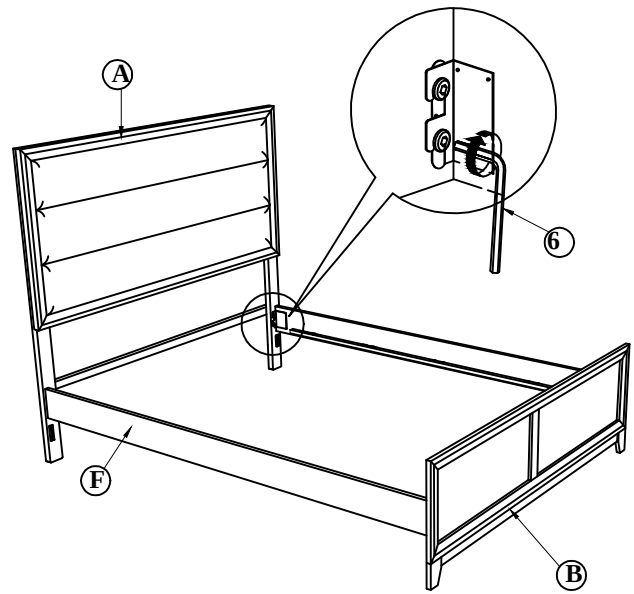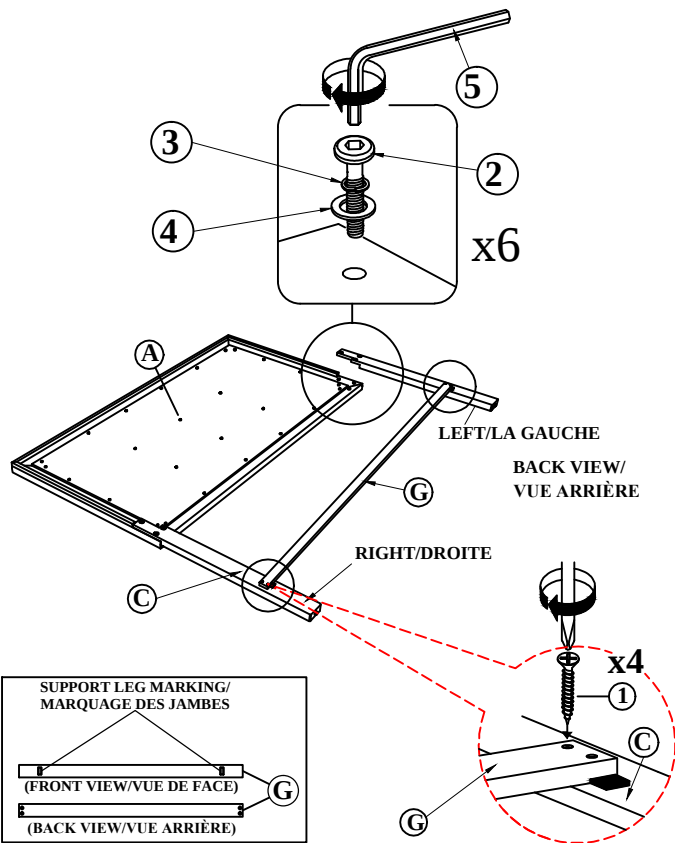

STEP 3.2 /

ÉTAPE 3.2:

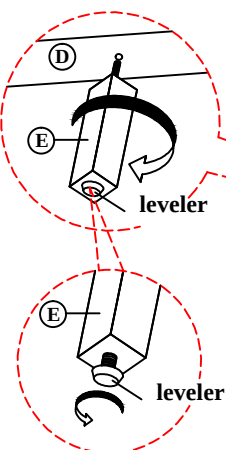


STEP 3.3 /

ÉTAPE 3.3:

Assembly completed /
Assemblage completé

STEP 3.1 /

ÉTAPE 3.1:

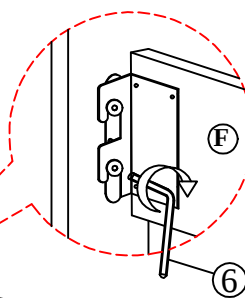

x8

STEP 3.4 /

ÉTAPE 3.4:

slat marking /
lattes marquage

Push the side rail(F) meet with wooden
slat(D) and fix the CSK screw (1)
by using the Screw Driver./
Poussez le rail latéral (F) et rencontrez le bois
latte (D) et fixer la vis CSK (1)
en utilisant le tournevis.



WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.